

**MITSUBISHI ELECTRIC**

**GT15 OPTION FUNCTION BOARD/OPTION FUNCTION BOARD WITH ADD-ON MEMORY**

**User's Manual**

**GT15-FNB  
GT15-QFNB  
GT15-QFNB16M  
GT15-QFNB32M  
GT15-QFNB48M  
GT15-MESB48M**

Thank you for purchasing the GOT1000 Series.

**Prior to use, please read both this manual and detailed manual thoroughly to fully understand the product.**

MODEL	GT15-FNB-U
MODEL CODE	1D7M07
IB(NA)-0800301-I(1610)MEE	

**GRAPHIC OPERATION TERMINAL**

**GOT1000**

**SAFETY PRECAUTIONS**

(Always read these precautions before using this equipment.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly.

The precautions given in this manual are concerned with this product.

In this manual, the safety precautions are ranked as "DANGER" and "CAUTION".

**DANGER**

Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.

**CAUTION**

Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Note that the CAUTION level may lead to a serious accident according to the circumstances.

Always follow the precautions of both levels because they are important to personal safety.

Please save this manual to make it accessible when required and always forward it to the end user.

**[INSTALLATION PRECAUTIONS]**

**DANGER**

- Before mounting or dismounting this unit to or from the GOT, always shut off GOT power externally in all phases. Not doing so can cause a unit failure or malfunction.
- When installing this unit, wear an earth band, etc. to avoid the static electricity which can cause a unit destruction.

**CAUTION**

- Use this module in the environment that satisfies the general specifications described in the User's Manual for the GOT used. Not doing so can cause an electric shock, fire, malfunction or product damage or deterioration.
- When installing this unit to the GOT, fit it to the option function board interface of the GOT until it clicks. The installation failure can cause a malfunction due to the poor connection.

**[STARTUP AND MAINTENANCE PRECAUTIONS]**

**CAUTION**

- Do not disassemble or modify any unit. This will cause failure, malfunction, injuries, or fire.
- Do not touch the conductive areas and electronic parts of this unit directly. Doing so can cause a unit malfunction or failure.
- Always make sure to touch the grounded metal to discharge the electricity charged in the body, etc., before touching the unit. Failure to do so may cause a failure or malfunctions of the unit.

**[DISPOSAL PRECAUTIONS]**

**CAUTION**

- Dispose of this product as industrial waste.

**[TRANSPORTATION PRECAUTIONS]**

**CAUTION**

- Make sure to transport the GOT main unit and/or relevant unit(s) in the manner they will not be exposed to the impact exceeding the impact resistance described in the general specifications of the User's Manual for the GOT used, as they are precision devices. Failure to do so may cause the unit to fail. Check if the unit operates correctly after transportation.

**Manual**

The following shows manual relevant to this product.

**Detailed Manual**

Manual name	Manual number (Model code)
GT15 User's Manual (Sold separately)	SH-080528ENG (1D7M23)

**Relevant Manuals**

For relevant manuals, refer to the PDF manuals stored in the DVD-ROM for the drawing software used.

© 2004 MITSUBISHI ELECTRIC CORPORATION

**Compliance with the EMC and Low Voltage Directives**

To configure a system meeting the requirements of the EMC and Low Voltage Directives when incorporating the Mitsubishi GOT (EMC and Low Voltage Directives compliant) into other machinery or equipment, refer to "EMC AND LOW VOLTAGE DIRECTIVES" of the General Description included with the GOT used. The CE mark, indicating compliance with the EMC and Low Voltage Directives, is printed on the rating plate of the GOT.

**Compliance with the new China RoHS directive**

GOT 相关的基于“电器电子产品有害物质限制使用管理办法”要求的表示方法



Note: This symbol mark is for China only.

含有有害6物质的名称、含有量、含有部件  
本产品中所含有的有害6物质的名称、含有量、含有部件如下表所示。  
产品中有害物质的名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电路板组件	×	○	○	○	○	○

本表格依据 SJ/T11364 的规定编制。  
○：表示该有害物质在该部件所有均质材料中的含量均在 GB/T26572 规定的限量要求以下。  
×：表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T26572 规定的限量要求。

**Packing List**


The following items are included.

Model	Product	Quantity
GT15-FNB, GT15-QFNB	Option function board	1
	GT15 OPTION FUNCTION BOARD/OPTION FUNCTION BOARD WITH ADD-ON MEMORY User's Manual (This manual)	1
GT15-QFNB16M, GT15-QFNB32M, GT15-QFNB48M, GT15-MESB48M	Option function board with add-on memory	1
	GT15 OPTION FUNCTION BOARD/OPTION FUNCTION BOARD WITH ADD-ON MEMORY User's Manual (This manual)	1

**1. OVERVIEW**

This User's Manual describes the GT15 option function board/option function board with add-on memory (hereinafter referred to as the option function board). Installation of the option function board increases functions. Refer to the User's Manual for the GOT used for the applicable GOT. Refer to GT Designer2 Version □ Screen Design Manual for the increased functions.

**3. PART NAMES AND EXTERNAL DIMENSIONS**

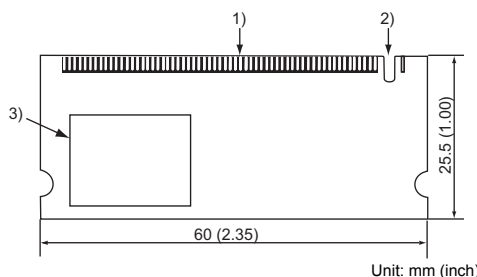


No.	Name	Description
1)	Connector	For connecting the option function board interface of the GOT
2)	Positioning crena	For positioning in the option function board installation
3)	Rating plate	—


**4. INSTALLATION PROCEDURE**

The installation procedure for the option function board is explained using the GT1575.


- Power off the GOT.
- Remove the extension unit cover on the left side of the GOT. When the extension unit is installed on the GOT, remove the installed unit.

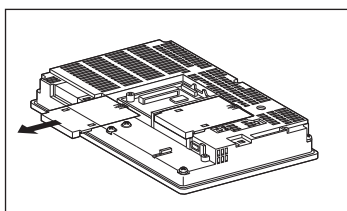

- Insert the option function board to the option function board interface to which the positioning crenas are fitted. Do not touch the board in the GOT when install the option function board.

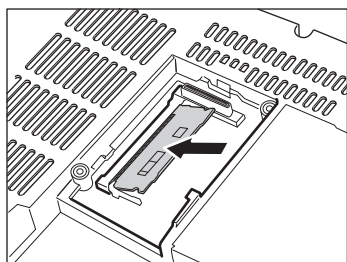

- Push down the option function board until it clicks.

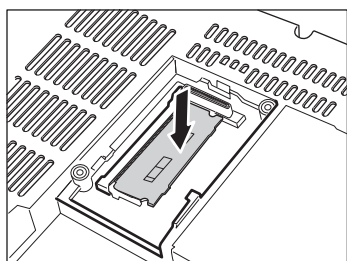

- After the installation of option function board, attach the extension unit cover. For installation of extension unit, install the extension unit.

**2. SPECIFICATIONS**

The performance specifications of the option function board are indicated below. The general specifications of the option function board are the same as those of the GOT. For the general specifications of the GOT, refer to the User's Manual for the GOT used.

(1) GT15-FNB

Item	Specification
Memory capacity	-
GOT memory capacity after installation	9MB
Function	Applicable for MELSEC-A/FX ladder monitor function

(2) GT15-QFNB, GT15-QFNB16M, GT15-QFNB32M, GT15-QFNB48M

Item	Specification			
	GT15-QFNB	GT15-QFNB16M	GT15-QFNB32M	GT15-QFNB48M
Memory capacity	-	16MB	32MB	48MB
GOT memory capacity after installation	9MB	25MB	41MB	57MB
Function	Applicable for MELSEC-Q/QnA/A/FX ladder monitor function, multi-channel function			

(3) GT15-MESB48M

Item	Specification
Memory capacity	48MB
GOT memory capacity after installation	57MB
Function	Applicable for MELSEC-Q/QnA/A/FX ladder monitor function, multichannel function, MES interface function

**Warranty**

Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; machine damage or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

**For safe use**

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
- Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi.
- This product has been manufactured under strict quality control. However, when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.

Country/Region	Sales office/Tel
USA	Mitsubishi Electric Automation, Inc. 500 Corporate Woods Parkway, Vernon Hills, IL 60061, U.S.A. Tel: +1-847-478-2100
Brazil	Mitsubishi Electric do Brasil Comercio e Servicos Ltda. Rua Jussara, 1750- Bloco B Anexo, Jardim Santa Cecilia, CEP 06465-070, Barueri - SP, Brazil Tel: +55-11-4889-3000
Mexico	Mitsubishi Electric Automation, Inc. Mexico Branch Mariano Escobedo #89, Col. Zona Industrial, Tlalnepantla Edo. Mexico, C.P.54030 Tel: +52-55-3067-7511
Germany	Mitsubishi Electric Europe B.V. German Branch Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany Tel: +49-2102-486-0
UK	Mitsubishi Electric Europe B.V. UK Branch Travellers Lane, Hatfield, Hertfordshire, AL10 8XB, U.K. Tel: +44-1707-28-6780
Italy	Mitsubishi Electric Europe B.V. Italian Branch Centro Direzionale Colleoni - Palazzo Sirio, Viale Colleoni 7, 20864 Agrate Brianza (Milano), Italy Tel: +39-039-60531
Spain	Mitsubishi Electric Europe B.V. Spanish Branch Carretera de Rubi 76-80-Adpo.420, 08190 Sant Cugat del Valles (Barcelona), Spain Tel: +34-935-65-1351
France	Mitsubishi Electric Europe B.V. French Branch 25, Boulevard des Bouvelts, 92741 Nanterre Cedex, France Tel: +33-1-55-68-55-48
Czech	Mitsubishi Electric Europe B.V. Czech Branch Avenir Business Park, Radlicka 751/1136, 158 00 Praha 5, Czech Republic Tel: +420-251-651-470
Turkey	Mitsubishi Electric Turkey A.S. Umraniye Branch Serfai Mahallesi Nispetiye Sokak No:5, TR-34775 Umraniye / Istanbul, Turkey Tel: +90-216-528-9990
Poland	Mitsubishi Electric Europe B.V. Polish Branch ul. Krakowska 50, 32-083 Balice, Poland Tel: +48-12-347-65-00
Russia	Mitsubishi Electric (Russia) LLC St. Petersburg Branch Piskarevsky pr. 2, bld 2, lit "Sch", BC "Benua", office 720; RU-195027 St. Petersburg, Russia Tel: +7-812-633-3497
South Africa	Adroit Technologies 20 Waterford Office Park, 189 Wilkoppen Road, Fourways, Johannesburg, South Africa Tel: +27-11-658-8100
China	Mitsubishi Electric Automation (China) Ltd. No.1386 Hongqiao Road, Mitsubishi Electric Automation Center, Shanghai, China Tel: +86-21-2322-9030
Taiwan	SETSUYO ENTERPRISE CO., LTD. 6F, No.105, Wugong 3rd Road, Wugu District, New Taipei City 24889, Taiwan Tel: +886-2-2299-2469
Korea	Mitsubishi Electric Automation Korea Co., Ltd. 7F-9F, Gangseo Hangang Xi-tower A, 401, Yangcheon Gangseo-Gu, Seoul 07526, Korea Tel: +82-2-3660-9530
Singapore	Mitsubishi Electric Asia Pte. Ltd. 307 Alexandra Road, Mitsubishi Electric Building, Singapore 159943 Tel: +65-6473-2308
Thailand	Mitsubishi Electric Factory Automation (Thailand) Co., Ltd. 12th Floor, SIV City Building, Office Tower 1, No. 898/19 and 20 Rama 3 Road, Kwaeng Bangpoo, Khet Yannawa, Bangkok 10120, Thailand Tel: +66-2682-6522 to 31
Indonesia	PT. Mitsubishi Electric Indonesia Gedung Jaya 11th Floor, JL. MH. Thamrin No.12, Jakarta Pusat 10340, Indonesia Tel: +62-21-3192-6461
Vietnam	Mitsubishi Electric Vietnam Co., LTD. Ho Chi Minh Head Office Unit 01-04, 10th Floor, Vincom Center, 72 Le Thanh Ton Street, District 1, Ho Chi Minh City, Vietnam Tel: +84-8-3910-5945
India	Mitsubishi Electric India Pvt. Ltd. Pune Branch Emerald House, EL-3, J Block, M.I.D.C., Bhosari, Pune - 411026, Maharashtra, India Tel: +91-20-2716-2000
Australia	Mitsubishi Electric Australia Pty. Ltd. 348 Victoria Road, P.O. Box 11, Rydalmere, N.S.W. 2116, Australia Tel: +61-2-9684-7777

**MITSUBISHI ELECTRIC CORPORATION**

HEAD OFFICE: TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHYODA-KU, TOKYO 100-8310, JAPAN  
NAGOYA WORKS: 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.  
Printed in Japan, October 2016.