

# Indicates that incorrect handling may cause A CAUTION hazardous conditions, resulting in medium or

slight personal injury or physical damage.


Note that the  $\triangle$  CAUTION level may lead to a serious accident

according to the circumstances. Always follow the precautions of both levels because they are import-ant to personal safety.


Please save this manual to make it accessible when required and always forward it to the end user

#### 3. INSTALLATION PROCEDURE

If the old protective sheet is attached, remove the sheet from the lower right of the GOT, and clean the GOT surface. (Peel off the 1) sheet slowly.)

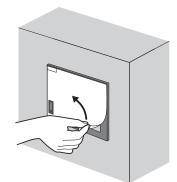

Peel the release paper off the back of the new protective sheet. 2) With the protective film left on the sheet surface, attach the sheet on the GOT so that the USB environmental protection cover hole is just on the USB environmental protection cover of the GOT.

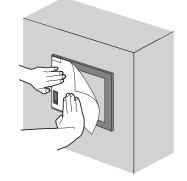

### [INSTALLATION PRECAUTIONS]

- When attaching the protective sheet onto the GOT display section, make sure to fit the protective sheet onto the section closely without leaving any air between them. Failure to do so may cause a malfunction
- After attaching the protective sheet, remove the protective film. When the user continues using the GOT with the protective film the film may not be removed.

[STARTUP AND MAINTENANCE PRECAUTIONS]

- Daily check the protective sheet with eyes. When you find extreme dirt or scratches on the surface, immediately replace it with new one Using the productive sheet of decreased visibility may cause a
- malfunction.

### [DISPOSAL PRECAUTIONS]

Dispose of this product as industrial waste.

<u>Manuals</u>
----------------

The following shows manuals relevant to this product.

Detailed Manual

Manual name	Manual number (Model code)
GT16 User's Manual (Hardware)	SH-080928ENG
(Sold separately)	(1D7MD3)

Relevant Manuals For relevant manuals, refer to the PDF manuals stored in the DVD-ROM for the drawing software used.

# <u>Referenced Standard: GB/T15969.2</u> (Requirement of Chinese standardized law)


#### Packing List

After unpacking the box, check that the following products are included.

Model	Product	Quantity
GT16-90PSCB GT16-90PSCW GT16-90PSCW GT16-90PSCB GT16-80PSCB GT16-80PSCB GT16-80PSCW GT16-70PSCB GT16-70PSCB GT16-70PSCW GT16-70PSCW GT16-60PSCB GT16-60PSCB GT16-60PSCB GT16-50PSCB GT16-50PSCB GT16-50PSCB GT16-50PSCB GT16-50PSCW GT16-50PSCW	Protective sheet	5

When attaching the protective sheet, make sure to fit the sheet 3) on the GOT without leaving any clearance between the sheet and the GOT.

Remove the protective film from the protective sheet. When the user continues using the GOT with the protective film, 4)

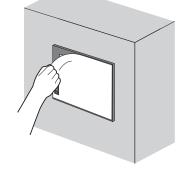

#### 1. OVERVIEW

This User's Manual describes GT16 protective sheet (hereinafter referred to as the protective sheet). The following protective sheets are available. For the applicable GOTs, refer to GT16 User's Manual (Hardware).

Product	Model	Description
	GT16-90PSCB	15" protective sheet Clear
	GT16-90PSGB	15" protective sheet Antiglare
	GT16-90PSCW *1	15" protective sheet Clear (Frame: White)
	GT16-90PSGW *1	15" protective sheet Antiglare (Frame: White)
	GT16-80PSCB	12.1" protective sheet Clear
	GT16-80PSGB	12.1" protective sheet Antiglare
Protective sheet	GT16-80PSCW *1	12.1" protective sheet Clear (Frame: White)
	GT16-80PSGW *1	12.1" protective sheet Antiglare (Frame: White)
	GT16-70PSCB	10.4" protective sheet Clear
	GT16-70PSGB	10.4" protective sheet Antiglare
	GT16-70PSCW *1	10.4" protective sheet Clear (Frame: White)
	GT16-70PSGW *1	10.4" protective sheet Antiglare (Frame: White)
	GT16-60PSCB	8.4" protective sheet Clear
	GT16-60PSGB	8.4" protective sheet Antiglare
	GT16-60PSCW *1	8.4" protective sheet Clear (Frame: White)
	GT16-60PSGW *1	8.4" protective sheet Antiglare (Frame: White)
	GT16-50PSCB	5.7" protective sheet Clear
	GT16-50PSGB	5.7" protective sheet Antiglare
	GT16-50PSCW *1	5.7" protective sheet Clear (Frame: White)
	GT16-50PSGW *1	5.7" protective sheet Antiglare (Frame: White)


1 For the white frame (other than the display section), use the model

Use the protective sheet to protect the display section surface from scratches and dirt when operating the touch keys on the GOT display section.


Select a clear protective sheet for the display intensity, or select an antiglare protective sheet for antireflection

#### 2. PART NAMES AND EXTERNAL DIMENSIONS


(1) 15"/12.1" protective sheet

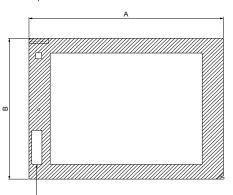

#### Hole for USB environ protection cover ental

 

#### (2) 10.4"/8.4"/5.7" protective sheet

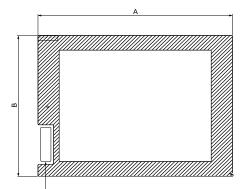

## Hole for USB environmental protection cover

Item	Α	В
10.4" Protective sheet	297 (11.7)	208 (8.2)
8.4" Protective sheet	235 (9.3)	184 (7.3)
5.7" Protective sheet	163 (6.4)	131 (5.2)
	Ur	it: mm (inch)

Warranty Mitsubishi Electric will not be held liable for damage caused by factors found not to be the cause of Mitsubishi Electric; machine damage or lost profits caused by faults in the Mitsubishi Electric products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi Electric: damages to products other than Mitsubishi Electric products; and to other duties.

#### **≜**For safe use

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life
- Before using the product for special purposes such as nuclear
- power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi Electric. This product has been manufactured under strict quality control. However, when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.

UK Italy

Spair

- Country/Region
   Sales office/Tel

   USA
   Mitsubiati Electric Automation, Inc. 500 Corporate Woods Parkway, Vernon Hills, IL 60061, U.S.A. Tel: +1-847-478-2100

   Brazil
   Mitsubiati Electric do Brazil Comercio e Servicos Ltda. Avenida Adelino Cardana, 29, 21 andar, Bethaville, Barueri SP, Brazil C2P 06401-147

   Tel: +35-11-408-3000
   Tel: +35-11-408-3000
- Tel: 455-11-4689-3000 Mitsubishi Electric Automation, Inc. Mexico Branch Mariano Escobedo #89, Col. Zona Industrial, Tlainepantia Edo. Mexico, C.P.54030 Tel: +525-53-0087-7511 Mitsubishi Electric Europe B.V. German Branch Mitsubishi Electric -Platz 1, 40822 Ratingen, Germany Tel: +449-2102-486-0 Mitsubishi Electric Europe B.V. UK Branch Travelers Lane, HatlindL, Hertfordshire, AL 10 XB, U.K. Tel: +44-1707-208-0000 B.V. ULIIIain Branch Centro Direzionale Colleoni Palazzo Sirio, Viale Colleoni 7, Ararten Finizara (MB) Italy Mexico

- Centro Direzionale Colleoni Palazzo Sirio, Viale Colleoni 7, Agrate Brianza (MB), Italy Tel: 439-039-60531 Mitsubishi Electric Europe B. V. Spanish Branch Carretera de Rubi 76-80-Apdo.420, 08190 Sant Cugat del Valles (Barcelona), Spain Tel: 434-035-65-3131 Mitsubishi Electric Europe B. V. French Branch 25, Boulevard des Bouvets, 9,2741 Nanterre Cedex, France Tel: 433-155-68-85-68
- France
- Czec



Czech	Mitsubishi Electric Europe B.V. Czech Branch
	Avenir Business Park, Radlicka 751/113e, 158 00 Praha 5, Czech Republic
	Tel: +420-251-551-470
Turkey	Mitsubishi Electric Turkey A.S. Umraniye Branch
	Serifali Mahallesi Nutuk Sokak No:5, TR-34775 Umraniye / Istanbul, Turkey
	Tel: +90-216-526-3990
Poland	Mitsubishi Electric Europe B.V. Polish Branch
	ul. Krakowska 50, 32-083 Balice, Poland
	Tel: +48-12-347-65-00
Russia	Mitsubishi Electric (Russia) LLC St. Petersburg Branch
	Piskarevsky pr. 2, bld 2, lit "Sch", BC "Benua", office 720;
	RU-195027 St. Petersburg, Russia
	Tel: +7-812-633-3497
South Africa	Adroit Technologies
	20 Waterford Office Park, 189 Witkoppen Road, Fourways, Johannesburg, South Africa
	Tel: +27-11-658-8100
China	Mitsubishi Electric Automation (China) Ltd.
	No.1386 Honggiao Road, Mitsubishi Electric Automation Center, Shanghai, China
	Tel: +86-21-2322-3030
Taiwan	SETSUYO ENTERPRISE CO., LTD.
	6F, No.105, Wugong 3rd Road, Wugu District, New Taipei City 24889, Taiwan
	Tel: +886-2-2299-2499
Korea	Mitsubishi Electric Automation Korea Co., Ltd.
	7F-9F, Gangseo Hangang Xi-tower A, 401, Yangcheon-ro, Gangseo-Gu,
	Seoul 07528, Korea
	Tel: +82-2-3660-9530
Singapore	Mitsubishi Electric Asia Pte. Ltd.
	307 Alexandra Road, Mitsubishi Electric Building, Singapore 159943
	Tel: +65-6473-2308
Thailand	Mitsubishi Electric Factory Automation (Thailand) Co., Ltd.
	12th Floor, SV.City Building, Office Tower 1, No. 896/19 and 20 Rama 3 Road,
	Kwaeng Bangpongpang, Khet Yannawa, Bangkok 10120, Thailand
	Tel: +66-2682-6522 to 31
Indonesia	PT. Mitsubishi Electric Indonesia
	Gedung Jaya 11th Floor, JL. MH. Thamrin No.12, Jakarta Pusat 10340, Indonesia
	Tel: +62-21-3192-6461
Vietnam	Mitsubishi Electric Vietnam Co., LTD. Ho Chi Minh Head Office
	Unit 01-04, 10th Floor, Vincom Center, 72 Le Thanh Ton Street, District 1,
	Ho Chi Minh City, Vietnam
	Tel: +84-8-3910-5945
India	Mitsubishi Electric India Pvt. Ltd. Pune Branch
	Emerald House, EL -3, J Block, M.I.D.C., Bhosari, Pune - 411026, Maharashtra, India
	Tel: +91-20-2710-2000
Australia	Mitsubishi Electric Australia Pty. Ltd.
	348 Victoria Road, P.O. Box 11, Rydalmere, N.S.W. 2116, Australia
	Tel: +61-2-9684-7777

#### MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN NAGOYA WORKS : 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice Printed in Japan, June 2018.