

CL1Y4-R1B2
 CC-Link/LT Remote I/O Module

Please read this manual thoroughly before starting to use the product and handle the product properly.

User's Manual

MODEL	CL1Y4-R1B2
MANUAL Number	JY997D04301K
Date	November 2021

SAFETY PRECAUTIONS

Read these precautions before using.
 Please read this manual carefully and pay special attention to safely in order to handle this product properly. Also pay careful attention to safety and handle the module properly.
 These precautions apply only to Mitsubishi equipment. Refer to the user's manual of the CPU module to use for a description of the PLC system safety precautions.
 If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.
 These SAFETY PRECAUTIONS classify the safety precautions into two categories: "WARNING" and "CAUTION".

- WARNING** Procedures which may lead to a dangerous condition and cause death or serious injury if not carried out properly.
- CAUTION** Procedures which may lead to a dangerous condition and cause superficial to medium injury, or physical damage only, if not carried out properly.

Depending on circumstances, procedures indicated by **CAUTION** may also be linked to serious results.
 In any case, it is important to follow the directions for usage. Store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user.

DESIGN PRECAUTIONS

- WARNING**
 - Configure an interlock circuit in a sequence program so that the system operates on the safety side using the communication status information in the event the data link falls into a communication problem. Otherwise, erroneous output and malfunction may result in accidents.
 - Remote input and output can not be switched ON or OFF when a problem occurs in the remote I/O modules. Therefore build an external monitoring circuit that will monitor any input signals that could cause a serious accident.

CAUTION

- Do not have control cables and communication cables bundled with or placed near by the main circuit and/or power cables. Wire those cables at least 100mm(3.94 inch) away from the main circuit and/or power cables. It may cause malfunction due to noise interference.
- Use the module and the flat cable dedicated to CC-Link/LT without applying any force on them.
 Otherwise, such cables may be broken or fail.

INSTALLATION PRECAUTIONS

CAUTION


- Use the module in an environment that meets the general specifications contained in this manual. Using this module in an environment outside the range of the general specifications could result in electric shock, fire, erroneous operation, and damage to or deterioration of the product.
- Do not directly touch the module's conductive parts. Doing so could cause malfunction or trouble in the module.
- Tighten the module securely using DIN rail or installation screws within the specified torque range.
 If the screws are too loose, the module may drop from its installation position, short circuit, or malfunction. If the screws are too tight, the screws may be damaged, which may cause the module to drop from its installation position or short circuit.
- Install the module on a flat surface.
 If the mounting surface has concave and/or convex, an excessive force may be applied on the module, and nonconformity may be caused.

3.1 Installation to DIN rail

Align the upper DIN rail installation groove in the module with the DIN rail 1), and press the module in that status 2).
 When removing the module, pull the hook downward for installation to DIN rail 3), then remove the module 4).

DIN rail mounting screw pitch

When installing the module to the DIN rail, tighten the mounting screws at the pitch of 200mm(7.87") or less.

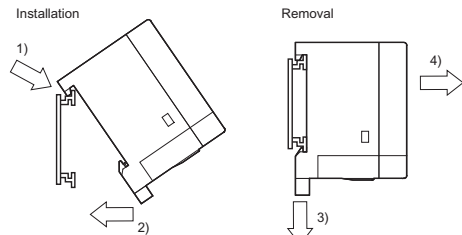


3.2 Direct installation

Screw-tighten the module by attaching M4 screws to the upper and lower mounting holes (two holes in all) provided in the module.
 Install the module so that the clearance of 1 to 2mm (0.04" to 0.08") is assured for each module.

4. Wiring

4.1 External wiring


The output terminals of the CL1Y4-R1B2 can be used with the AC or DC load voltage.

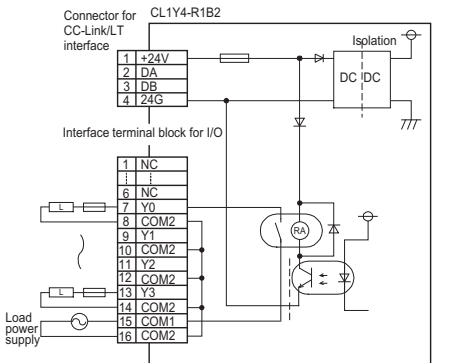

Wire nothing to the NC terminal (idle terminal).

4.2 Crimp-style terminal

For I/O wiring, use crimp-style terminals of the following dimensions.

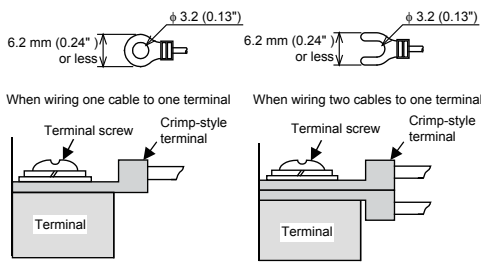

Applicable crimp-style terminal	<ul style="list-style-type: none"> RAV1.25-3 V1.25-3 (manufactured by JST Mfg. Co., Ltd.) 1.25-3 and TG1.25-3 (manufactured by NICHIFU Co., Ltd.)
Applicable wire size	0.3 to 1.25 mm ²

Use a crimp-style terminal in a status in which no force is applied on the cable.

WIRING PRECAUTIONS

WARNING

- Perform installation and wiring after disconnecting the power supply at all phases externally. If the power is not disconnected at all phases an electric shock or product damage may result.
- The temperature rating of the cable should be 80°C or more.

CAUTION

- Terminal screws which are not to be used must be tightened always. Otherwise there will be a danger of short circuit against the bare solderless terminals.
- Do not perform wiring to an idle terminal "NC" outside the product. The product may be damaged by such external wiring.
- Perform correct wiring for the module according to the product's rated voltage and terminal arrangement. Connecting to a power supply different from rating or miss-wiring may cause fire, product failure or malfunction.
- Fix terminal screws securely within the regulated torque. Loose terminal screws may cause fire and/or malfunction.
 If the terminal screws are too tight, it may cause short circuit, equipment failures, or erroneous operation due to damage of the screws.
- Make sure foreign objects do not get inside the module, such as dirt and wire chips. It may cause fire, product failure or malfunction.
- Attach a warning label (hazard symbol 417-IEC-5036) concerning the electric shock to the location.

STARTING AND MAINTENANCE PRECAUTIONS

WARNING

- Do not touch the terminals when the power is ON. It may cause an electric shock or malfunction.
- Perform cleaning the module or re-tightening of terminal screws after turning OFF the all external power supply for sure. Failure to do so may cause failure or malfunction of the modules.
- For cleaning, perform dry wiping without using chemicals.
- If there is the possibility of touching the PLC inside a control panel in maintenance, make sure to discharge to avoid the influence of static electricity.

CAUTION

- Do not disassemble or modify the module. Doing so may cause failure, malfunction, injury, or fire.
- The module case is made of resin; do not drop it or subject it to strong shock. A module damage may result.
- Make sure to switch all phases of the external power supply OFF before installing or removing the module to/from the panel. Failure to do so may cause failure or malfunction of the modules.

DISPOSAL PRECAUTIONS

CAUTION

- When disposing of this product, treat it as industrial waste.

TRANSPORTATION AND MAINTENANCE PRECAUTIONS

CAUTION

- During transportation avoid any impact as the module is a precision instrument. Doing so could cause trouble in the module.
- If it is necessary to check the operation of module after transportation, in case of any impact damage.

Compliance with EC directive (CE marking)

This notification does not guarantee that an entire mechanical module produced in accordance with the contents of the notification comply with the following standards. Compliance to EMC directive of the entire mechanical module should be checked by the user / manufacturer.

Attention

This product is designed for use in industrial applications.

Standards with which this product complies

Type : Programmable Controller (Open Type Equipment) Remote I/O module
 Electromagnetic Compatibility Directive (EMC):
 Models : Products manufactured:
 from November 1st, 2002 to April 30th, 2006 are compliant with EN61000-6-4 and EN61131-2:1994+A11:1996+A12:2000 after May 1st, 2006 are compliant with EN61131-2:2007.
 Low Voltage Directive (LVD):
 Models : Products manufactured:
 from November 1st, 2002 to April 30th, 2006 are compliant with EN61000-6-4 and EN61131-2:1994+A11:1996+A12:2000 after May 1st, 2006 to February 28th, 2018 are compliant with EN61131-2:2007
 after March 1st, 2018 are compliant with EN61010-2-201:2013*1.
 *1 For products manufactured after January 1 2018, there may be compliant cases.

Electromagnetic Compatibility Directive (EMC)	Remark
EN61000-6-4:2001 Electromagnetic compatibility -Generic standards - Emission standard for industrial environment	Compliance with all relevant aspects of the standard. (Radiated Emissions and Mains Terminal Voltage Emissions)
EN61131-2:1994/A11:1996/A12:2000 Programmable controllers -Equipment requirements and tests	Compliance with all relevant aspects of the standard. • Radiated electromagnetic field • Fast transient burst • Electrostatic discharge • Damped oscillatory wave
EN61131-2:2007 Programmable controllers -Equipment requirements and tests	Compliance with all relevant aspects of the standard. EMI • Radiated Emission • Conducted Emission EMS • Radiated electromagnetic field • Fast transient burst • Electrostatic discharge • High-energy surge • Voltage drops and interruptions • Conducted RF • Power frequency magnetic field

Low Voltage Directive (LVD)	Remark
EN61131-2:1994/A11:1996 /A12:2000 2007 Programmable controllers -Equipment requirements and tests	The equipment has been assessed as a component for fitting in a suitable control box which meets the requirements of EN61131-2:1994 + A11:1996 + A12:2000, :2007
EN61010-2-201:2013 Safety of electrical equipment for measurement, control, and test	The equipment has been assessed as a component for fitting in a suitable control box which meets the requirements of EN61010-2-201:2013

Notes for compliance to EMC Directive and LVD

- It is necessary to install the CL1 series module in a shielded metal control panel.
 For more details, please contact the local Mitsubishi Electric sales site.
- Use this product in Zone A*2 as defined in EN61131-2.
 The terminal and the wiring for the output signals and load power supply can be used in zone B*2.

*2 Zone defined in EN61131-2

Separation defined in EN61131-2 for EMC LVD regulation decided depending on condition in industrial setting.
 Zone C = Factory mains which is isolated from public mains by dedicated transformers.
 Zone B = Dedicated power distribution which is protected by secondary surge protection. (300V or less in the rated voltage is assumed.)
 Zone A = Local power distribution which is isolated from dedicated power distribution by AC/DC converters, isolation transformers, etc. (120V or less in the rated voltage is assumed.)

- For the control panel, use the product having sufficient strength, fire protectiveness and shielding property to an installation environment.
- To an external connection port other than AC power supply terminal and AC output terminal, connect the circuit separated from a dangerous voltage by a double/reinforced insulation.
- For crimp terminals to be used for the wiring applied with 30 V AC or higher, use the products with insulating sleeves.
- Cutoff device such as a breaker or a circuit protector should be installed in accordance with the following precautions.
 - Use EN60947-1 or EN60947-3 standards.
 - Place the cutoff device so that it can be operated easily.
 - Specify that the cutoff device is for this equipment.

Compliance with UKCA marking

The requirements for compliance with UKCA marking are the same as that with EC directive (CE marking).


1. Outline of Product

This product is a terminal block type output module connected to CC-Link/LT. This product has four output points (relay output).

5.3 Performance specifications

Item	Specification
Module power supply	Voltage: 20.4 to 28.8V DC (24V DC -15% to +20%) Ripple ratio: Within 5%
	Current consumption: 65mA (when all points are ON)
	Initial current: 70mA
	Max. allowable momentary power failure period: PS1:1ms
Number of stations occupied	4-, 8- or 16-point mode: 1 station
Noise durability	DC type: 500 Vp-p AC type: 1,000 Vp-p Noise width: 1 μs Cycle: 25 to 60 Hz (by noise simulator)
Withstand voltage	AC type: 1,500V AC for 1 min DC type: 500V AC for 1 min
Isolation resistance	10 MΩ or higher between primary area (external DC terminal) and secondary area (internal circuit) by 500V DC insulation resistance tester
Protection class	IP1X
I/O part connection method	Connection with terminal block
Module installation method	DIN rail installation, mounted by screws of type M4 x 0.7mm(0.03") x 16mm(0.63") or larger Can be installed in six directions
Mass (weight)	0.11kg (0.22lbs)
Contact life	200V AC - 1.5 A, 240V AC - 1 A (COS φ = 0.7): 100,000 times or more
	200V AC - 1 A, 240V AC - 0.1 A (COS φ = 0.35): 100,000 times or more
	24V DC - 1 A, 100V DC - 0.1 A (L/R = 7 ms): 100,000 times or more

6. Outside Dimensions

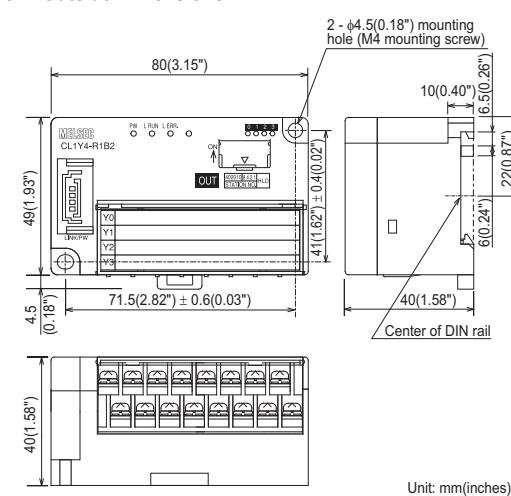


Unit: mm(inches)

5.2 Output specifications

Item	Specification
Output method	Relay output
Number of output points	4
Insulation method	Mechanical insulation
Rated load voltage	240V AC/30V DC or less (250V AC or less when the unit does not comply with UL or cUL standards)
Max. load current	2A/point 4 A/1 common
Response time	OFF → ON: Approx. 10ms or less ON → OFF: Approx. 10ms or less
Common wiring method	4 points/1 common (5 points) (terminal block two-wire type)
Internal protection for outputs	Internal protection circuit none Please connect the fuse in the connected load outside.

2. Name and Setting of Each Part and Terminal Arrangement

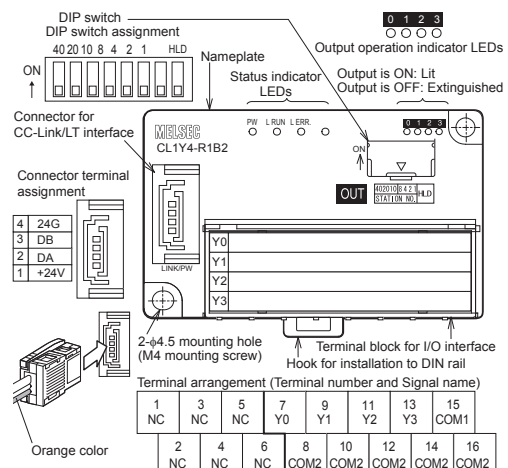

3. Installation

The CL1Y4-R1B2 can be installed to DIN rail or directly installed using mounting screws.
 Each installation procedure is described below.

「电器电子产品有害物质限制使用标识要求」的表示方式

15 Note: This symbol mark is for China only.
 含有有害6物质的名称, 含有量, 含有部品
 本产品中所含有的有害6物质的名称, 含有量, 含有部品如下表所示。

部件名称	产品中有害物质含量					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
可编程控制器	○	○	○	○	○	○
外壳印刷基板	×	○	○	○	○	○

本表格依据 SJ/T 11364 的规定编制。
 ○: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。
 ×: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。
 基于中国标准法的参考规格: GB/T15969. 2

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

Warranty
 Exclusion of loss in opportunity and secondary loss from warranty liability
 Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation to: (1) Damages caused by any cause found not to be the responsibility of Mitsubishi. (2) Loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products. (3) Special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products. (4) Replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

For safe use
 This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
 Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi Electric.
 This product has been manufactured under strict quality control. However when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.

Country/Region	Sales office/Tel	Country/Region	Sales office/Tel
USA	MITSUBISHI ELECTRIC AUTOMATION, INC. 500 Corporate Woods Parkway, Vernon Hills, IL 60091, U.S.A. Tel: +1-847-478-2100/+1-847-478-2500 (INC) Tel: +1-847-478-2832 COMERCIO E SERVICOS LTDA. Avenida Adelinio Cardana, 293, 21 andar, Betaville, Curitiba, 81283-900, BRASIL Tel: +55-11-4669-3000	Russia	Mitsubishi Electric (Russia) LLC 2, bid., Leningrskaya str., 115054 Moscow, Russia Tel: +7-495-721-2070 Tel: +82-2-3693-9530
Brazil	MITSUBISHI ELECTRIC (BRASIL) COMERCIO E SERVICOS LTDA. Avenida Adelinio Cardana, 293, 21 andar, Betaville, Curitiba, 81283-900, BRASIL Tel: +55-11-4669-3000	China	MITSUBISHI ELECTRIC AUTOMATION (CHINA) LTD. No.1386 Hongqiao Road, Mitsubishi Electric Automation Center, Chengdu District, Shanghai, China Tel: +86-21-2322-3030 SEISUYO ENTERPRISE CO., LTD. New Taipei City 24889, Taiwan, R.O.C. Tel: +886-2-2259-2499
Germany	MITSUBISHI ELECTRIC EUROPE B.V. -German Branch Mitsubishi-Platz 1, 40882 Ratingen, Germany Tel: +49-2102-486-0 Tel: +44-1707-28-8780 AL 10 BXB, UK Tel: +44-1707-28-8780	Taiwan	MITSUBISHI ELECTRIC (TAIWAN) CO., LTD. No. 105, Wugang 3rd Road, Wugu District, New Taipei City 24889, Taiwan, R.O.C. Tel: +886-2-2259-2499
UK	MITSUBISHI ELECTRIC EUROPE BV (UK Branch) Travelers Lane, Hatfield, Hertfordshire, AL10 8XB, UK Tel: +44-1707-28-8780	Korea	MITSUBISHI ELECTRIC AUTOMATION KOREA CO., LTD. 7F~9F, Gyeongseo Hangang 30-tower A, 401, Yangcheon-gu Gyeongseo-Gu, Seoul, 07528, Korea Tel: +82-2-3192-6101
Italy	MITSUBISHI ELECTRIC EUROPE B.V. -Italian Branch Centro Direzionale Colonna - Palazzo Sirio, Viale Colonna 7, 20964 Agrate Branzia (MI), Italy Tel: +39-039-893311/+39-039-8933-3421(NC) MITSUBISHI ELECTRIC EUROPE B.V.	Singapore	MITSUBISHI ELECTRIC ASIA PTE. LTD. 367 Alexandra Road, Mitsubishi Electric Building, Singapore 159943 Tel: +65-6473-2308 Tel: +65-6473-2308 Mitsubishi Electric Factory Automation (Thailand) Co., Ltd. 12th Floor, 5V City Building, Office Tower 1, No. 888/19 and 20 Rama 3 Road, Kiewit Bangkongkong, Khai Yananwa, Bangkok 10110, Thailand Tel: +66-2682-6522-31
Spain	-Spanish Branch Carretera de Rubi 75-80-AC-420, E-08190 Sant Cugat del Valles (Barcelona), Spain Tel: +34-93-65-3171/+35-65-22636(NC) MITSUBISHI ELECTRIC EUROPE B.V.	Indonesia	PT. Mitsubishi Electric Indonesia Gedung Jiva 8th Floor, Jl. MH Thamrin No.12, Jakarta Pusat 10340, Indonesia Tel: +62-21-3192-6101
France	-French Branch 25, Boulevard des Bouvets, F-92741 Nanterre Cedex, France Tel: +33-1-65-65-55-58 MITSUBISHI ELECTRIC EUROPE B.V.	India	Mitsubishi Electric India Pvt. Ltd. Gurgaon Branch 2nd Floor, Tower A & B, Cyber Greens, DLF Cyber City, DLF Phase - II, Gurgaon-122002, Haryana, India Tel: +91-124-4630300
Czech Republic	MITSUBISHI ELECTRIC EUROPE B.V. -Czech Branch, Prague Office Pekarska 62/17, 115 00 Praha 5, Czech Republic Tel: +420-255-119-250 Mitsubishi Electric Europe B.V. Polish Branch ul. Krakowska 48, 32-063 Balice, Poland Tel: +48-12-347-65-00	Australia	MITSUBISHI ELECTRIC AUSTRALIA PTY. LTD. 34B Victoria Road PO BOX 111, Rydalmere, N.S.W 2118, Australia Tel: +61-2-9684-7777

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHYUODA-KU, TOKYO 100-8310, JAPAN
 When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.