

**Inclusion Discontinuation of Instruction Manual  
for MDU Breaker and Low Voltage Air Circuit Breaker**

We would like to inform you that the inclusion of paper instruction manuals for the MDU Breaker and Air Circuit Breaker (AE-SW) will be discontinued.  
These manuals will be provided in electronic document format.  
We appreciate your understanding and continued support.


**1. Types**

MDU Breaker and Air Circuit Breaker (AE-SW)  
Refer to "5. Applicable Types " for details.

**2. Content of the change**

We will discontinue the inclusion of paper instruction manuals. Instead, a document providing information on how to access the instruction manuals via a dedicated website will be included.  
This document will also contain important safety instructions for proper use.  
By scanning the two-dimensional code provided in this document, the instruction manuals (in electronic document format) can be browsed from the dedicated website.

**Browsing / Downloading Instruction Manuals**

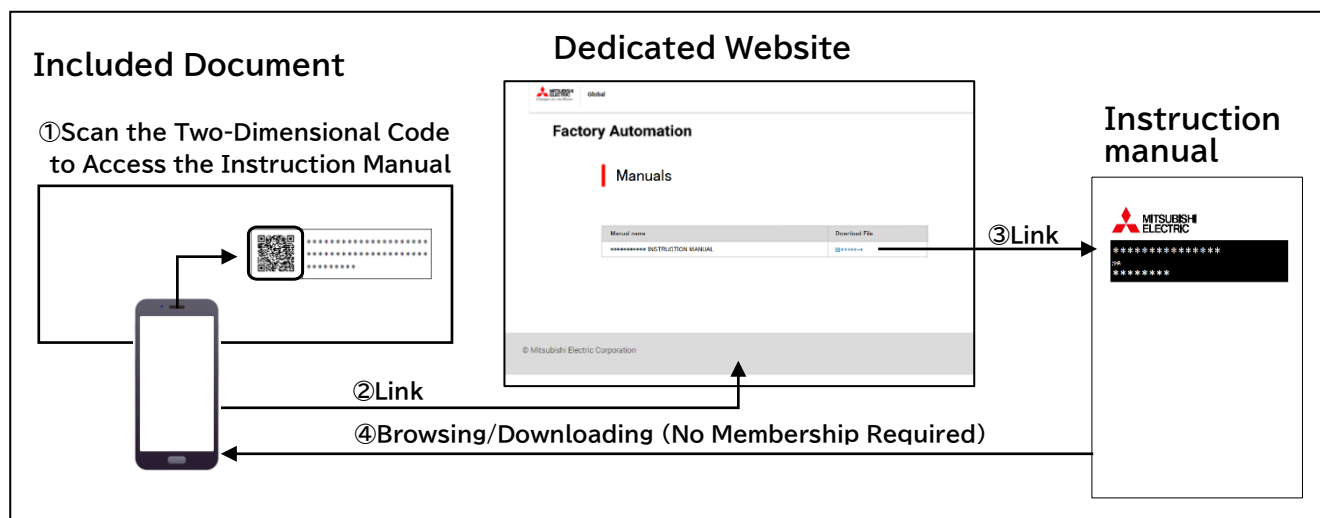

**3. Reason for change**

To Reduce Environmental Impact.

**4. Time of change**

From production in August 2025.  
(Please be noted that the time of change may be advanced or delayed.)

## 5. Applicable Types

Types	Manual name	Models
MDU Breaker	MDU BREAKER: MAIN UNIT INSTRUCTION MANUAL	NF250-SEV with MDU, NF250-HEV with MDU, NF400-SEW with MDU, NF400-HEW with MDU, NF800-SEW with MDU, NF800-HEW with MDU
	MDU BREAKER: MDU INSTRUCTION MANUAL	MDU-BN, MDU-BP, MDU-BC, MDU-BM
	MDU BREAKER: BREAKER-MOUNTING INSTRUCTION MANUAL	NF250-SEV with MDU, NF250-HEV with MDU
	MDU BREAKER: BREAKER-MOUNTING INSTRUCTION MANUAL	NF400-SEW with MDU, NF400-HEW with MDU, NF800-SEW with MDU, NF800-HEW with MDU
Air Circuit Breaker	MITSUBISHI Low-Voltage Air Circuit Breaker World Super AE INSTRUCTION MANUAL	AE630-SW, AE1000-SW, AE1250-SW, AE1600-SW, AE2000-SWA AE2000-SW AE2500-SW AE3200-SW, AE4000-SWA AE4000-SW AE5000-SW AE6300-SW
	MITSUBISHI Low-Voltage Air Circuit Breakers World Super AE series HANDLING MANUAL<Supplement>	AE630-SW, AE1000-SW, AE1250-SW, AE1600-SW, AE2000-SWA AE2000-SW AE2500-SW AE3200-SW, AE4000-SWA
	MITSUBISHI Low-voltage Air Circuit Breakers type AE INSTRUCTION MANUAL of Mechanical interlock (MI) for AE-SW	MI
	MITSUBISHI Low-voltage Air Circuit Breakers type AE INSTRUCTION MANUAL of Door interlock (DI) for AE-SW	DI
	MITSUBISHI Low-Voltage Air Circuit Breakers type AE Display (DP1/DP2) INSTRUCTION MANUAL	DP1/DP2
	MITSUBISHI Low-Voltage Air Circuit Breakers type AE MODBUS Interface unit (BIF-MD) INSTRUCTION MANUAL	BIF-MD
	Low-Voltage Air Circuit Breakers type AE Field test device Y-2005 INSTRUCTION MANUAL	Y-2005