

TECHNICAL BULLETIN

[Issue No.] GOT-A-0040-A

[Page] 1/2

[Title] Change to the Option Function Board Interface (for the MES Interface Function) of the GT16 Models
(Handling of the Great East Japan Earthquake)

[Date of Issue] Ver.A: August 2011 (First Edition: April 2011)

[Relevant Models] GOT1000 Series (GT16 Models)

Thank you for your continued support of Mitsubishi Graphic Operation Terminal (GOT).

Due to the effect of the Great East Japan Earthquake, we have difficulty obtaining some parts of the GOT. Therefore, we will temporarily provide the GT16 models without the connector of the option function board interface (for the MES interface function).

1. Target GOT


GT16 models (excluding the GT1665HS-VTBD that is incompatible with the option function board (for the MES interface function))

2. How to identify the temporary GOT

Function version C or D applies to the temporary GOT.


The following shows how to check the function version.

■ Rating plate (GOT rear face)

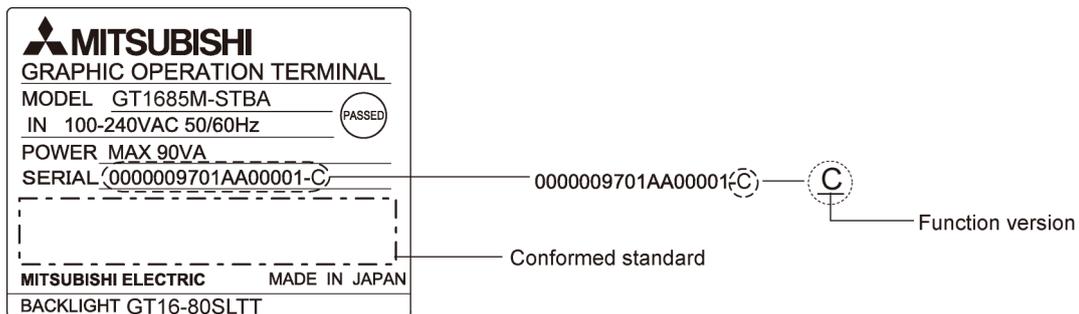

■ Packing box

You can also check the function version with the labels on the GOT packing box. The positions of the labels differ depending on the model and the shipment date.

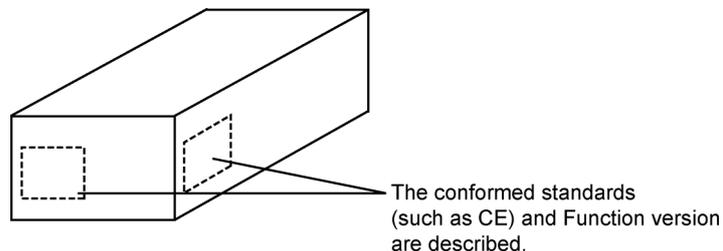

TECHNICAL BULLETIN

[Issue No.] GOT-A-0040-A

[Page] 2/2

[Title] Change to the Option Function Board Interface (for the MES Interface Function) of the GT16 Models
(Handling of the Great East Japan Earthquake)

[Date of Issue] Ver.A: August 2011 (First Edition: April 2011)

[Relevant Models] GOT1000 Series (GT16 Models)

3. Difference between the temporary GOT and the conventional GOT


Since the temporary GOT does not have the connector of the option function board interface (for the MES interface function), you cannot mount an option function board on the GOT.

The option function board includes the following model.

- GT16-MESB (MES interface function board)

Though you cannot use the MES interface function with the temporary GOT, the other functions and the specifications do not differ between the temporary GOT and the conventional GOT.

The option function board interface (for the MES interface function) is located on the extension interface 1 side (the extension interface 2 side for the GT1655 only) on the GOT rear face without the extension unit cover.

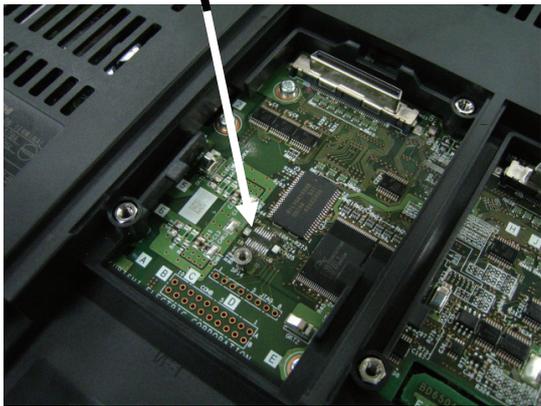	Conventional GOT	Temporary GOT
Appearance	With the connector of the option function board interface (for the MES interface function)	Without the connector of the option function board interface (for the MES interface function)
		

Version	Print date	Revision
*	April 2011	- First edition
A	August 2011	- Function version D is added to Chapter 2.