

AJ65VBTS32-32DT 形 CC-Link システム小形タイプリモート I/O ユニットユーザーズマニュアル

●安全上のご注意●

本製品のご使用に際しては、本マニュアルをよくお読みいただくと共に、安全に対して十分に注意を払って、正しい取扱いをしていただくようお願いいたします。

本マニュアルで示す注意事項は、本製品に関するもののみについて記載したものです。シーケンサシステムとしての安全上のご注意に関しては、使用するCPUユニットのユーザーズマニュアルを参照してください。

この「安全上のご注意」では、安全注意事項のランクを「△警告」、「△注意」として区分してあります。

- 警告 △ 取扱いを誤った場合に、危険な状況が起こりえて、死亡または重傷を受ける可能性が想定される場合。
注意 △ 取扱いを誤った場合に、危険な状況が起こりえて、軽度程度の傷害や軽傷を受ける可能性が想定される場合および物的損害だけの発生が想定される場合。

なお、△注意に記載した事項でも、状況によっては重大な結果に結びつく可能性があります。いづれも重要な内容を記載していますので必ず守ってください。本マニュアルは必要に応じて定期的に更新される場合があります。必ず最終ユーザまでお届けいただくようお願いいたします。

【設計上の注意事項】

△警告

- データリンクが通信異常になったとき、通信異常時は次のような状態になります。通信状態情報を使って、システムが安全側に働くようにシーケンサプログラム上でインターロック回路を構成してください。誤出力、誤動作により事故の恐れがあります。
(1) リモート I/O 局からの入力は、全点 OFF しします。
(2) リモート I/O 局からの出力は、全点 OFF しします。

△注意

- ユニットは、CPU ユニットユーザーズマニュアル記載の一般仕様の環境で使用してください。範囲外の環境で使用すると、感電、火災、誤動作、製品の損傷、あるいは劣化の原因になります。
制動線や通信ケーブルは、主回路や動力線などと束ねたり、近接したりしないでください。100mm 以上を目安として離してください。ノイズにより、誤動作の原因になります。

【取付け上の注意事項】

△注意

- ユニットの導電部分には直接触らないでください。ユニットの誤動作、故障の原因になります。
ユニットは、DIN レールまたは取付けネジにて、確実に固定し、取付けネジは規定トルク範囲内で確実に締め付けてください。ネジの締め付けがゆるい、落下、短絡、誤動作の原因になります。ネジを締め過ぎると、ネジやユニットの破損による落下、短絡、誤動作の原因になります。
各接続ケーブルのコネクタは装置部に確実に装着してください。接触不良により、誤動作の原因になります。

【配線上の注意事項】

△警告

- 配線作業は、必ずシステムで使用している外部供給電源を全遮断してから行ってください。全遮断しないと、感電またはユニットの故障や誤動作の原因になります。

△注意

- FG 端子は、シーケンサ専用の D 種接地（第三種接地）以上で必ず接地を行ってください。感電、誤動作の恐れがあります。
空芯端子ネジは必ず締め付けトルク範囲（0.42～0.50N・m）で締め付けてください。圧着端子と短絡する原因になります。
圧着端子は、適合圧着端子を使用し、規定のトルクで締め付けてください。先開形圧着端子を使用すると、端子ネジがゆるんだ場合に脱落し、故障の原因になります。
ユニットへの配線は、製品の定格電圧や端子配列を確認した上で正しく行ってください。定格と異なる電圧の入れや、電源を接続、配線線をする中、火災、故障の原因になります。
端子ネジの締め付けは、規定トルク範囲で行ってください。ネジの締め付けがゆるいと、短絡、火災、誤動作の原因になります。ネジを締め過ぎると、ネジやユニットの破損による落下、短絡、火災、誤動作の原因になります。
ユニット内に切粉や配線クスのなどの異物が入らないようご注意ください。火災、故障、誤動作の原因になります。
ユニットに接続する電線やケーブルは、必ずダクトに納めると、またはクランプによる固定処理を行ってください。ケーブルをダクトに納めなかったり、クランプによる固定処理をしていないと、ケーブルのふらつきや移動、不注意の引っ張りなどによるユニットやケーブルの破損、ケーブルの接続不良による誤動作の原因となります。

●安全注意事項●

在使用本製品之前，应仔细阅读本手册，同时在充分注意安全的前提下正确操作。本手册中仅记载与本产品有关的注意事项。关于可编程控制系统方面的安全注意事项，请参阅所使用的 CPU 模块的用户手册。

- 警告 △ 表示操作错误时，可能会引起危险，导致死亡或重伤事故。
注意 △ 表示操作错误时，可能会引起危险，导致中度伤害或轻伤，或导致财物损失。

此外，根据情况不同，即使标注为“△注意”的事项也有可能引发严重后果。这两个等级的注意事项记载的均为重要内容，请务必遵守。请妥善保管本手册以备需要时取阅，并将本手册交给最终用户。

【设计注意事项】

△警告

- 数据链接处于通信异常时，通信异常站将变为以下状态。应使用通信状态信息，在顺程序上配置互锁电路，以保证整个系统能安全运行。否则可能由于误输出、误动作而导致事故发生。
(1) 来自于远程 I/O 站的输入的全部 OFF。
(2) 来自于远程 I/O 站的输出的全部 OFF。

△注意

- 应在 CPU 模块用户手册记载的一般规格环境下使用模块。如果在一般规格范围以外的环境中使用模块，可能导致触电、火灾、误动作、设备损坏或性能劣化。
请勿将控制线及通信电缆与主电路及动力线等捆扎在一起或相互靠得太近。应相距大约 100mm 以上距离。因为噪声有可能导致误动作。

【安装注意事项】

△注意

- 请勿直接接触模块的导电部分，否则可能导致模块误动作、故障。
模块应通过 DIN 导轨或者安装螺栓切实地加以固定，安装螺栓应在规定的扭矩范围内切实地拧紧。如果安装螺栓拧得过松，有可能导致故障、短路或误动作。如果安装螺栓拧得过紧，有可能造成螺栓及模块损坏从而产生故障、短路或误动作。
应将各连接电缆的接口切实地安装在安装部位。否则可能因接触不良而导致误动作。

【配线注意事项】

△警告

- 在配线作业时，必须将系统使用的外部电源全部断开后再进行操作。如果未全部断开，有可能导致触电、模块故障或误动作。

△注意

- 必须将 FG 端子与可编程控制器的专用接地线连接。否则有可能导致触电或误动作。
空闲端子螺栓必须在扭矩范围（0.42～0.50N・m）内拧紧。否则可能导致与压装端子发生短路。
应使用合适的压装端子，并按规定扭矩拧紧。如果使用 Y 型压装端子，端子螺栓松动时可能导致脱落或故障。
进行模块配线作业时，应在确认产品的额定电压及端子排列的基础上正确进行操作。如果连接了与额定值不符的电压、电源或配线错误，可能导致火灾或故障。
应在规定的扭矩范围内拧紧端子螺栓。如果端子螺栓拧得过松，有可能导致短路、火灾或误动作。如果端子螺栓拧得过紧，有可能造成螺栓及模块损坏从而产生故障、短路、火灾或误动作。
应注意防止切屑及配线头等异物掉入模块内。否则有可能导致火灾、故障或误动作。
与模块相连接的电缆及电线的束必须收入套管中，或者用夹具进行固定处理。如果未将电缆收入套管或用夹具进行固定处理，可能由于电缆的晃动及移动、不经意的拽拽造成模块及电缆破损、电缆接触不良而导致误动作。
请勿将控制线及通信电缆与主电路及动力线捆扎在一起或相互靠得太近。因为噪声有可能导致误动作。
外部连接机器的异常及可编程控制器的故障等导致长时间过电流时，可能会导致冒烟、火灾，因此请在外部设置保险丝等安全电路。
在拆卸与模块相连接的电缆时，请勿用手拉扯电缆部分。对于带接口的电缆，应用手握住与模块相连接的接口进行拆卸。对于端子排连接的电缆，应松开端子螺栓后拆卸。如果在与模块连接的状态下拉扯电缆，可能导致误动作或模块及电缆破损。

●SAFETY PRECAUTIONS●

Before using this product, please read this manual carefully and pay full attention to safety to handle the product correctly.

The precautions given in this manual are concerned with this product only. For the safety precautions of the programmable controller system, refer to the user's manual for the CPU module used.

- WARNING △ Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.
CAUTION △ Indicates that incorrect handling may cause hazardous conditions, resulting in minor or moderate injury or property damage.

Under some circumstances, failure to observe the precautions given under "△CAUTION" may lead to serious consequences. Observe the precautions of both levels because they are important for personal and system safety. Make sure that the end users read this manual and then keep the manual in a safe place for future reference.

【Design Precautions】

△WARNING

- In the case of a communication failure in the network, the status of the error station will be as follows:
(1) All inputs from remote I/O stations are turned off.
(2) All outputs from remote I/O stations are turned off.
Check the communication status information and configure an interlock circuit in the sequence program to ensure that the entire system will operate safely.

△CAUTION

- Use the module in an environment that meets the general specifications in the user's manual for the CPU module used. Failure to do so may result in electric shock, fire, malfunction, or damage to or deterioration of the product.
Do not install the control lines or communication cables together with the main circuit lines or power cables. Keep a distance of 100mm (3.94 inches) or more between them. Failure to do so may result in malfunction due to noise.

【Installation Precautions】

△CAUTION

- Do not directly touch any conductive parts of the module. Doing so can cause malfunction or failure of the module.
Securely fix the module with a DIN rail or mounting screws. Tighten the screws within the specified torque range. Overtightening can cause drop of the screw, short circuit or malfunction. Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.
Securely connect the cable connectors. Poor contact may cause malfunction.

【Wiring Precautions】

△WARNING

- Shut off the external power supply for the system in all phases before wiring. Failure to do so may result in electric shock or cause the module to fail or malfunction.

△CAUTION

- Ground the FG terminal to the protective ground conductor dedicated to the programmable controller. Failure to do so may result in electric shock or malfunction.
Tighten any unused terminal screws within the specified torque range (0.42 to 0.50N・m). Failure to do so may cause a short circuit due to contact with a solderless terminal.
Use applicable solderless terminals and tighten them within the specified torque range. If any spade solderless terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.
Check the rated voltage and terminal layout before wiring to the module, and connect the cables correctly. Connecting a power supply with a different voltage rating or incorrect wiring may cause a fire or failure.
Tighten the terminal screw within the specified torque range. Overtightening can cause short circuit, fire, or malfunction. Overtightening can damage the screw and/or module, resulting in drop, short circuit, fire, or malfunction.
Prevent foreign matter such as dust or wire chips from entering the module.
Such foreign matter can cause a fire, failure, or malfunction.
Place the cables in a duct or clamp them. If not, dangling cable may swing or inadvertently be pulled, resulting in damage to the module or cables or malfunction due to poor contact.

△注意

- 制動線や通信ケーブルは、主回路や動力線と束ねたり、近接したりしないでください。ノイズにより、誤動作の原因になります。
外部接続機器の異常やシーケンサの故障などによる過電流が長時間継続して流れた場合、発煙、発火の恐れがありますので、外部にヒューズなどの安全回路を設けてください。
ユニットに接続されたケーブルを取りはずすときは、ケーブル部分を手に持って引っ張らないでください。コネクタ付きのケーブルは、ユニットの接続部分のコネクタを手で持って取りはずしてください。端子台接続のケーブルは、端子ネジを緩めてから取りはずしてください。ユニットに接続された状態でケーブルを引っ張ると、誤動作またはユニットやケーブルの破損の原因となります。

【立上げ・保守時の注意事項】

△警告

- 導電部に触れないでください。感電または誤動作の原因になります。
清掃、端子ネジ、ユニット取付けネジの増し締めは、必ずシステムで使用している外部供給電源を全遮断してから行ってください。全遮断しないと、感電の恐れがあります。

△注意

- 各ユニットの分解、改造はしないでください。故障、誤動作、ケガ、火災の原因になります。
ユニットは落下させたり、強い衝撃を与えないでください。ユニットの破損の原因になります。
ユニットの取付け・取りはずしは、必ずシステムで使用している外部供給電源を全遮断してから行ってください。全遮断しないと、ユニットの故障や誤動作の原因になります。
端子台の着脱は、製品ご使用後、50回以内としてください。(JIS B 3502に準拠)
ユニットに触れる前には、必ず接地された金属などの導電物に触れて、人体などに帯電している静電気を放電してください。静電気を放電しないと、ユニットの故障や誤動作の原因になります。

【廃棄時の注意事項】

△注意

- 製品を廃棄するときは、産業廃棄物として扱ってください。

●製品の適用について●

- (1) 当社シーケンサをご使用いただくにあたりましては、万一シーケンサに故障・不具合などが発生した場合でも重大な事故にいたらないように用途・不具合などにより発生しない範囲にバックアップやフェールセーフ機能が機器外部で体系的に実施されていることをご使用の条件とさせていただきます。
(2) 当社シーケンサは、一般工業などへの用途を対象とした汎用品として設計・製作されています。したがって、以下のような機器・システムなどの特殊用途へのご使用については、当社シーケンサの適用を除外させていただきます。万一使用された場合は当社として保証・瑕疵担保責任、品質保証責任、不法行為責任、製造物責任を負うことができません。
・各電力会社製の原子力発電所およびその他発電所向けなどの公共への影響が大きい用途
・鉄道各社駅および官公庁駅など、特別な品質保証体制の構築を当社にご要求になる用途
・航空宇宙、医療、鉄道、燃焼・燃料装置、乗用移動体、有人搬送装置、娯楽機械、安全機械など生命、身体、財産に大きな影響が予測される用途

ただし、上記の用途であっても、具体的に使途を限定すること、特別な品質（一般仕様を超えた品質等）をご要求されたいこと等を条件に、当社の判断にて当社シーケンサの適用可とする場合もございますので、詳細につきましては当社窓口へご相談ください。

△CAUTION

- Do not install the control lines or communication cables together with the main circuit lines or power cables. Failure to do so may result in malfunction due to noise.
When an overcurrent caused by an error of an external device or a failure of the programmable controller flows for a long time, it may cause smoke and fire. To prevent this, configure an external safety circuit, such as a fuse.
When disconnecting the cable from the module, do not pull the cable by the cable part. For the cable with connector, hold the connector part of the cable. For the cable connected to the terminal block, loosen the terminal screw. Pulling the cable connected to the module may result in malfunction or damage to the module or cable.

【Startup and Maintenance Precautions】

△WARNING

- Do not touch any terminal while power is on. Doing so will cause electric shock or malfunction.
Shut off the external power supply for the system in all phases before cleaning the module or retightening the terminal screws or module mounting screws. Failure to do so may result in electric shock.

△CAUTION

- Do not disassemble or modify the modules. Doing so may cause failure, malfunction, injury, or a fire.
Do not drop or apply strong shock to the module. Doing so may damage the module.
Shut off the external power supply for the system in all phases before mounting or removing a module. Failure to do so may cause the module to fail or malfunction.
After the first use of the product, do not mount/remove the terminal block to/from the module more than 50 times (IEC 61131-2 compliant).
Before handling the module, touch a conducting object such as a grounded metal to discharge the static electricity from the human body. Failure to do so may cause the module to fail or malfunction.

【Disposal Precautions】


△CAUTION

- When disposing of this product, treat it as industrial waste.

●CONDITIONS OF USE FOR THE PRODUCT●

- (1) Mitsubishi programmable controller ("the PRODUCT") shall be used in conditions:
i) where any problem, fault or failure occurring in the PRODUCT, if any, shall not lead to any major or serious accident; and
ii) where the backup and fail-safe function are systematically or automatically provided outside of the PRODUCT for the case of any problem, fault or failure occurring in the PRODUCT.
(2) The PRODUCT has been designed and manufactured for the purpose of being used in general industries. MITSUBISHI SHALL HAVE NO RESPONSIBILITY OR LIABILITY (INCLUDING, BUT NOT LIMITED TO ANY AND ALL RESPONSIBILITY OR LIABILITY BASED ON CONTRACT, WARRANTY, TORT, PRODUCT LIABILITY) FOR ANY INJURY OR DEATH TO PERSONS OR LOSS OR DAMAGE TO PROPERTY CAUSED BY THE PRODUCT THAT ARE OPERATED OR USED IN APPLICATION NOT INTENDED OR EXCLUDED BY INSTRUCTIONS, PRECAUTIONS, OR WARNING CONTAINED IN MITSUBISHI'S USER, INSTRUCTION AND/OR SAFETY MANUALS, TECHNICAL BULLETINS AND GUIDELINES FOR THE PRODUCT. ("Prohibited Application") Prohibited Applications include, but not limited to, the use of the PRODUCT in:
・ Nuclear Power Plants and any other power plants operated by Power companies, and/or any other cases in which the public could be affected if any problem or fault occurs in the PRODUCT.
・ Railway companies or Public service purposes, and/or any other cases in which establishment of a special quality assurance system is required by the Purchaser or End User.
・ Aircraft or Aerospace, Medical applications, Train equipment, transport equipment such as Elevator and Escalator, Incineration and Fuel devices, Vehicles, Manned transportation, Equipment for Recreation and Amusement, and Safety devices, handling of Nuclear or Hazardous Materials or Chemicals, Mining and Drilling, and/or other applications where there is a significant risk of injury to the public or property.
Notwithstanding the above, restrictions Mitsubishi may in its sole discretion, authorize use of the PRODUCT in one or more of the Prohibited Applications, provided that the usage of the PRODUCT is limited only for the specific applications agreed to by Mitsubishi and provided further that no special quality assurance or fail-safe, redundant or other safety features which exceed the general specifications of the PRODUCTS are required. For details, please contact the Mitsubishi representative in your region.

1. 各部の名称と設定

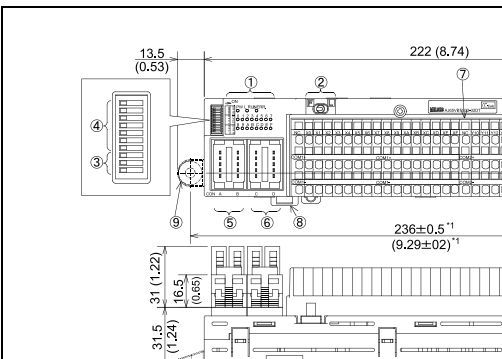

Unit: mm (inch)

* 1 取付けネジ加工寸法 (取付ピッチ) Mounting pitch

Table with columns: No., 名称 (Name), 内容 (Content). Includes rows for LED names (PW, L RUN, L ERR, X0~F), input/output switches (②), speed setting switch (③), station number setting switch (④), and communication/terminal connectors (⑤-⑩).

- * 2 局番は重複して設定できません。
* 3 入出力表示切換えスイッチの操作は指先で行ってください。ドライバーなどの工具は、スイッチ部を破損する恐れがあるので使用しないでください。


2. 付属品

ネジ取付け用固定具 2個

3. 使用周囲温度

本製品は、0 ~ 55 °C の範囲でご使用ください。

1. Part Names and Settings

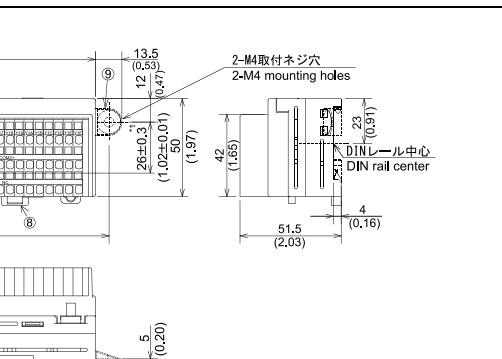

Unit: mm (inch)

* 1 取付けネジ加工寸法 (取付ピッチ) Mounting pitch

Table with columns: No., Item, Description. Includes rows for LED names (PW, L RUN, L ERR, X0 to XF), indicator switch (②), transmission speed setting switch (③), station number setting switch (④), connector for communication (⑤), connector for power supply and FG (⑥), 2-piece spring clamp terminal block (⑦), DIN rail hook (⑧), mounting bracket (accessory) (⑨).

- * 2 A unique station number should be set.
* 3 To operate the indication selector switch, do not use a tool such as a screwdriver. Doing so may damage the switch.

2. Accessory

Mounting bracket (2 pieces)

3. Operating Ambient Temperature

Use the module in the ambient temperatures of 0 to 55 °C.

4. 取り付け方向と最大同時入力点数の制約

仕様に記載されている最大同時入力点数は、取り付け方向により異なります。

- (1) 最大同時入力点数の制約のない取り付け方向
図 4.1 の取り付け方向の場合、最大同時入力点数に制約はありません。
- (2) 最大同時入力点数の制約のある取り付け方向
図 4.2 ~ 図 4.5 の取り付け方向の場合、周囲温度が 55 °C のとき最大同時入力点数は 75% になります。
(図 4.6 ディレーティングカーブ参照)

図 4.1 正面取り付け (正方向)
Figure 4.1 Vertical installation (basic)

図 4.2 正面取り付け (逆方向)
Figure 4.2 Vertical installation (upside down)

図 4.3 正面取り付け (縦方向)
Figure 4.3 Horizontal installation

図 4.4 天井取り付け
Figure 4.4 Downward installation

図 4.5 平面取り付け
Figure 4.5 Upward installation

図 4.6 ディレーティングカーブ
Figure 4.6 Derating curve

周囲温度 Ambient temperature [°C]	最大同時入力点数の割合 [%]
0	100
55	75

4. Installation Orientations and Limits on the Maximum Number of Simultaneous Input Points

The maximum number of simultaneous input points described in the specifications changes according to the installation orientation.

- (1) Installation orientations without limits
When the module is mounted as shown in Figure 4.1, the maximum number of simultaneous input points is not limited.
- (2) Installation orientations with limits
When the module is mounted as shown in Figure 4.2 to 4.5, the maximum number of simultaneous input points is reduced to 75% at an ambient temperature of 55 °C.
(Refer to the derating curve in Figure 4.6.)

5. 仕様

項目	内容
入力点数	16 点
絶縁方式	フォトカプラ絶縁
定格入力電圧	DC24V (リップル率 5%以内)
定格入力電流	約 5mA
使用電圧範囲	DC19.2 ~ 26.4V
最大同時入力点数	100% / 75% (第4章参照)
ON電圧 / ON電流	DC14V以上 / 3.5mA以上
OFF電圧 / OFF電流	DC6V以下 / 1.7mA以下
入力抵抗	約 4.7kΩ
応答時間	OFF → ON: 1.5ms以下 (DC24V時) ON → OFF: 1.5ms以下 (DC24V時)
コモン方式	16点1コモン (スプリングクランプ端子台形3線式)
入力形式	プラスコモン (シンクタイプ)
搭載機器供給電流	1.0A以下 / コモン
出力点数	16 点
絶縁方式	フォトカプラ絶縁
定格出力電圧	DC12/24V (リップル率 5%以内)
使用出力電圧範囲	DC10.2 ~ 26.4V
最大負荷電流	0.5A/1点、4A/1コモン
最大突入電流	1.0A、10ms以下
OFF時漏れ電流	0.1mA以下
ON時最大電圧降下	DC0.3V以下 (TYP.) 0.5A DC0.6V以下 (MAX.) 0.5A
出力形式	シンクタイプ
保護機能	なし
応答時間	OFF → ON: 1ms以下 ON → OFF: 1ms以下 (抵抗負荷)
出力部外部供給電圧	電圧: DC12/24V (リップル率 5%以内) (許容電圧範囲 DC10.2 ~ 26.4V) 電流: 30mA以下 (DC24V、全点ON時) 外部負荷電流は含まれません
コモン方式	16点1コモン (スプリングクランプ端子台形3線式)
サージキラー	ツェナーダイオード
占有高さ	1高 32点部付け (32点使用)
ユニット電源	電圧: DC24V (リップル率 5%以内) (許容電圧範囲 DC20.4 ~ 26.4V) 電流: 50mA以下 (DC24V、全点ON時)
ノイズ耐量	DCタイプのノイズ電圧 500Vp-p、ノイズ幅 1μs、ノイズ周波数 25 ~ 60kHz のノイズシミュレータによる
耐電圧	DC 外部端子 - 接地アース間 AC500V 1分間
絶縁抵抗	DC 外部端子 - 接地アース間 DC500V 絶縁抵抗計にて 10MΩ 以上
保護等級	IP1XB
質量	0.41kg
外部接続方式	通信部 * 1 通信部 * 1 電源部 * 1 入出力部
適用DINレール	TH35-7.5Fe、TH35-7.5Al (JIS C 2812 に準拠)
通信用コネクタ	適合ケーブル: FANC-110SBH, FA-CBL200PSBH, CS-110
電源・FG用コネクタ	0.66 ~ 0.98mm ² (AWG18) φ2.2 ~ 3.0mm (A6CON-PW5P) φ2.0 ~ 2.3mm (A6CON-PW5P-SOD) 素線径 0.16mm 以上 絶縁被覆材質: PVC (耐熱ビニル)
入出力用スプリングクランプ端子台	より線 0.08 ~ 1.5mm ² (AWG28 ~ 16) * 2 電線剥き寸法: 8 ~ 11mm
適合電線サイズ	TE0.5 (株式会社ニチフ) [適合電線サイズ: 0.5mm ²] TE0.75 (株式会社ニチフ) [適合電線サイズ: 0.75mm ²] TE1 (株式会社ニチフ) [適合電線サイズ: 0.9 ~ 1.0mm ²] TE1.5 (株式会社ニチフ) [適合電線サイズ: 1.25 ~ 1.5mm ²] FA-VTC125T9 (三菱電機エンジニアリング株式会社) [適合電線サイズ: 0.3 ~ 1.65mm ²] FA-VTCW125T9 (三菱電機エンジニアリング株式会社) [適合電線サイズ: 0.3 ~ 1.65mm ²]

* 1 各コネクタの圧接方法は、CC-Linkシステム小形タイプリモートI/Oユニットユーザーズマニュアル (詳細編) SH(名)-3307を参照してください。
* 2 1端子に2本以上の電線を差し込まないでください。

5. Specifications

Item	Description
Number of input points	16 points
Isolation method	Photocoupler
Rated input voltage	24VDC (ripple ratio: within 5%)
Rated input current	Approx. 5mA
Operating voltage range	19.2 to 26.4VDC
Max. number of simultaneous input points	100% or 75% (Refer to Chapter 4.)
ON voltage/ON current	14VDC or higher/3.5mA or higher
OFF voltage/OFF current	6VDC or lower/1.7mA or lower
Input resistance	Approx. 4.7kΩ
Response time	OFF → ON: 1.5ms or less (at 24VDC) ON → OFF: 1.5ms or less (at 24VDC)
Wiring method for common	16 points/common (3-wire, spring clamp terminal block type)
Input type	Positive common (sink type)
Supply current for connected device	1.0A or lower/common
Number of output points	16 points
Isolation method	Photocoupler
Rated load voltage	12/24VDC (ripple ratio: within 5%)
Operating load voltage range	10.2 to 26.4VDC
Max. load current	0.5A/point, 4A/common
Max. inrush current	1.0A, 10ms or less
Leakage current at OFF	0.1mA or lower
Max. voltage drop at ON	0.3VDC or lower (TYP.) 0.5A 0.6VDC or lower (MAX.) 0.5A
Output type	Sink type
Protection function	None
Response time	OFF → ON: 1ms or less ON → OFF: 1ms or less (resistive load)
Voltage	12/24VDC (ripple ratio: within 5%) (allowable voltage range 10.2 to 26.4VDC)
External power supply for output part	Current: 30mA or lower (at 24VDC and all points ON), excluding external load current
Wiring method for common	16 points/common (2-wire, spring clamp terminal block type)
Surge suppressor	Zener diode
Number of occupied stations	32-point assignment/station (32 points used)
Module power supply	Voltage: 24VDC (ripple ratio: within 5%) (allowable voltage range 20.4 to 26.4VDC) Current: 50mA or lower (at 24VDC and all points ON)
Noise immunity	Noise voltage 500Vp-p, noise width 1μs, noise frequency 25 to 60kHz (DC type noise simulator condition)
Withstand voltage	500VAC for 1 minute between all DC external terminals and ground
Insulation resistance	10MΩ or higher between all DC external terminals and ground (500VDC insulation resistance tester)
Protection degree	IP1XB
Weight	0.41 kg
External connection system	Communication part ¹ One-touch connector for communication [Transmission circuit] 5-pin IDC plug is sold separately: A6CON-L5P <Optional> Online connector for communication: A6CON-LJ5P Power supply part ¹ One-touch connector for power supply and FG [Module power supply, FG] 5-pin IDC plug is sold separately: A6CON-PW5P, A6CON-PW5P-SOD <Optional> I/O part ¹ Online connector for power supply: A6CON-PWJ5P 2-piece spring clamp terminal block [I/O power supply, I/O signals]
Applicable DIN rail	TH35-7.5Fe, TH35-7.5Al (compliant with IEC 60715)
Connector for communication	Applicable cable: FANC-110SBH, FA-CBL200PSBH, CS-110
Connector for power supply and FG	0.66 to 0.98mm ² (18 AWG) φ2.2 to 3.0mm (A6CON-PW5P) φ2.0 to 2.3mm (A6CON-PW5P-SOD) Wire diameter: 0.16mm or more Insulating coating material: PVC (heat-resistant)
Spring clamp terminal block for I/O	Stranded wire 0.08 to 1.5mm ² (28 to 16 AWG) ² Wire strip length: 8 to 11mm
Applicable wire size	TE0.5 [Applicable wire size: 0.5mm ²] TE0.75 [Applicable wire size: 0.75mm ²] TE1 [Applicable wire size: 0.9 to 1.0mm ²] TE1.5 [Applicable wire size: 1.25 to 1.5mm ²]

¹ For how to press connectors, refer to the CC-Link System Compact Type Remote I/O Module User's Manual (SH(NA)-4007).
² Insert one wire per terminal.

外部接続 External connection

端子台 Terminal block

Pin number	Signal name
1	DA
2	DB
3	DG
4	Empty
5	SLD
1	FG
2	+24V (UNIT)
3	24G (UNIT)
4	Empty
5	Empty

端子台 Terminal block	A 列 Column A	B 列 Column B	C 列 Column C
1	Empty	1 COM1+	1 COM1-
2	X0	2 COM1+	2 COM1-
3	X1	3 COM1+	3 COM1-
4	X2	4 COM1+	4 COM1-
5	X3	5 COM1+	5 COM1-
6	X4	6 COM1+	6 COM1-
7	X5	7 COM1+	7 COM1-
8	X6	8 COM1+	8 COM1-
9	X7	9 COM1+	9 COM1-
10	X8	10 COM1+	10 COM1-
11	X9	11 COM1+	11 COM1-
12	XA	12 COM1+	12 COM1-
13	XB	13 COM1+	13 COM1-
14	XC	14 COM1+	14 COM1-
15	XD	15 COM1+	15 COM1-
16	XE	16 COM1+	16 COM1-
17	XF	17 COM1+	17 COM1-
18	Empty	18 COM2+	18 COM2-
19	Y10	19 COM2+	19 Empty
20	Y11	20 COM2+	20 Empty
21	Y12	21 COM2+	21 Empty
22	Y13	22 COM2+	22 Empty
23	Y14	23 COM2+	23 Empty
24	Y15	24 COM2+	24 Empty
25	Y16	25 COM2+	25 Empty
26	Y17	26 COM2+	26 Empty
27	Y18	27 COM2+	27 Empty
28	Y19	28 COM2+	28 Empty
29	Y1A	29 COM2+	29 Empty
30	Y1B	30 COM2+	30 Empty
31	Y1C	31 COM2+	31 Empty
32	Y1D	32 COM2+	32 Empty
33	Y1E	33 COM2+	33 Empty
34	Y1F	34 COM2+	34 Empty

ユニット正面から見た場合 Viewed from the front of the module

* 1 電源・FG用ワンタッチコネクタの端子には必ず無配線のプラグを装着してください。
Attach an unwired connector plug to an unused one-touch connector for power supply and FG.

6. 改正中国 RoHS による電器電子製品中の有害物質使用制限表示

「电器电子产品有害物质限制使用标识要求」の表示方式



Note: This symbol mark is for China only.

含有有害6物質の名称、含有量、含有部品
本製品中所含有の有害6物質の名称、含有量、含有部品如下表所示。
製品中有害物質の名称及含量

部品名称	有害物質	鉛 (Pb)	汞 (Hg)	銅 (Cd)	六価クロム (Cr(VI))	多環芳香族 (PBB)	多環二芳香族 (PBDE)
印刷基板		○	○	○	○	○	○
外壳		○	○	○	○	○	○

本表格依据SJ/T 11364 的规定编制。
○: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572 规定的限量要求以下。
×: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572 规定的限量要求。