

## TECHNICAL BULLETIN

[ 1 / 1 ]

[Issue No.] GOT-A-0151

[Title] Cleaning and Disinfecting the GOT Screen

[Date of Issue] April 2020


[Relevant Models] GOT2000 Series, GOT1000 Series

Thank you for your continued support of Mitsubishi Electric Graphic Operation Terminal (GOT). To ensure cleanliness of the GOT, we ask you to clean and disinfect the GOT screen according to the following instructions.

### 1. Cleaning and disinfecting the GOT

- (1) For your safety, be sure to turn off the GOT before cleaning and disinfecting the surface.
- (2) Carefully wipe the GOT screen with a soft cloth moistened with neutral detergent or ethanol.  
Do not apply too much disinfectant to the cloth.  
If you use alcohol for disinfection, the main component of the alcohol must be ethanol or isopropyl alcohol.
- (3) Do not spray disinfectant directly to the GOT because doing so may cause electrical failure of the GOT and peripheral devices.
- (4) After wiping the surface, dry the GOT completely before turning it on.

Clean

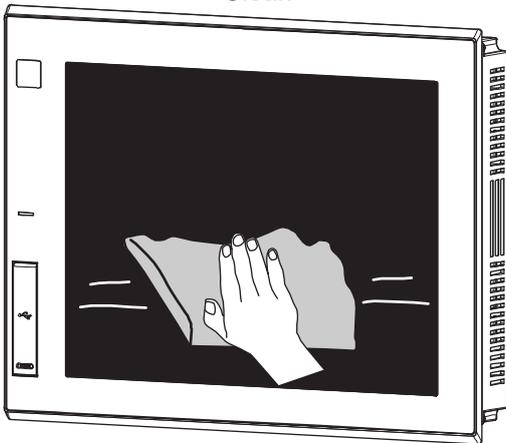

### 2. Precautions

Do not use the following solvents.

Solvents may deform the protective sheet, dissolve the surface, or peel the paint on the surface.

- Chlorine-based cleaners (bleach or other solvents)
- Peroxides (including hydrogen peroxide)
- Acetone, ammonia, paint thinner, benzene, methylene chloride, toluene, or other solvents

### REVISIONS

Version	Print date	Revision
-	April 2020	- First edition