


## Programmable Controller

---

# Transition from MELSEC-I/OLINK to AnyWire DB A20 Handbook

---

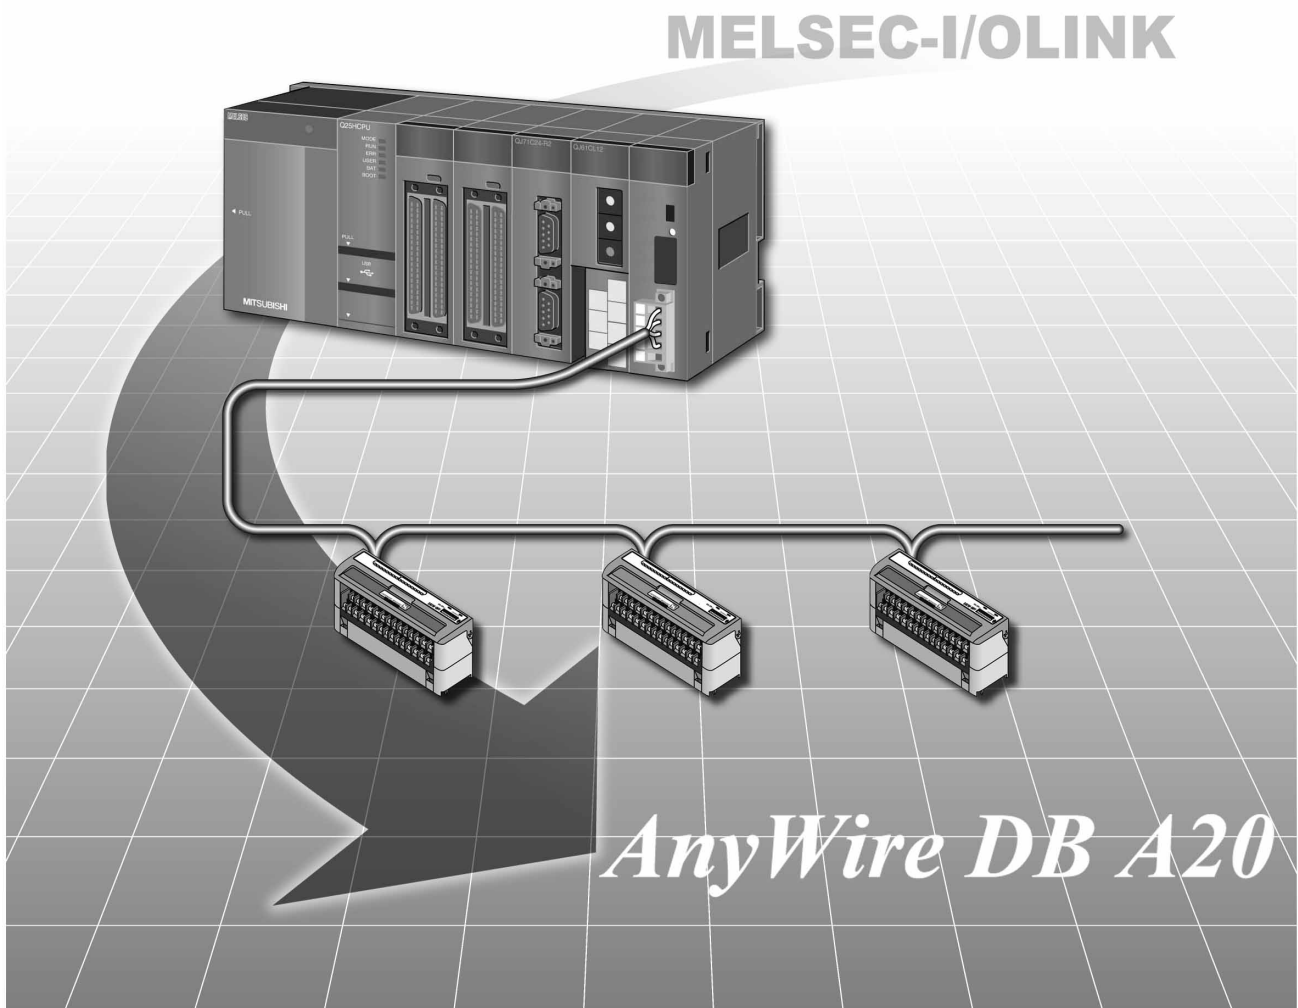



## ● SAFETY PRECAUTIONS ●

(Read these precautions before using this product.)

Before using products introduced in this handbook, please read relevant manuals and replacement handbooks carefully and pay full attention to safety to handle the product correctly.

The precautions given in this handbook are concerned with products introduced in this handbook only. For the safety precautions of the programmable controller system, refer to the user's manual for the CPU module used.

In this handbook, the safety precautions are classified into two levels: "⚠ WARNING" and "⚠ CAUTION".



Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.



Indicates that incorrect handling may cause hazardous conditions, resulting in minor or moderate injury or property damage.

Under some circumstances, failure to observe the precautions given under "⚠ CAUTION" may lead to serious consequences.

Observe the precautions of both levels because they are important for personal and system safety.

Make sure that the end users read this handbook and then keep the handbook in a safe place for future reference.

## When the QJ51AW12D2 is used

### [Design Precautions]

#### **WARNING**

- An AnyWire DB A20 system has no control function for ensuring safety.
- When connecting a peripheral with the CPU module or a personal computer with an intelligent function module to modify data of a running programmable controller, configure an interlock circuit in the sequence program to ensure that the entire system will always operate safely. For other forms of control (such as program modification or operating status change) of a running programmable controller, read the relevant manuals carefully and ensure that the operation is safe before proceeding. Especially, when a remote programmable controller is controlled by an external device, immediate action cannot be taken if a problem occurs in the programmable controller due to a communication failure. To prevent this, configure an interlock circuit in the sequence program, and determine corrective actions to be taken between the external device and CPU module in case of a communication failure.
- Do not write any data to the "system area" of the buffer memory in the intelligent function module. Also, do not use any "use prohibited" signals as an output signal from the CPU module to each module. Doing so may cause malfunction of the programmable controller system.

### [Design Precautions]

#### **CAUTION**

- Although an AnyWire DB A20 system features high noise immunity, keep a distance of 100mm or more between the transmission cables or I/O cables and the high-voltage cables or power cables. Failure to do so may cause malfunction.
- Configure safety circuits, such as an emergency stop circuit and interlock circuit, external to the AnyWire DB A20 system.

## [Installation Precautions]

### **WARNING**

- Use the programmable controller in an environment that meets the general specifications in the user's manual for the CPU module used.  
Failure to do so may result in electric shock, fire, malfunction, or damage to or deterioration of the product.
- To mount the module, while pressing the module mounting lever located in the lower part of the module, fully insert the module fixing projection(s) into the hole(s) in the base unit and press the module until it snaps into place.  
Incorrect interconnection may cause malfunction, failure, or drop of the module.  
When using the programmable controller in an environment of frequent vibrations, fix the module with a screw.  
Tighten the screw within the specified torque range.  
Undertightening can cause drop of the screw, short circuit, or malfunction.  
Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.
- Shut off the external power supply (all phases) used in the system before mounting or removing a module.  
Failure to do so may result in damage to the product.
- Do not directly touch any conductive parts and electronic components of the module.  
Doing so can cause malfunction or failure of the module.

## [Wiring Precautions]

### CAUTION

- Tighten the terminal block screws within the specified torque range.  
Undertightening can cause short circuit, fire, or malfunction.  
Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.
- Prevent foreign matter such as dust or wire chips from entering the module.  
Such foreign matter can cause a fire, failure, or malfunction.
- A protective film is attached to the top of the module to prevent foreign matter, such as wire chips, from entering the module during wiring.  
Do not remove the film during wiring.  
Remove it for heat dissipation before system operation.
- Incorrect wiring may damage modules and external devices.  
Adjust a cable length and a module position to prevent disconnection of a connector type terminal block or a cable.
- Do not solder stranded wires of a cable when connecting them to the terminal block. Doing so may cause poor contact.
- The power supply voltage of remote slave modules may be insufficient due to a voltage drop in the power supply line. Connect an external power supply so that the voltage of remote slave modules is ensured.
- Do not apply the 24VDC power before wiring the entire AnyWire DB A20 system. If the power is applied before wiring, normal data transmission is not guaranteed.
- Use 24VDC stabilized power supplies for devices in the AnyWire DB A20 system.
- Do not install the control lines or communication cables together with the main circuit lines or power cables.  
Failure to do so may result in malfunction due to noise.
- Place the cables in a duct or clamp them.  
If not, dangling cable may swing or inadvertently be pulled, resulting in damage to the module or cables or malfunction due to poor contact.
- When disconnecting the cable from the module, do not pull the cable by the cable part.  
For the cable connected to the terminal block, loosen the terminal screw.  
Pulling the cable connected to the module may result in malfunction or damage to the module or cable.

**[Startup and Maintenance Precautions]** **WARNING**

- Do not touch any terminal while power is on. Doing so will cause electric shock or malfunction.
- Shut off the external power supply (all phases) used in the system before cleaning the module or retightening the terminal screws or module fixing screws.  
Failure to do so may result in electric shock.  
Undertightening the terminal screws can cause short circuit or malfunction.  
Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.

**[Startup and Maintenance Precautions]** **CAUTION**

- Do not disassemble or modify the modules. Doing so may cause failure, malfunction, injury, or a fire.
- Shut off the external power supply (all phases) used in the system before mounting or removing a module.  
Failure to do so may cause the module to fail or malfunction.
- After the first use of the product, do not mount/remove the module to/from the base unit, and the terminal block to/from the module more than 50 times (IEC 61131-2 compliant) respectively.  
Exceeding the limit of 50 times may cause malfunction.
- Before handling the module, touch a grounded metal object to discharge the static electricity from the human body.  
Failure to do so may cause the module to fail or malfunction.

**[Disposal Precautions]** **CAUTION**

- When disposing of this product, treat it as industrial waste.

## When the LJ51AW12D2 is used

### [Design Precautions]

#### **WARNING**

- An AnyWire DB A20 system has no control function for ensuring safety.
- When connecting a peripheral with the CPU module or a personal computer with an intelligent function module to modify data of a running programmable controller, configure an interlock circuit in the sequence program to ensure that the entire system will always operate safely. For other forms of control (such as program modification or operating status change) of a running programmable controller, read the relevant manuals carefully and ensure that the operation is safe before proceeding. Especially, when a remote programmable controller is controlled by an external device, immediate action cannot be taken if a problem occurs in the programmable controller due to a communication failure. To prevent this, configure an interlock circuit in the sequence program, and determine corrective actions to be taken between the external device and CPU module in case of a communication failure.
- Do not write any data to the "system area" of the buffer memory in the intelligent function module. Also, do not use any "use prohibited" signals as an output signal from the CPU module to each module. Doing so may cause malfunction of the programmable controller system.

### [Design Precautions]

#### **CAUTION**

- Do not install the control lines or communication cables together with the main circuit lines or power cables.  
Keep a distance of 100mm or more between them. Failure to do so may result in malfunction due to noise.
- Configure safety circuits, such as an emergency stop circuit and interlock circuit, external to the AnyWire DB A20 system.



**[Installation Precautions]** **WARNING**

- Shut off the external power supply (all phases) used in the system before mounting or removing the module.  
Failure to do so may result in electric shock or cause the module to fail or malfunction.

**[Installation Precautions]** **CAUTION**

- Use the programmable controller in an environment that meets the general specifications in the Safety Guidelines provided with the CPU module or head module. Failure to do so may result in electric shock, fire, malfunction, or damage to or deterioration of the product.
- To interconnect modules, engage the respective connectors and securely lock the module joint levers. Incorrect interconnection may cause malfunction, failure, or drop of the module.
- Tighten the screws within the specified torque range. Undertightening can cause drop of the screw, short circuit, or malfunction. Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.
- Do not directly touch any conductive parts and electronic components of the module.  
Doing so can cause malfunction or failure of the module.

## [Wiring Precautions]

### CAUTION

- Tighten the terminal block screws within the specified torque range.  
Undertightening can cause short circuit, fire, or malfunction.  
Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.
- Prevent foreign matter such as dust or wire chips from entering the module.  
Such foreign matter can cause a fire, failure, or malfunction.
- A protective film is attached to the top of the module to prevent foreign matter, such as wire chips, from entering the module during wiring.  
Do not remove the film during wiring.  
Remove it for heat dissipation before system operation.
- Incorrect wiring may damage modules and external devices.  
Adjust a cable length and a module position to prevent disconnection of a connector type terminal block or a cable.
- Do not solder stranded wires of a cable when connecting them to the terminal block. Doing so may cause poor contact.
- The power supply voltage of remote slave modules may be insufficient due to a voltage drop in the power supply line. Connect an external power supply so that the voltage of remote slave modules is ensured.
- Do not apply the 24VDC power before wiring the entire AnyWire DB A20 system. If the power is applied before wiring, normal data transmission is not guaranteed.
- Use 24VDC stabilized power supplies for devices in the AnyWire DB A20 system.
- Do not install the control lines or communication cables together with the main circuit lines or power cables.  
Failure to do so may result in malfunction due to noise.
- Place the cables in a duct or clamp them.  
If not, dangling cable may swing or inadvertently be pulled, resulting in damage to the module or cables or malfunction due to poor contact.
- When disconnecting the cable from the module, do not pull the cable by the cable part.  
For the cable connected to the terminal block, loosen the terminal screw.  
Pulling the cable connected to the module may result in malfunction or damage to the module or cable.

**[Startup and Maintenance Precautions]** **WARNING**

- Do not touch any terminal while power is on. Doing so will cause electric shock or malfunction.
- Shut off the external power supply (all phases) used in the system before cleaning the module or retightening the terminal block screws. Failure to do so may result in electric shock.

**[Startup and Maintenance Precautions]** **CAUTION**

- Do not disassemble or modify the module.  
Doing so may cause failure, malfunction, injury, or a fire.
- Shut off the external power supply (all phases) used in the system before mounting or removing a module.  
Failure to do so may cause the module to fail or malfunction.
- Tighten the terminal block screws within the specified torque range. Undertightening can cause drop of the component or wire, short circuit, or malfunction. Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.
- After the first use of the product (module, display unit, and terminal block), the number of connections/disconnections is limited to 50 times (in accordance with IEC 61131-2).  
Exceeding the limit may cause malfunction.
- Before handling the module, touch a conducting object such as a grounded metal to discharge the static electricity from the human body.  
Failure to do so may cause the module to fail or malfunction.

**[Disposal Precautions]** **CAUTION**

- When disposing of this product, treat it as industrial waste.

## ● CONDITIONS OF USE FOR THE PRODUCT ●

- (1) Mitsubishi programmable controller ("the PRODUCT") shall be used in conditions;
  - i) where any problem, fault or failure occurring in the PRODUCT, if any, shall not lead to any major or serious accident; and
  - ii) where the backup and fail-safe function are systematically or automatically provided outside of the PRODUCT for the case of any problem, fault or failure occurring in the PRODUCT.
- (2) The PRODUCT has been designed and manufactured for the purpose of being used in general industries.

MITSUBISHI SHALL HAVE NO RESPONSIBILITY OR LIABILITY (INCLUDING, BUT NOT LIMITED TO ANY AND ALL RESPONSIBILITY OR LIABILITY BASED ON CONTRACT, WARRANTY, TORT, PRODUCT LIABILITY) FOR ANY INJURY OR DEATH TO PERSONS OR LOSS OR DAMAGE TO PROPERTY CAUSED BY the PRODUCT THAT ARE OPERATED OR USED IN APPLICATION NOT INTENDED OR EXCLUDED BY INSTRUCTIONS, PRECAUTIONS, OR WARNING CONTAINED IN MITSUBISHI'S USER, INSTRUCTION AND/OR SAFETY MANUALS, TECHNICAL BULLETINS AND GUIDELINES FOR the PRODUCT.

("Prohibited Application")

Prohibited Applications include, but not limited to, the use of the PRODUCT in;

- Nuclear Power Plants and any other power plants operated by Power companies, and/or any other cases in which the public could be affected if any problem or fault occurs in the PRODUCT.
- Railway companies or Public service purposes, and/or any other cases in which establishment of a special quality assurance system is required by the Purchaser or End User.
- Aircraft or Aerospace, Medical applications, Train equipment, transport equipment such as Elevator and Escalator, Incineration and Fuel devices, Vehicles, Manned transportation, Equipment for Recreation and Amusement, and Safety devices, handling of Nuclear or Hazardous Materials or Chemicals, Mining and Drilling, and/or other applications where there is a significant risk of injury to the public or property.

Notwithstanding the above, restrictions Mitsubishi may in its sole discretion, authorize use of the PRODUCT in one or more of the Prohibited Applications, provided that the usage of the PRODUCT is limited only for the specific applications agreed to by Mitsubishi and provided further that no special quality assurance or fail-safe, redundant or other safety features which exceed the general specifications of the PRODUCTS are required. For details, please contact the Mitsubishi representative in your region.

## REVISIONS

\* The handbook number is given on the bottom left of the back cover.

Print Date	* Handbook Number	Revision
Jan. 2013	L(NA)08263ENG-A	First edition
May 2015	L(NA)08263ENG-B	Change Chapter 7 to Appendix 1, Appendix1 to Appendix 2 Partial correction SAFETY PRECAUTIONS, GENERIC TERMS AND ABBREVIATIONS
Feb. 2016	L(NA)08263ENG-C	Partial correction Cover, WARRANTY
Feb. 2017	L(NA)08263ENG-D	Addition of modules to be replaced LJ51AW12D2 Partial correction SAFETY PRECAUTIONS, GENERIC TERMS AND ABBREVIATIONS, Section 1.3, 2.1, 2.2.1, 3.2, 4.1, 5.1.2, Appendix 2.1
Dec. 2018	L(NA)08263ENG-E	Partial correction Cover
Dec. 2018	L(NA)08263ENG-F	Partial correction Front cover, back cover

Japanese Handbook Version L08249-D

This handbook confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this handbook.

# CONTENTS

SAFETY PRECAUTIONS .....	A - 1
CONDITIONS OF USE FOR THE PRODUCT .....	A - 10
REVISIONS .....	A - 11
CONTENTS .....	A - 12
GENERIC TERMS AND ABBREVIATIONS .....	A - 15

---

## **CHAPTER 1 INTRODUCTION** **1 - 1 to 1 - 2**

---

1.1 Replacement with AnyWire DB A20 .....	1 - 1
1.2 Precautions for Replacement .....	1 - 2
1.3 Features of AnyWire DB A20 .....	1 - 2

---

## **CHAPTER 2 PERFORMANCE SPECIFICATIONS COMPARISONS** **2 - 1 to 2 - 4**

---

2.1 Performance Specifications Comparison of MELSEC-I/OLINK and AnyWire DB A20 .....	2 - 1
2.2 Wiring for AnyWire DB A20 .....	2 - 3
2.2.1 Transmission distance .....	2 - 3
2.2.2 Terminator connection .....	2 - 3
2.2.3 Branch of transmission lines (transmission distance: 1km) .....	2 - 4

---

## **CHAPTER 3 FUNCTIONAL COMPARISONS** **3 - 1 to 3 - 2**

---

3.1 Functional Comparisons of MELSEC-I/OLINK and AnyWire DB A20 .....	3 - 1
3.2 Master Module Switch Comparisons .....	3 - 2

---

## **CHAPTER 4 REPLACING THE MASTER MODULE** **4 - 1 to 4 - 2**

---

4.1 List of Alternative Master Module Models .....	4 - 1
--	-------

---

## **CHAPTER 5 PROGRAMS COMPARISONS** **5 - 1 to 5 - 6**

---

5.1 I/O Signals .....	5 - 1
5.1.1 MELSEC-I/OLINK .....	5 - 1
5.1.2 AnyWire DB A20 .....	5 - 3

---

## **CHAPTER 6 REPLACING THE I/O MODULES** **6 - 1 to 6 - 40**

---

6.1 List of Alternative I/O Module Models .....	6 - 1
6.2 I/O Module Specifications Comparisons .....	6 - 6
6.2.1 Input module specifications comparisons .....	6 - 6
6.2.2 Output module specifications .....	6 - 12
6.2.3 I/O module specifications comparisons .....	6 - 18
6.3 Applicable Crimping Terminal .....	6 - 40

**APPENDICES****APPX- 1 to APPX - 3**

---

Appendix 1 External Dimensions .....	APPX - 1
Appendix 2 Relevant Manuals .....	APPX - 1
Appendix 2.1 Replacement handbooks .....	APPX - 1
Appendix 2.2 MELSEC-I/OLINK .....	APPX - 2
Appendix 2.3 AnyWire DB A20 .....	APPX - 2

---

- For the products shown in handbooks for transition, catalogues, and transition examples, refer to the manuals for the relevant products and check the detailed specifications, precautions for use, and restrictions before replacement.

For the products manufactured by Mitsubishi Electric Engineering Co., Ltd., Mitsubishi Electric System & Service Co., Ltd., and other companies, refer to the catalogue for each product and check the detailed specifications, precautions for use, and restrictions before use.

The manuals and catalogues for our products, products manufactured by Mitsubishi Electric Engineering Co., Ltd., and Mitsubishi Electric System & Service Co., Ltd. are shown in Appendix of each handbook for transition.

- Products shown in this handbook are subject to change without notice.



## GENERIC TERMS AND ABBREVIATIONS

Unless otherwise specified, this handbook uses the following generic terms and abbreviations.

Generic term/abbreviation	Description
<b>■ Series</b>	
A series	The abbreviation for large types of Mitsubishi Electric MELSEC-A series programmable controllers
AnS series	The abbreviation for compact types of Mitsubishi Electric MELSEC-A series programmable controllers
A/AnS series	A generic term for A series and AnS series
QnA series	The abbreviation for large types of Mitsubishi Electric MELSEC-QnA series programmable controllers
QnAS series	The abbreviation for compact types of Mitsubishi Electric MELSEC-QnA series programmable controllers
QnA/QnAS series	A generic term for QnA series and QnAS series
A/AnS/QnA/QnAS series	A generic term for A series, AnS series, QnA series, and QnAS series
Q series	The abbreviation for Mitsubishi Electric MELSEC-Q series programmable controllers
L series	The abbreviation for Mitsubishi Electric MELSEC-L series programmable controllers
<b>■ CPU module type</b>	
CPU module	A generic term for A series, AnS series, QnA series, QnAS series, Q series, and L series CPU modules
Process CPU	A generic term for the Q02PHCPU, Q06PHCPU, Q12PHCPU, and Q25PHCPU
Redundant CPU	A generic term for the Q12PRHCPU and Q25PRHCPU
Universal model QCPU	A generic term for the Q00U(J)CPU, Q01UCPU, Q02UCPU, Q03UD(E)CPU, Q03UDVCPU, Q04UD(E)HCPU, Q04UDVCPU, Q06UD(E)HCPU, Q06UDVCPU, Q10UD(E)HCPU, Q13UD(E)HCPU, Q13UDVCPU, Q20UD(E)HCPU, Q26UD(E)HCPU, and Q26UDVCPU
LCPU	A generic term for the L02SCPU, L02SCPU-P, L02CPU, L02CPU-P, L06CPU, L06CPU-P, L26CPU, L26CPU-P, L26CPU-BT, and L26CPU-PBT
<b>■ CPU module model</b>	
ACPU	A generic term for MELSEC-A series CPU modules
AnSCPU	A generic term for MELSEC-AnS series CPU modules
AnNCPUP	A generic term for the A1NCPUP, A1NCPUP21/R21, A1NCPUP21-S3, A2NCPUP, A2NCPUP-S1, A2NCPUP21/R21, A2NCPUP21/R21-S1, A2NCPUP21-S3(S4), A3NCPUP, A3NCPUP21/R21, and A3NCPUP21-S3
AnACPU	A generic term for the A2ACPU, A2ACPU-S1, A3ACPU, A2ACPU21/R21, A2ACPU21/R21-S1, and A3ACPU21/R21
AnUCPU	A generic term for the A2UCPU, A2UCPU-S1, A3UCPU, and A4UCPU
AnUS(H)CPU	A generic term for the A2USCPU, A2USCPU-S1, and A2USHCPU-S1
A/AnSCPU	A generic term for MELSEC-A series and -AnS series CPU modules
AnN/AnACPU	A generic term for the AnNCPUP and AnACPU
AnN/AnA/AnSCPU	A generic term for the AnNCPUP, AnACPU, and AnSCPU
QnACPU	A generic term for MELSEC-QnA series CPU modules
QnASCPU	A generic term for MELSEC-QnAS series CPU modules
QnA/QnASCPU	A generic term for MELSEC-QnA series and -QnAS series CPU modules
A/AnS/QnA/QnASCPU	A generic term for MELSEC-A series, -AnS series, -QnA series, and -QnAS series CPU modules
QCPU	A generic term for MELSEC-Q series CPU modules
LCPU	A generic term for MELSEC-L series CPU modules
<b>■ Module model related to AnyWire DB A20</b>	
Master module	A generic term for the QJ51AW12D2 and LJ51AW12D2
QJ51AW12D2	The abbreviation for the AnyWire DB A20 master module, QJ51AW12D2
LJ51AW12D2	The abbreviation for the AnyWire DB A20 master module, LJ51AW12D2
AnyWire DB A20	An original transmission system provided by Anywire Corporation

# 1 INTRODUCTION

## 1.1 Replacement with AnyWire DB A20

The MELSEC-Q and L series do not have an MELSEC-I/OLINK master module. Therefore, the alternatives are the AnyWire DB A20 or the CC-Link/LT. Features for replacement are listed in the following table.

Replacing MELSEC-I/OLINK with AnyWire DB A20 or CC-Link/LT

○: Compatible, ×: Not compatible

Item	Replacement with AnyWire DB A20		Replacement with CC-Link/LT	
	Compati- bility	Description	Compati- bility	Description
External power supply	○	The existing I/OLINK external power supply can be used.	×	A power supply adapter is necessary.
Connection type	○	T-branch system, or tree branch system	○	T-branch system
Connection cable	○	The existing I/OLINK cables can be used.	×	New cables must be installed.
I/O module type	○	4, 8, or 16 points Input module/Output module//I/O combined module	○	2, 4, or 8 points Input module/Output module//I/O combined module
Programming	×	The master module occupies 32 points. The I/O module address becomes the specified device by the FROM/TO instruction.	○	XY address of the master module becomes XY address of the I/O module. Needless to change address (up to 64 points)

### ☒ Point

AnyWire products are not available in some countries. For details, please consult your local Mitsubishi representative.

This transition handbook explains replacement of the MELSEC-I/OLINK with the AnyWire DB A20.

For replacement with the CC-Link/LT, refer to the following transition handbook.

Transition from MELSEC-I/OLINK to CC-Link/LT Handbook


.....

## 1.2 Precautions for Replacement

- (1) Before replacing MELSEC-I/OLINK with AnyWire DB A20, refer to the manuals for each AnyWire DB A20 module, and check the functions, specifications, and how to use the modules.
- (2) After replacing MELSEC-I/OLINK with AnyWire DB A20, check the operation of the entire system before starting the actual operation.

## 1.3 Features of AnyWire DB A20

The transmission distance can be selected from 50m/200m/1km/3km using the DIP switch.  
 Up to 512 remote input points and 512 remote output points can be controlled by one QJ51AW12D2 or LJ51AW12D2 (in the standard setting).  
 Disconnections can be detected even when the wiring is branched.

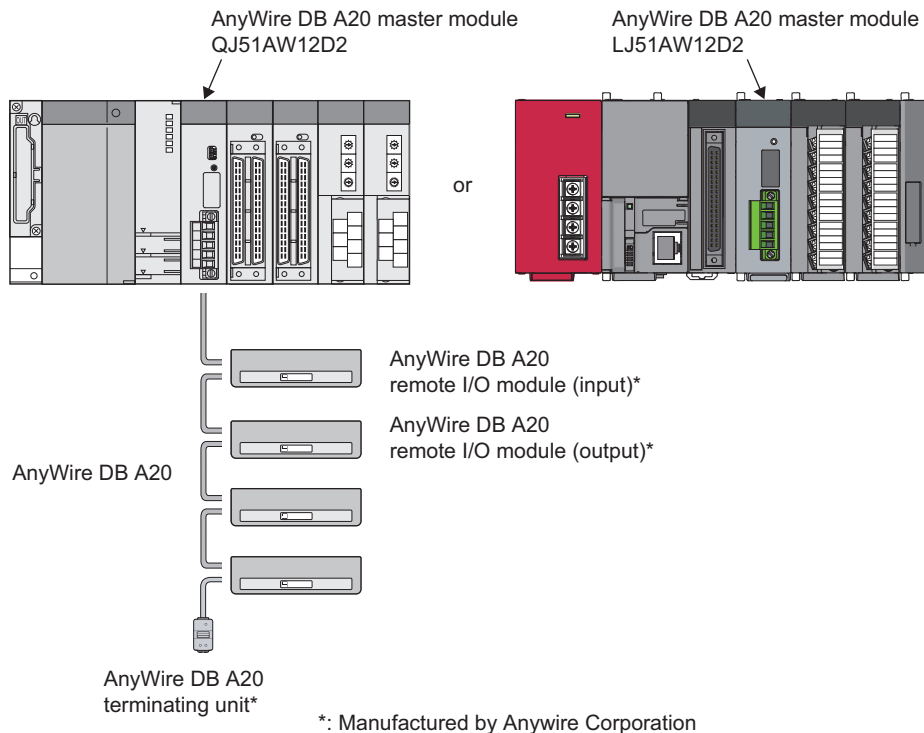

## 2 PERFORMANCE SPECIFICATIONS COMPARISONS

### 2.1 Performance Specifications Comparison of MELSEC-I/OLINK and AnyWire DB A20

○ : Compatible, △ : Partially changed, × : Not compatible

Item		Specifications		Com- pati- bility	Precautions for replace- ment
		MELSEC-I/OLINK	AnyWire DB A20		
Per single master station	Max. number of link stations	16 stations (1 station 4 points)	128 stations	○	
	Max. number of control I/O points	128 points (when the same number is used on X and Y)	1024 points (when the same number is used on X and Y)	○	
Link scan time (Transmission cycle time)		Approx. 5.4ms	2.7ms (for 128 points) <sup>*1</sup>	○	
Overall distance		200m	125kHz: 50m 31.3kHz: 200m 7.8kHz: 1km 2kHz: 3km	○	1kHz is equivalent to 1kbps.
Communication speed		38.4kbps	125kHz/31.3kHz/7.8kHz/2kHz	△	Select the speed based on the existing overall distance. 1kHz is equivalent to 1kbps.
Error control method		Parity check	Double-check system	△	The error control method is different, but an error check function is provided.
Network Topology		Bus (T-branch available)	Bus (Multidrop system, T-branch system, star system, or tree system)	○	
Connection cable		Twisted pair cable (0.75mm <sup>2</sup> ), Cabtire cable (0.75mm <sup>2</sup> )	General-purpose 2-/4-wire cable (VCTF, VCF 0.75 to 1.25mm <sup>2</sup> ), General-purpose wire (0.75 to 1.25mm <sup>2</sup> ), Dedicated flat cable (0.75mm <sup>2</sup> ), (When the transmission distance exceeds 200m, use wires with a diameter of 0.9 to 1.25mm <sup>2</sup> .)	○	Crimping terminals can be used. However, the communication lines and power lines connected to the master module must be processed to connect to terminals.
Terminating resistor (terminator)		Not required	Required	×	A terminating resistor is necessary.
External power supply to master module	Voltage	21.6 to 27.6VDC	24VDC +15 to -10% (21.6 to 27.6VDC) Ripple voltage 0.5Vp-p or less	△	Because the external power supply current has increased, the current capacity must be reviewed.
	Current	0.09A	0.5A (When 128 slave modules are connected and the load current is not included)		
Number of occupied I/O points of master module		16, 32, 48, or 64 points (I/O assignment: Output 16/32/64 points)	32 points (I/O assignment: intelligent 32 points)	△	The program and parameters must be changed.
Internal current consumption of master module		0.115A	QJ51AW12D2: 0.5A LJ51AW12D2: 0.2A	△	Internal current consumption of 5VDC must be recalculated.

\*1 The transmission cycle time of the AnyWire DB A20 master module differs depending on the number of transmission points setting or the transmission clock. For details, refer to the following table.

Max. number of transmission points setting	Transmission cycle time (ms)			
	125kHz	31.3kHz	7.8kHz	2kHz
	(50m)	(200m)	(1km)	(3km)
64 points (32 points × 2)	0.42	1.7	6.8	24.8
128 points (64 points × 2)	0.7	2.7	10.9	40.7
256 points (128 points × 2)	1.2	4.8	19.1	72.4
384 points (192 points × 2)	1.7	6.8	27.3	104.2
512 points (256 points × 2)	2.2	8.9	35.5	135.9
640 points (320 points × 2)	2.7	10.9	43.6	167.6
768 points (384 points × 2)	3.2	13.0	51.8	199.4
896 points (448 points × 2)	3.8	15.0	60.0	231.1
1024 points (512 points × 2)	4.3	17.1	68.2	262.9
2048 points (1024 points × 2)	8.4	33.4	133.8	516.8

## 2.2 Wiring for AnyWire DB A20

### 2.2.1 Transmission distance

Item	Specifications			
Transmission clock	125kHz <sup>*1</sup>	31.3kHz	7.8kHz	2kHz
Max. transmission distance (total length)	50m	200m	1km	3km
Number of connectable modules	Up to 128	Up to 128	Up to 128	Up to 32 <sup>*2</sup>

\*1 When setting the transmission clock at 125kHz using the QJ51AW12D2 with a serial number (sixth digit) 5 or earlier, use the product under the following conditions.


- External power supply voltage range: 21.6VDC to 25.2VDC
- Operating ambient temperature: 0 to 50°C

\*2 Up to 64 modules can be connected within 2km.

### 2.2.2 Terminator connection

To ensure more stable transmission, connect the terminating resistor (AT2 manufactured by Anywire Corporation) at the end of the transmission line.

#### ■ Terminating unit

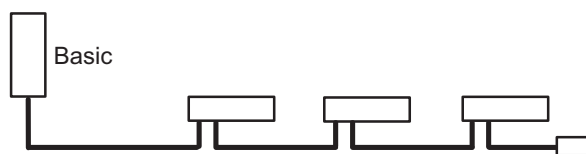


**Important** Connect a terminating unit at the end of a line for one master module.


Transmission distance	50m (total length)
	200m (total length)
	1km (total length)
	3km (total length)

The setting applies to all the transmission speeds.

## 2.2.3 Branch of transmission lines (transmission distance: 1km)

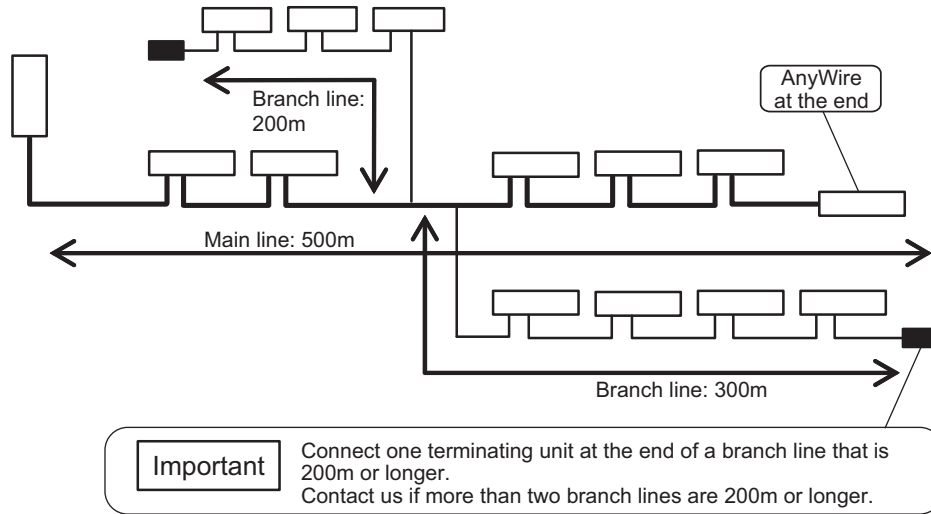

### ■ Total length

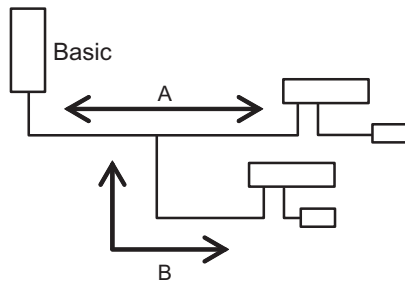

The total length of the transmission distance for the AnyWire DB A20 can be calculated from  $A + B$ . Note that the total length should not exceed the maximum transmission distance set for the system to branch lines.

## 3 FUNCTIONAL COMPARISONS

### 3.1 Functional Comparisons of MELSEC-I/OLINK and AnyWire DB A20

○ : Compatible, △ : Partially changed, × : Not compatible

Item	Specifications		Compat- ibility	Precautions for replacement
	MELSEC-I/OLINK	AnyWire DB A20		
Remote station communication	Communication with up to 16 slave stations is possible.	Communication with up to 128 slave stations is possible.	○	
Remote station address	XY address of the master station becomes the XY address of the remote station module.	I/O information is stored in the buffer memory. The device that data are read from and written to the buffer memory by the FROM/TO instruction will be assigned to the remote station module address in the program.	×	Program change or different remote station module line numbers are required because the concept of the addresses is different.
RAS function	Detection of faulty station (display)	The LED display (ERROR STATION) on the master station notifies a user of faulty stations.	○	
	Notification method of the error detection to the CPU module	When an error is detected, the CPU module is notified by Fuse blown detection (M 9000). External output is also performed from the RUN A/B terminals on the MELSEC-I/OLINK master module.	△	Change of the sequence program is required because the notifying device differs. If an external output is required, an output signal is necessary.
	Line check	Cable disconnection can be checked by the ON status of the LEDs on the master station and slave stations.	○	
Others	Error check of disconnected station enabled/disabled setting	If there is a station that is not connected, the error check can be disabled by setting the ON LINE STATION switch of the master station to off.	○	Though the setting method differs, a station that is not connected can be detected.



## 3.2 Master Module Switch Comparisons

○ : Compatible, △ : Partially changed, × : Not compatible

Item	Specifications		Compat- ibility	Precautions for replacement
	MELSEC-I/OLINK	AnyWire DB A20		
Number of transmission points	Set the number of occupied points of the master module to 16, 32, 48, or 64 points in the I/O assignment of the parameter. The number of occupied points of the master module becomes the maximum number of connected points.	Set the number of transmission points of the slave module.	△	Setting method is changed from setting of the I/O assignment of parameter to intelligent function switch setting.
Transmission speed	Setting is not required. (The communication speed and transmission distance are fixed.)	Select the transmission speed. Transmission distance is determined depending on the transmission speed.	△	The transmission speed must be set in accordance with the number of slave modules to be connected and the total length of the transmission distance.*1
Double check mode	-	Double check mode is an error control system that compares the current cycle data and the previous cycle data. The data is valid when the comparison result matches.	-	Double check mode is a new function of AnyWire DB A20.
Waveform output method*2	Setting is not required. The transmission waveform is automatically output by switching the operating status of the CPU module to RUN. (The module always receives input signals.)	Based on the setting, the transmission waveform is output by turning on of Module READY (Xn0) or Transmission waveform output command (Yn2).	○	The function of the alternative module becomes equivalent to the one of the former module by turning on of Module READY (Xn0) to output the transmission waveform.
ON LINE STATION	ON LINE STATION is a switch for determining whether to use the remote I/O module or not.	-	△	Stations to be used (remote I/O module or slave module) can be determined by these functions. The setting method differs between former and alternative modules.
Automatic address detection	-	This function allows the master module to automatically recognize an ID (address) of a slave module.		

\*1 Set the transmission speed with the operation mode selector for the QJ51AW12D2. For the LJ51AW12D2, set it on the "Switch Setting for I/O and Intelligent Function Module" window.

\*2 The waveform output method can be set in the LJ51AW12D2 and the QJ51AW12D2 with a serial number (sixth digit) 6 or later.

# 4 REPLACING THE MASTER MODULE

## 4.1 List of Alternative Master Module Models

MELSEC-I/OLINK		Alternative model for AnyWire DB A20	
Product	Model	Model	Remarks (restrictions)
Master module	AJ51T64	QJ51AW12D2	It is recommended to replace the module with the AnyWire DB A20. For details, refer to the user's manual for each module.
	A1SJ51T64	LJ51AW12D2	




# 5 PROGRAMS COMPARISONS

## 5.1 I/O Signals


### 5.1.1 MELSEC-I/OLINK

I/O signals of the MELSEC-I/OLINK will be assigned to the addresses of the connected remote I/O module.

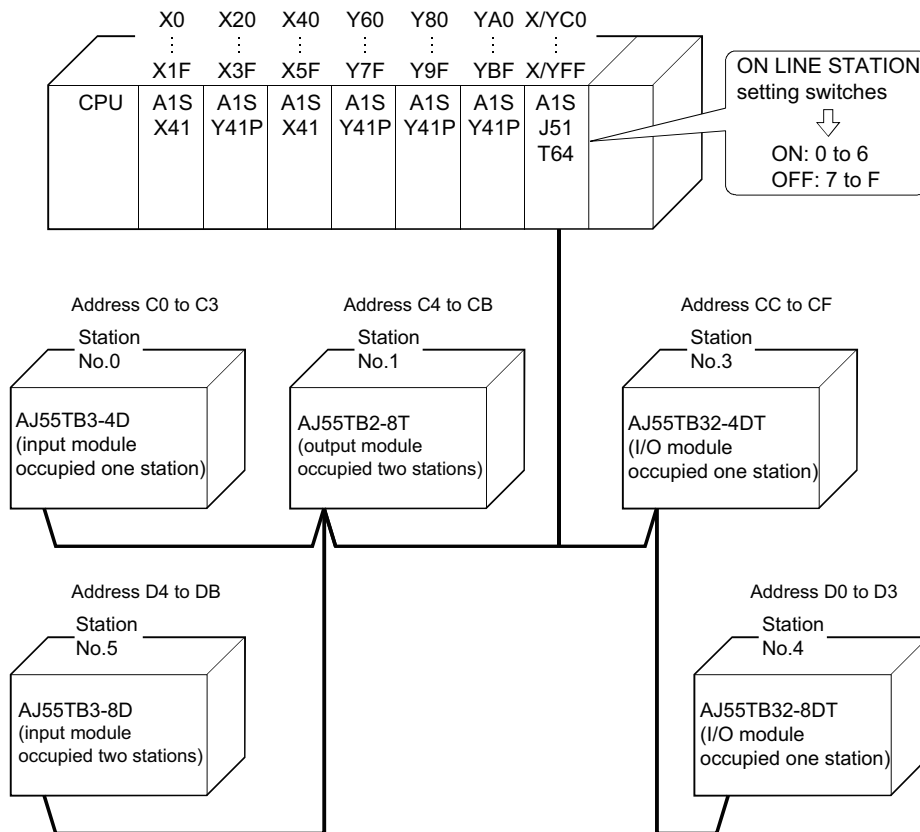

The following table listed addresses for each remote I/O module.

Station No. of remote I/O module	Addresses (Hexadecimal)	Device		Remarks
		X	Y	
0	C0	■		AJ55TB3-4D (input 4-point module)
	1	■		
	2	■		
	3	■		
1	4		■	AJ55TB2-8T (output 8-point module)
	5		■	
	6		■	
	7		■	
2	8		■	AJ55TB32-4DT (input 2-point/output 2-point module) (A 4-point I/O combined module can be used the first half 2 points of both of X and Y. The module cannot be used the second half 2 points.
	9		■	
	A		■	
	B		■	
3	C	■	■	AJ55TB32-8DT (input 4-point/output 4-point module)
	D	■	■	
	E			
	F			
4	D0	■	■	AJ55TB3-8D (input 8-point module)
	1	■	■	
	2	■	■	
	3	■	■	
5	4	■		AJ55TB3-8D (input 8-point module)
	5	■		
	6	■		
	7	■		
6	8	■		
	9	■		
	A	■		
	B	■		
	C			


 The device used is indicated by ■.

## 5.1.2 AnyWire DB A20


Details on the addresses when replacing the I/OLINK are explained by using the module configuration example described in Section 5.1.1.

### ☒ Point

I/O information of the AnyWire DB A20 are stored in the buffer memory. The device that data are read from and written to the buffer memory by the FROM/TO instruction will be assigned to the remote station module address in the program. The program that controls input and output of the I/OLINK remote station must be changed.

#### [System configuration example]

In this example, settings are made to match the addresses of the existing I/OLINK. Since the number of occupied points differ between the existing module and the replacement module, their addresses cannot be assigned in the same way. The addresses in this replacement module is example. They can be assigned as desired according to the system configuration.

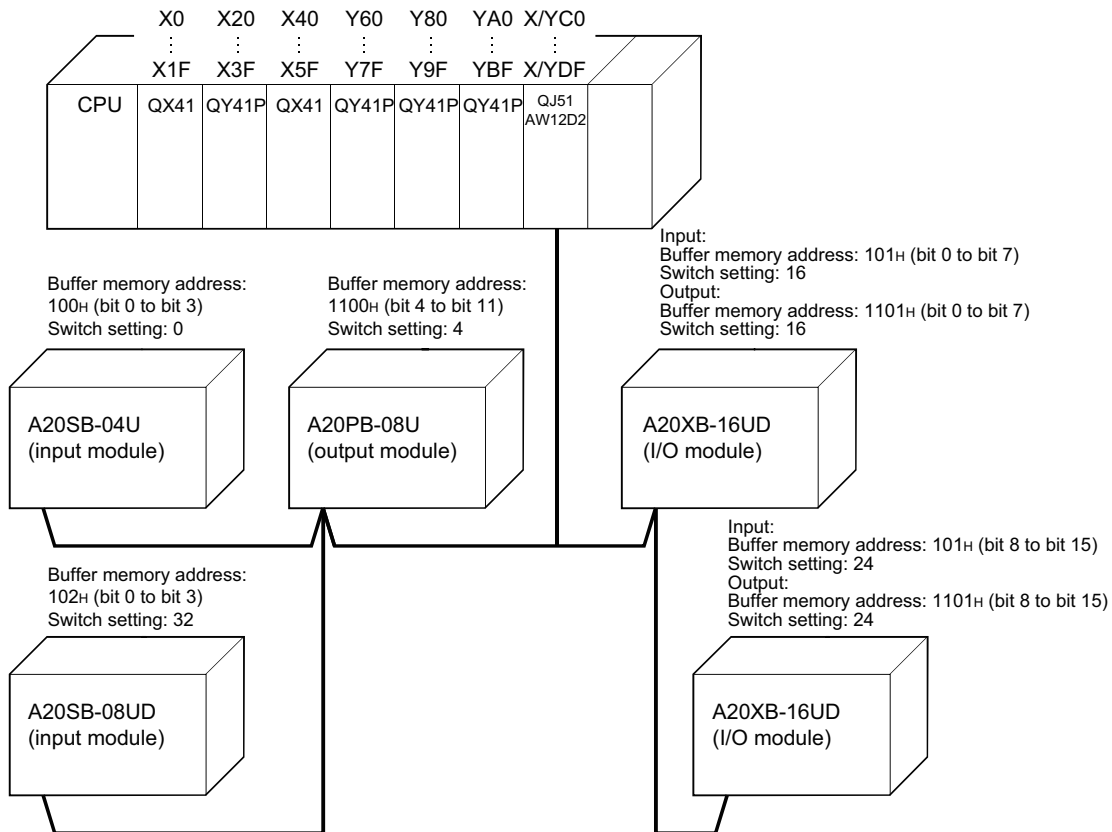

Existing module	Existing address (Refer to configuration in Section 5.1.1.)	Replaced module	Input side address		Output side address	
			Switch setting	Buffer memory address	Switch setting	Buffer memory address
AJ55TB3-4D (input 4 points)	XC0 to XC3	A20SB-04U (input 4 points)	0	100 <sub>H</sub> bit 0 to bit 3	-	
AJ55TB2-8T (input 8 points)	XC4 to XCB	A20PB-08U (input 8 points)	-		4	1100 <sub>H</sub> bit 4 to bit 11
AJ55TB32-4DT (input 2 points/output 2 points) Number of occupied points is 4.	XCC to XCD (XCC to XCF are occupied.)	A20XB-16UD (input 8 points/output 8 points)	16	101 <sub>H</sub> bit 0 to bit 7	-	
	YCC to YCD (YCC to YCF are occupied.)		-		16	1101 <sub>H</sub> bit 0 to bit 7
AJ55TB32-8DT (input 4 points/output 4 points) Number of occupied points is 4.	XD0 to XD3	A20XB-16UD (input 8 points/output 8 points)	24	101 <sub>H</sub> bit 8 to bit 15	-	
	YD0 to YD3 (YCC to YCF are occupied.)		-		24	1101 <sub>H</sub> bit 8 to bit 15
AJ55TB3-8D (input 8 points)	XD4 to XDB	A20SB-08UD (input 4 points)	32	102 <sub>H</sub> bit 0 to bit 7	-	

Bit 15	Bit 14	Bit 13	Bit 12	Bit 11	Bit 10	Bit 9	Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
--------	--------	--------	--------	--------	--------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------

Buffer memory address

Unused due to fractional points	Unused (used area for the existing output module AJ55TB2-8T)	A20SB-04U (replacement area for AJ55TB3-4D) (input: 4 points)	100 <sub>H</sub>
A20XB-16UD (replacement area for AJ55TB32-8DT) (input: 8 points)	A20XB-16UD (replacement area for AJ55TB32-4DT) (input: 8 points)		101 <sub>H</sub>
Unused	A20XB-08UD (replacement area for AJ55TB32-8D) (input: 8 points)		102 <sub>H</sub>

Buffer memory address

Unused due to fractional points	A20PB-08U (replacement area for AJ55TB2-8T) (output: 8 points)	Unused (used area for the existing input module AJ55TB3-4D)	1100 <sub>H</sub>
A20XB-16UD (replacement area for AJ55TB32-8DT) (output: 8 points)	A20XB-16UD (replacement area for AJ55TB32-4DT) (output: 8 points)		1101 <sub>H</sub>
Unused	Unused (used area for the existing input module AJ55TB32-8D)		1102 <sub>H</sub>

\* The XY address specified by the buffer memory read/write instruction "FROM/TO" becomes the XY address in the program. The following shows the XY address of each module when the FROM/TO instruction is programmed.

FROM TO	H0C H0C	H100 H100	K4X1000 K4Y1000	K3 K3	Buffer memory address
Unused due to fractional points	Unused (used area for the existing output module AJ55TB2-8T)		A20SB-04U (input: 4 points) X1000 to X1003		100H
A20XB-16UD (input: 8 points) X1018 to X101F		A20XB-16UD (input: 8 points) X1010 to X1017			101H
Unused		A20XB-08UD (input: 8 points) X1020 to X1027			102H
Unused due to fractional points	A20PB-08U (output: 8 points) Y1004 to Y101B		Unused (used area for the existing input module AJ55TB3-40)		1100H
A20XB-16UD (output: 8 points) Y1018 to Y101F		A20XB-16UD (output: 8 points) Y1010 to Y1017			1101H
Unused		Unused (used area for the existing input module AJ55TB32-8D)			1102H

## Remarks

### (1) I/O signals of the AnyWire DB A20 master module

I/O signals of the master module indicate the state of the module, and are used as command output. This is different from using as ON/OFF signals of the remote station for MELSEC-I/OLINK. The "n" in the table is the start I/O number of the master module which is determined according to the mounted position and modules mounted before the master module.

**Ex.** When the start I/O number of the master module is "X/Y10"

Xn0 to X(n+1)F → X10 to X2F

Yn0 to X(n+1)F → Y10 to Y2F

Input number	Signal name	Output number	Signal name
Xn0	Module READY	Yn0	Disconnection flag reset command output
Xn1	Short between D and G terminals	Yn1	Automatic address detection command output
Xn2	Short between D and 24V terminals	Yn2 <sup>*4</sup>	Transmission waveform output command
Xn3	24V not applied	Yn3 to YnF	Use prohibited
Xn4	D/G line disconnection		
Xn5 to Xn7	Use prohibited		
Xn8 to XnB <sup>*1</sup>	"Switch Setting for I/O and Intelligent Function Module" Switch 1 setting value <sup>*2</sup>		
XnC to XnF	Use prohibited	Y(n+1)0 to Y(n+1)F	Use prohibited
X(n+1)0 to X(n+1)3	Use prohibited		
X(n+1)4 <sup>*3</sup>	Automatic address detection flag		
X(n+1)5 to X(n+1)F	Use prohibited		

\*1 Use prohibited for the LJ51AW12D2.

\*2 When 8 is set for "Switch 1", the settings are as follows.

Xn8: OFF, Xn9: OFF, XnA: OFF, XnB: O

\*3 Use prohibited for the QJ51AW12D2.

\*4 The QJ51AW12D2 with a serial number where the sixth digit is "6" or later can be used.



(2) Buffer memory of the AnyWire DB A20

In the MELSEC-I/OLINK, the occupied XY address of the master module becomes the XY address of the remote station module, while in the AnyWire DB A20, the ON/OFF information of a slave module is stored in the buffer memory. Therefore, the address of the slave module in the program will be the device or the device number used the FROM/TO instruction which data are read from and written to the buffer memory.

This area is for data communication between the master module and CPU module.

Buffer memory address	Description
100 <sub>H</sub> to 13F <sub>H</sub> <sup>*1</sup>	Input (1024 points): The least significant bit of 100 <sub>H</sub> is the 0th data, and the most significant bit of 13F <sub>H</sub> is the 1023rd data.
1100 <sub>H</sub> to 113F <sub>H</sub> <sup>*1</sup>	Output (1024 points): The least significant bit of 1100 <sub>H</sub> is the 0th data, and the most significant bit of 113F <sub>H</sub> is the 1023rd data.
2000 <sub>H</sub>	Number of error IDs (1 word)
2001 <sub>H</sub> to 2080 <sub>H</sub>	Error ID information
2400 <sub>H</sub> <sup>*2</sup>	Number of connection IDs (1 word)
2401 <sub>H</sub> to 2480 <sub>H</sub> <sup>*2</sup>	Connection ID information
2810 <sub>H</sub> <sup>*2</sup>	Latest error code storage area
2811 <sub>H</sub> <sup>*2</sup>	Latest error ID storage area

\*1 The buffer memory address occupies a 64-word sized area, irrespective of the number of I/O points.

\*2 The QJ51AW12D2 with a serial number where the sixth digit is "6" or later can be used.

**Ex.** Correspondence between the buffer memory address and AnyWire DB A20 input address

Buffer memory address	Bit	No.														
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
100 <sub>H</sub>	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
101 <sub>H</sub>	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16

For details, refer to the following manual.

MELSEC-Q/L AnyWire DB A20 Master Module User's Manual SH(NA)-080968ENG

.....

# 6 REPLACING THE I/O MODULES

## 6.1 List of Alternative I/O Module Models

I/OLINK series model		AnyWire DB A20 series alternative model	
Product	Model name	Model name	Remarks (restrictions)
Input module	AJ55TB3-4D (when positive common type is used)	A20SB-04U	(1) External wiring: Changed (2) Number of modules: Not changed (3) Program: Changed (4) Specifications: Rated input voltage: Not changed Rated input current: Not changed ON voltage/ON current: Changed OFF voltage/OFF current: Changed Input resistance: Not changed (5) Functions: Changed (wiring: 3-wire → 2-wire) (A negative common type cannot be used.)
	AJ55TB3-4D (when negative common type is used)	A20SB-04US	(1) External wiring: Changed (2) Number of modules: Not changed (3) Program: Changed (4) Specifications: Rated input voltage: Not changed Rated input current: Not changed ON voltage/ON current: Changed OFF voltage/OFF current: Changed Input resistance: Not changed (5) Functions: Changed (wiring: 3-wire → 2-wire) (A positive common type cannot be used.)
	AJ55TB3-8D (when positive common type is used)	A20SB-08UD	(1) External wiring: Changed (2) Number of modules: Not changed (3) Program: Changed (4) Specifications: Rated input voltage: Not changed Rated input current: Not changed ON voltage/ON current: Changed OFF voltage/OFF current: Changed Input resistance: Not changed (5) Functions: Changed (A negative common type cannot be used.)
	AJ55TB3-8D (when negative common type is used)	A20SB-08USD-1	(1) External wiring: Changed (2) Number of modules: Not changed (3) Program: Changed (4) Specifications: Rated input voltage: Not changed Rated input current: Not changed ON voltage/ON current: Changed OFF voltage/OFF current: Changed Input resistance: Not changed (5) Functions: Changed (A positive common type cannot be used.)

I/OLINK series model		AnyWire DB A20 series alternative model	
Product	Model name	Model name	Remarks (restrictions)
Input module	AJ55TB3-16D (when positive common type is used)	A20SB-16UD	(1) External wiring: Changed (2) Number of modules: Not changed (3) Program: Changed (4) Specifications: Rated input voltage: Not changed Rated input current: Not changed ON voltage/ON current: Changed OFF voltage/OFF current: Changed Input resistance: Not changed (5) Functions: Changed (A negative common type cannot be used.)(8 points/common → 16 points/common)
	AJ55TB3-16D (when negative common type is used)	A20SB-16USD	(1) External wiring: Changed (2) Number of modules: Not changed (3) Program: Changed (4) Specifications: Rated input voltage: Not changed Rated input current: Not changed ON voltage/ON current: Changed OFF voltage/OFF current: Changed Input resistance: Not changed (5) Functions: Changed (A positive common type cannot be used.)(8 points/common → 16 points/common)
Output module	AJ55TB2-4R	A20PB-04RS	(1) External wiring: Changed (2) Number of modules: Not changed (3) Program: Changed (4) Specifications: Rated load voltage: Changed (The voltage that can be used is equivalent.) Rated load current: Not changed Maximum switching frequency: Changed (3600 times/hour → 20 times/minute) (5) Functions: Changed (4 points/common → All points independent)
	AJ55TB2-8R	A20PB-08RS	(1) External wiring: Changed (2) Number of modules: Not changed (3) Program: (4) Specifications: Rated load voltage: Changed (The voltage that can be used is equivalent.) Rated load current: Not changed Maximum switching frequency: Changed (3600 times/hour → 20 times/minute) (5) Functions: Changed (8 points/common → All points independent)
	AJ55TB2-16R	A20PB-16RS	(1) External wiring: Changed (2) Number of modules: Not changed (3) Program: Changed (4) Specifications: Rated load voltage: Changed (The voltage that can be used is equivalent.) Rated load current: Not changed Maximum switching frequency: Changed (3600 times/hour → 20 times/minute) (5) Functions: Changed (8 points/common → All points independent)
	AJ55TB2-4T	A20PB-04U	(1) External wiring: Changed (2) Number of modules: Not changed (3) Program: Changed (4) Specifications: Rated load voltage: Changed (12VDC is not applicable.) Rated load current: Changed (0.5A/point → 0.2A/point) (5) Functions: Changed (Surge suppressor: Supported → Not supported)
	AJ55TB2-8T	A20PB-08U	(1) External wiring: Changed (2) Number of modules: Not changed (3) Program: Changed (4) Specifications: Rated load voltage: Changed (12VDC is not applicable.) Rated load current: Changed (0.5A/point → 0.2A/point) (5) Functions: Changed (Surge suppressor: Supported → Not supported)
	AJ55TB2-16T	A20PB-16U	(1) External wiring: Changed (2) Number of modules: Not changed (3) Program: Changed (4) Specifications: Rated load voltage: Changed (12VDC is not applicable.) Rated load current: Changed (0.5A/point → 0.2A/point) (5) Functions: Changed (Surge suppressor: Supported → Not supported)

I/OLINK series model		AnyWire DB A20 series alternative model	
Product	Model name	Model name	Remarks (restrictions)
I/O module	AJ55TB32-4DR (when positive common type is used)	A20SB-04U + A20PB-04RS	(1) External wiring: Changed (2) Number of modules: Changed (Two modules are required.) (3) Program: Changed (4) Specifications: (Input part) Rated input voltage: Not changed Rated input current: Not changed ON voltage/ON current: Changed OFF voltage/OFF current: Changed Input resistance: Not changed (Output part) Rated load voltage: Changed (The voltage that can be used is equivalent.) Rated load current: Not changed Maximum switching frequency: Changed (3600 times/hour → 20 times/minute) (5) Functions: Changed (Input part) Number of input points: 2 → 4 Wiring: 3-wire → 2-wire A negative common type cannot be used. (Output part) Number of output points: 2 → 4 2 points/common → All points independent
	AJ55TB32-4DR (when negative common type is used)	A20SB-04US + A20PB-04RS	(1) External wiring: Changed (2) Number of modules: Changed (Two modules are required.) (3) Program: Changed (4) Specifications: (Input part) Rated input voltage: Not changed Rated input current: Not changed ON voltage/ON current: Changed OFF voltage/OFF current: Changed Input resistance: Not changed (Output part) Rated load voltage: Changed (The voltage that can be used is equivalent.) Rated load current: Not changed Maximum switching frequency: Changed (3600 times/hour → 20 times/minute) (5) Functions: Changed (Input part) Number of input points: 2 → 4 Wiring: 3-wire → 2-wire A positive common type cannot be used. (Output part) Number of output points: 2 → 4 2 points/common → All points independent
	AJ55TB32-8DR (when positive common type is used)	A20SB-04U + A20PB-04RS	(1) External wiring: Changed (2) Number of modules: Changed (Two modules are required.) (3) Program: Changed (4) Specifications: (Input part) Rated input voltage: Not changed Rated input current: Not changed ON voltage/ON current: Changed OFF voltage/OFF current: Changed Input resistance: Not changed (Output part) Rated load voltage: Changed (The voltage that can be used is equivalent.) Rated load current: Not changed Maximum switching frequency: Changed (3600 times/hour → 20 times/minute) (5) Functions: Changed (Input part) Wiring: 3-wire → 2-wire A negative common type cannot be used. (Output part) 4 points/common → All points independent

I/OLINK series model		AnyWire DB A20 series alternative model	
Product	Model name	Model name	Remarks (restrictions)
I/O module	AJ55TB32-8DR (when negative common type is used)	A20SB-04US + A20PB-04RS	(1) External wiring: Changed (2) Number of modules: Changed (Two modules are required.) (3) Program: Changed (4) Specifications: (Input part) Rated input voltage: Not changed Rated input current: Not changed ON voltage/ON current: Changed OFF voltage/OFF current: Changed Input resistance: Not changed (Output part) Rated load voltage: Changed (The voltage that can be used is equivalent.) Rated load current: Not changed Maximum switching frequency: Changed (3600 times/hour → 20 times/minute) (5) Functions: Changed (Input part) Wiring: 3-wire → 2-wire A positive common type cannot be used. (Output part) 4 points/common → All points independent
	AJ55TB32-16DR (when positive common type is used)	A20SB-08UD + A20PB-08RS	(1) External wiring: Changed (2) Number of modules: Changed (Two modules are required.) (3) Program: Changed (4) Specifications: (Input part) Rated input voltage: Not changed Rated input current: Not changed ON voltage/ON current: Changed OFF voltage/OFF current: Changed Input resistance: Not changed (Output part) Rated load voltage: Changed (The voltage that can be used is equivalent.) Rated load current: Not changed Maximum switching frequency: Changed (3600 times/hour → 20 times/minute) (5) Functions: Changed (Input part) A negative common type cannot be used. (Output part) 8 points/common → All points independent
	AJ55TB32-16DR (when negative common type is used)	A20SB-08USD-1 + A20PB-08RS	(1) External wiring: Changed (2) Number of modules: Changed (Two modules are required.) (3) Program: Changed (4) Specifications: (Input part) Rated input voltage: Not changed Rated input current: Not changed ON voltage/ON current: Changed OFF voltage/OFF current: Changed Input resistance: Not changed (Output part) Rated load voltage: Changed (The voltage that can be used is equivalent.) Rated load current: Not changed Maximum switching frequency: Changed (3600 times/hour → 20 times/minute) (5) Functions: Changed (Input part) A positive common type cannot be used. (Output part) 8 points/common → All points independent

I/OLINK series model		AnyWire DB A20 series alternative model	
Product	Model name	Model name	Remarks (restrictions)
I/O module	AJ55TB32-4DT	A20XB-16UD	(1) External wiring: Changed (2) Number of modules: Not changed (3) Program: Changed (4) Specifications: (Input part) Rated input voltage: Not changed Rated input current: Not changed ON voltage/ON current: Changed OFF voltage/OFF current: Changed Input resistance: Not changed (Output part) Rated load voltage: Not changed Rated load current: Changed (0.5A/point → 0.2A/point) (5) Functions: Changed (Input part) Number of input points: 2 → 8 (Output part) Number of output points: 2 → 8 Surge suppressor: Supported → Not supported
	AJ55TB32-8DT	A20XB-16UD	(1) External wiring: Changed (2) Number of modules: Not changed (3) Program: Changed (4) Specifications: (Input part) Rated input voltage: Not changed Rated input current: Not changed ON voltage/ON current: Changed OFF voltage/OFF current: Changed Input resistance: Not changed (Output part) Rated load voltage: Not changed Rated load current: Changed (0.5A/point → 0.2A/point) (5) Functions: Changed (Input part) Number of input points: 4 → 8 (Output part) Number of output points: 4 → 8 Surge suppressor: Supported → Not supported
	AJ55TB32-16DT	A20XB-16UD	(1) External wiring: Changed (2) Number of modules: Not changed (3) Program: Changed (4) Specifications: (Input part) Rated input voltage: Not changed Rated input current: Not changed ON voltage/ON current: Changed OFF voltage/OFF current: Changed Input resistance: Not changed (Output part) Rated load voltage: Not changed Rated load current: Changed (0.5A/point → 0.2A/point) (5) Functions: Changed (Input part) None (Output part) Surge suppressor: Supported → Not supported

## 6.2 I/O Module Specifications Comparisons

### 6.2.1 Input module specifications comparisons

#### (1) Comparisons between AJ55TB3-4D and A20SB-04U

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications		AJ55TB3-4D	A20SB-04U	Compat- ibility	Precautions for replacement
Number of input points		4 points	4 points	○	
Insulation method		External input ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External input ↔ Internal circuit: Not insulated Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulated locations are different.
Input type		Positive/negative common shared type	Positive common type	△	A negative common type cannot be used.*1
Rated input voltage		24VDC	24VDC	○	
Rated input current		Approx. 7mA	Approx. 7mA	○	
Operating voltage range		19.2 to 26.4VDC (ripple ratio within 5%)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
Maximum simultaneous on input point		100%	100%	○	
ON voltage/ON current		14VDC or higher/3.5mA or higher	16VDC or higher/5.5mA or higher	△	ON voltage and ON current are increased.*2
OFF voltage/OFF current		6VDC or lower/1.7mA or lower	8VDC or lower/2mA or lower	△	OFF voltage and OFF current are increased.*2
Input resistance		Approx. 3.3kΩ	Approx. 3.3kΩ	○	
Response time	OFF → ON	10ms or less	1ms or less	○	
	ON → OFF	10ms or less	1ms or less	○	
Common terminal arrangement		4 points per common (3-wire type terminal block)	4 points per common (2-wire type terminal block)	△	To connect an item such as a 3-wire type sensor, an external common terminal block is required.
Operation indicator		ON indication (LED)	ON indication (LED)	○	
External wiring method		16-point terminal block (M3 screw) Transmission circuit included	10-point terminal block (M3 screw) Transmission circuit included	△	
Applicable wire size		0.75 to 2mm <sup>2</sup>	0.3 to 1.25mm <sup>2</sup> (when the following applicable crimping terminals are used: 0.75 to 2mm <sup>2</sup> )	△	Wiring must be changed. Existing wires can be used but applicable crimping terminals are different.
Applicable crimping terminal		1.25-3, 1.25-YS3A, 2-S3, 2-YS3A V1.25-3, V1.25-YS3A, V2-S3, V2-YS3A	For wire sizes 0.75 to 2mm <sup>2</sup> R2-3SL, RAV2-3SL, RAP2-3SL, VD2-3S, VD2-3.5SS, VD2-3.5S, VDAV2-3.5SS, VDAV2-3.5S	△	For details, refer to Section 6.3.
I/O module power supply	Voltage	15.6 to 27.6VDC	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
	Current	35mA	50mA	△	Because the current consumption has increased, the current capacity must be reviewed.
External dimensions		50(H) × 82(W) × 66(D) mm	40(H) × 65(W) × 60(D) mm	△	The shape is different.
Installation method		Screw mounted	Screw mounted	×	Because mounting hole size is different, reworking is required.
		Mounted to DIN rail	Mounted to DIN rail	○	The A20SB-04U can be mounted to the existing DIN rail.
Weight		0.2kg	0.09kg	○	

\*1 For the negative common type, use A20SB-04US.

\*2 Check the specifications of the sensors or switches to be connected to the A20SB-04U.

## (2) Comparisons between AJ55TB3-4D and A20SB-04US

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications		AJ55TB3-4D	A20SB-04US	Compat- ibility	Precautions for replacement
Number of input points		4 points	4 points	○	
Insulation method		External input ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External input ↔ Internal circuit: Not insulated Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulated locations are different.
Input type		Positive/negative common shared type	Negative common type	△	A negative common type cannot be used.*1
Rated input voltage		24VDC	24VDC	○	
Rated input current		Approx. 7mA	Approx. 7mA	○	
Operating voltage range		19.2 to 26.4VDC (ripple ratio within 5%)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
Maximum simultaneous on input point		100%	100%	○	
ON voltage/ON current		14VDC or higher/3.5mA or higher	16VDC or higher/5.5mA or higher	△	ON voltage and ON current are increased.*2
OFF voltage/OFF current		6VDC or lower/1.7mA or lower	8VDC or lower/2mA or lower	△	OFF voltage and OFF current are increased.*2
Input resistance		Approx. 3.3kΩ	Approx. 3.3kΩ	○	
Response time	OFF → ON	10ms or less	1ms or less	○	
	ON → OFF	10ms or less	1ms or less	○	
Common terminal arrangement		4 points per common (3-wire type terminal block)	4 points per common (2-wire type terminal block)	△	To connect an item such as a 3-wire type sensor, an external common terminal block is required.
Operation indicator		ON indication (LED)	ON indication (LED)	○	
External wiring method		16-point terminal block (M3 screw) Transmission circuit included	10-point terminal block (M3 screw) Transmission circuit included	△	
Applicable wire size		0.75 to 2mm <sup>2</sup>	0.3 to 1.25mm <sup>2</sup> (when the following applicable crimping terminals are used: 0.75 to 2mm <sup>2</sup> )	△	Wiring must be changed. Existing wires can be used but applicable crimping terminals are different.
Applicable crimping terminal		1.25-3, 1.25-YS3A, 2-S3, 2-YS3A, V1.25-3, V1.25-YS3A, V2-S3, V2-YS3A	For wire sizes 0.75 to 2mm <sup>2</sup> R2-3SL, RAV2-3SL, RAP2-3SL, VD2-3S, VD2-3.5SS, VD2-3.5S, VDAV2-3.5SS, VDAV2-3.5S	△	For details, refer to Section 6.3.
I/O module power supply	Voltage	15.6 to 27.6VDC	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
	Current	35mA	43mA	△	Because the current consumption has increased, the current capacity must be reviewed.
External dimensions		50(H) × 82(W) × 66(D) mm	40(H) × 65(W) × 60(D) mm	△	The shape is different.
Installation method		Screw mounted	Screw mounted	×	Because mounting hole size is different, reworking is required.
		Mounted to DIN rail	Mounted to DIN rail	○	The A20SB-04US can be mounted to the existing DIN rail.
Weight		0.2kg	0.09kg	○	

\*1 For the positive common type, use A20SB-04U.

\*2 Check the specifications of the sensors or switches to be connected to the A20SB-04US.



## (3) Comparisons between AJ55TB3-8D and A20SB-08UD

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications		AJ55TB3-8D	A20SB-08UD	Compat- ibility	Precautions for replacement
Number of input points		8 points	8 points	○	
Insulation method		External input ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External input ↔ Internal circuit: Not insulated Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulated locations are different.
Input type		Positive/negative common shared type	Positive common type	△	A negative common type cannot be used.*1
Rated input voltage		24VDC	24VDC	○	
Rated input current		Approx. 7mA	Approx. 7mA	○	
Operating voltage range		19.2 to 26.4VDC (ripple ratio within 5%)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
Maximum simultaneous on input point		100%	100%	○	
ON voltage/ON current		14VDC or higher/3.5mA or higher	16VDC or higher/5.5mA or higher	△	ON voltage and ON current are increased.*2
OFF voltage/OFF current		6VDC or lower/1.7mA or lower	8VDC or lower/2mA or lower	△	OFF voltage and OFF current are increased.*2
Input resistance		Approx. 3.3kΩ	Approx. 3.3kΩ	○	
Response time	OFF → ON	10ms or less	1ms or less	○	
	ON → OFF	10ms or less	1ms or less	○	
Common terminal arrangement		8 points per common (3-wire type terminal block)	8 points per common (3-wire type terminal block)	○	
Operation indicator		ON indication (LED)	ON indication (LED)	○	
External wiring method		24-point terminal block (M3 screw) Transmission circuit included	30-point terminal block (M3 screw) Transmission circuit included	△	
Applicable wire size		0.75 to 2mm <sup>2</sup>	0.3 to 1.25mm <sup>2</sup> (when the following applicable crimping terminals are used: 0.75 to 2mm <sup>2</sup> )	△	Wiring must be changed. Existing wires can be used but applicable crimping terminals are different.
Applicable crimping terminal		1.25-S3, 1.25-YS3A, 2-S3, 2-YS3A V1.25-S3, V1.25-YS3A, V2-S3, V2-YS3A	For wire sizes 0.75 to 2mm <sup>2</sup> R2-3SL, RAV2-3SL, RAP2-3SL, VD2-3S, VD2-3.5SS, VD2-3.5S, VDAV2-3.5SS, VDAV2-3.5S	△	For details, refer to Section 6.3.
I/O module power supply	Voltage	15.6 to 27.6VDC	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
	Current	45mA	117mA	△	Because the current consumption has increased, the current capacity must be reviewed.
External dimensions		50(H) × 114(W) × 66(D) mm	40(H) × 140(W) × 60(D) mm	△	The shape is different.
Installation method		Screw mounted	Screw mounted	×	Because mounting hole size is different, reworking is required.
		Mounted to DIN rail	Mounted to DIN rail	○	The A20SB-08UD can be mounted to the existing DIN rail.
Weight		0.3kg	0.18kg	○	

\*1 For the negative common type, use A20SB-08USD-1.

\*2 Check the specifications of the sensors or switches to be connected to the A20SB-08UD.

## (4) Comparisons between AJ55TB3-8D and A20SB-08USD-1

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications		AJ55TB3-8D	A20SB-08USD-1	Compat- ibility	Precautions for replacement
Number of input points		8 points	8 points	○	
Insulation method		External input ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External input ↔ Internal circuit: Not insulated Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulated locations are different.
Input type		Positive/negative common shared type	Negative common type	△	A positive common type cannot be used.*1
Rated input voltage		24VDC	24VDC	○	
Rated input current		Approx. 7mA	Approx. 7mA	○	
Operating voltage range		19.2 to 26.4VDC (ripple ratio within 5%)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
Maximum simultaneous on input point		100%	100%	○	
ON voltage/ON current		14VDC or higher/3.5mA or higher	16VDC or higher/5.5mA or higher	△	ON voltage and ON current are increased.*2
OFF voltage/OFF current		6VDC or lower/1.7mA or lower	8VDC or lower/2mA or lower	△	OFF voltage and OFF current are increased.*2
Input resistance		Approx. 3.3kΩ	Approx. 3.3kΩ	○	
Response time	OFF → ON	10ms or less	1ms or less	○	
	ON → OFF	10ms or less	1ms or less	○	
Common terminal arrangement		8 points per common (3-wire type terminal block)	8 points per common (3-wire type terminal block)	○	
Operation indicator		ON indication (LED)	ON indication (LED)	○	
External wiring method		24-point terminal block (M3 screw) Transmission circuit included	30-point terminal block (M3 screw) Transmission circuit included	△	
Applicable wire size		0.75 to 2mm <sup>2</sup>	0.3 to 1.25mm <sup>2</sup> (when the following applicable crimping terminals are used: 0.75 to 2mm <sup>2</sup> )	△	Wiring must be changed. Existing wires can be used but applicable crimping terminals are different.
Applicable crimping terminal		1.25-3, 1.25-YS3A, 2-S3, 2-YS3A V1.25-3, V1.25-YS3A, V2-S3, V2-YS3A	For wire sizes 0.75 to 2mm <sup>2</sup> R2-3SL, RAV2-3SL, RAP2-3SL, VD2-3S, VD2-3.5SS, VD2-3.5S, VDAV2-3.5SS, VDAV2-3.5S	△	For details, refer to Section 6.3.
I/O module power supply	Voltage	15.6 to 27.6VDC	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
	Current	45mA	117mA	△	Because the current consumption has increased, the current capacity must be reviewed.
External dimensions		50(H) × 114(W) × 66(D) mm	40(H) × 140(W) × 60(D) mm	△	The shape is different.
Installation method		Screw mounted	Screw mounted	×	Because mounting hole size is different, reworking is required.
		Mounted to DIN rail	Mounted to DIN rail	○	The A20SB-08USD-1 can be mounted to the existing DIN rail.
Weight		0.3kg	0.25kg	○	

\*1 For the positive common type, use A20SB-08UD.

\*2 Check the specifications of the sensors or switches to be connected to the A20SB-08USD-1.

## (5) Comparisons between AJ55TB3-16D and A20SB-16UD

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications		AJ55TB3-16D	A20SB-16UD	Compat- ibility	Precautions for replacement
Number of input points		16 points	16 points	○	
Insulation method		External input ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External input ↔ Internal circuit: Not insulated Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulated locations are different.
Input type		Positive/negative common shared type	Positive common type	△	A negative common type cannot be used.*1
Rated input voltage		24VDC	24VDC	○	
Rated input current		Approx. 7mA	Approx. 7mA	○	
Operating voltage range		19.2 to 26.4VDC (ripple ratio within 5%)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
Maximum simultaneous on input point		100%	100%	○	
ON voltage/ON current		14VDC or higher/3.5mA or higher	16VDC or higher/5.5mA or higher	△	ON voltage and ON current are increased.*2
OFF voltage/OFF current		6VDC or lower/1.7mA or lower	8VDC or lower/2mA or lower	△	OFF voltage and OFF current are increased.*2
Input resistance		Approx. 3.3kΩ	Approx. 3.3kΩ	○	
Response time	OFF → ON	10ms or less	1ms or less	○	
	ON → OFF	10ms or less	1ms or less	○	
Common terminal arrangement		8 points per common (3-wire type terminal block)	16 points per common (3-wire type terminal block)	△	The A20SB-16UD changes from 2 commons to 1 common.
Operation indicator		ON indication (LED)	ON indication (LED)	○	
External wiring method		40-point terminal block (M3 screw) Transmission circuit included	40-point terminal block (M3 screw) Transmission circuit included	△	Wiring must be changed. Existing wires can be used but applicable crimping terminals are different. For details, refer to Section 6.3.
Applicable wire size		0.75 to 2mm <sup>2</sup>	0.3 to 1.25mm <sup>2</sup> (when the following applicable crimping terminals are used: 0.75 to 2mm <sup>2</sup> )	△	
Applicable crimping terminal		1.25-3, 1.25-YS3A, 2-S3, 2-YS3A V1.25-3, V1.25-YS3A, V2-S3, V2-YS3A	For wire sizes 0.75 to 2mm <sup>2</sup> R2-3SL, RAV2-3SL, RAP2-3SL, VD2-3S, VD2-3.5SS, VD2-3.5S, VDAV2-3.5SS, VDAV2-3.5S	△	
I/O module power supply	Voltage	15.6 to 27.6VDC	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
	Current	60mA	233mA	△	Because the current consumption has increased, the current capacity must be reviewed.
External dimensions		50(H) × 177(W) × 66(D) mm	40(H) × 190(W) × 60(D) mm	△	The shape is different.
Installation method		Screw mounted	Screw mounted	×	Because mounting hole size is different, reworking is required.
		Mounted to DIN rail	Mounted to DIN rail	○	The A20SB-16UD can be mounted to the existing DIN rail.
Weight		0.4kg	0.24kg	○	

\*1 For the negative common type, use A20SB-16UD.

\*2 Check the specifications of the sensors or switches to be connected to the A20SB-16UD.

## (6) Comparisons between AJ55TB3-16D and A20SB-16USD

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications		AJ55TB3-16D	A20SB-16USD	Compat- ibility	Precautions for replacement
Number of input points		16 points	16 points	○	
Insulation method		External input ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External input ↔ Internal circuit: Not insulated Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulated locations are different.
Input type		Positive/negative common shared type	Negative common type	△	A positive common type cannot be used.*1
Rated input voltage		24VDC	24VDC	○	
Rated input current		Approx. 7mA	Approx. 7mA	○	
Operating voltage range		19.2 to 26.4VDC (ripple ratio within 5%)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
Maximum simultaneous on input point		100%	100%	○	
ON voltage/ON current		14VDC or higher/3.5mA or higher	16VDC or higher/4.5mA or higher	△	ON voltage and ON current are increased.*2
OFF voltage/OFF current		6VDC or lower/1.7mA or lower	6VDC or lower/1mA or lower	△	OFF current is decreased.*2
Input resistance		Approx. 3.3kΩ	Approx. 3.3kΩ	○	
Response time	OFF → ON	10ms or less	1ms or less	○	
	ON → OFF	10ms or less	1ms or less	○	
Common terminal arrangement		8 points per common (3-wire type terminal block)	16 points per common (3-wire type terminal block)	△	The A20SB-16USD changes from 2 commons to 1 common.
Operation indicator		ON indication (LED)	ON indication (LED)	○	
External wiring method		40-point terminal block (M3 screw) Transmission circuit included	40-point terminal block (M3 screw) Transmission circuit included	△	
Applicable wire size		0.75 to 2mm <sup>2</sup>	0.3 to 1.25mm <sup>2</sup> (when the following applicable crimping terminals are used: 0.75 to 2mm <sup>2</sup> )	△	Wiring must be changed. Existing wires can be used but applicable crimping terminals are different.
Applicable crimping terminal		1.25-3, 1.25-YS3A, 2-S3, 2-YS3A, V1.25-3, V1.25-YS3A, V2-S3, V2-YS3A	For wire sizes 0.75 to 2mm <sup>2</sup> R2-3SL, RAV2-3SL, RAP2-3SL, VD2-3S, VD2-3.5SS, VD2-3.5S, VDAV2-3.5SS, VDAV2-3.5S	△	For details, refer to Section 6.3.
I/O module power supply	Voltage	15.6 to 27.6VDC	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
	Current	60mA	233mA	△	Because the current consumption has increased, the current capacity must be reviewed.
External dimensions		50(H) × 177(W) × 66(D) mm	40(H) × 190(W) × 60(D) mm	△	The shape is different.
Installation method		Screw mounted	Screw mounted	×	Because mounting hole size is different, reworking is required.
		Mounted to DIN rail	Mounted to DIN rail	○	The A20SB-16USD can be mounted to the existing DIN rail.
Weight		0.4kg	0.24kg	○	

\*1 For the positive common type, use A20SB-16UD.

\*2 Check the specifications of the sensors or switches to be connected to the A20SB-16USD.

## 6.2.2 Output module specifications

### (1) Comparisons between AJ55TB2-4R and A20PB-04RS

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications		AJ55TB2-4R	A20PB-04RS	Compat- ibility	Precautions for replacement
Number of output points		4 points	4 points	○	
Insulation method		External output ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External output ↔ Internal circuit: Relay Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulation method is different.
Output type		Contact output type	Contact output type	○	
Rated load voltage/current		24VDC 2A (resistance load)/point 240VAC 2A (COSφ=1)/point 8A/common	30VDC 2A (resistance load)/point 220VAC 2A (COSφ=1)/point 1A (induced load)/point	△	The rated load voltage and current are different.
Minimum switching load		5VDC 1mA	0.1VDC 0.1mA (reference value)	△	Check the specifications of the load to be used.
Maximum switching voltage		250VAC 110VDC	250VAC 110VDC	○	
Response time	OFF → ON	10ms or less	10ms or less	○	
	ON → OFF	12ms or less	10ms or less	○	
Life	Mechanical	20 million times or more	20 million times or more	○	
	Electrical	Rated switching voltage/current load 100,000 times or more 200VAC 1.5A, 240VAC 1A (COSφ=0.7) 100,000 times or more 200VAC 1A, 240VAC 0.5A (COSφ=0.35) 100,000 times or more 24VDC 1A, 100VDC 0.1A (L/R=7ms) 100,000 times or more	100,000 times or more	○	
Maximum switching frequency		3,600 times/hour	20 times/minute	△	Maximum switching frequency is different.
Surge suppressor		None	None	–	
Common terminal arrangement		4 points per common (2-wire type terminal block)	All points independent (2-wire type terminal block)	△	Because 4 points per common is changed to all points independent, the wiring is different.
Operation indicator		ON indication (LED)	ON indication (LED)	○	
External wiring method		16-point terminal block (M3 screw) Transmission circuit included	20-point terminal block Transmission circuit included	△	
Applicable wire size		0.75 to 2mm <sup>2</sup>	0.3 to 1.25mm <sup>2</sup> (when the following applicable crimping terminals are used: 0.75 to 2mm <sup>2</sup> )	△	Wiring must be changed. Existing wires can be used but applicable crimping terminals are different.
Applicable crimping terminal		1.25-3, 1.25-YS3A, 2-S3, 2-YS3A V1.25-3, V1.25-YS3A, V2-S3, V2-YS3A	For wire sizes 0.75 to 2mm <sup>2</sup> R2-3SL, RAV2-3SL, RAP2-3SL, VD2-3S, VD2-3.5SS, VD2-3.5S, VDAV2-3.5SS, VDAV2-3.5S	△	For details, refer to Section 6.3.
External power supply	Voltage	24VDC ± 10% Ripple voltage 4Vp-p or less	–	–	The A20PB-04RS external power supply and the I/O module power supply are shared.
	Current	23mA (24VDC TYP. all points ON)	–	–	
I/O module power supply	Voltage	15.6 to 27.6VDC	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
	Current	50mA	90mA	△	Because the current consumption has increased, the current capacity must be reviewed.
External dimensions		50(H) × 82(W) × 66(D) mm	40(H) × 100(W) × 60(D) mm	△	The shape is different.
Installation method		Screw mounted	Screw mounted	×	Because mounting hole size is different, reworking is required.
		Mounted to DIN rail	Mounted to DIN rail	○	The A20PB-04RS can be mounted to the existing DIN rail.
Weight		0.2kg	0.14kg	○	

## (2) Comparisons between AJ55TB2-8R and A20PB-08RS

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications		AJ55TB2-8R	A20PB-08RS	Compat- ibility	Precautions for replacement
Number of output points		8 points	8 points	○	
Insulation method		External output ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External output ↔ Internal circuit: Relay Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulation method is different.
Output type		Contact output type	Contact output type	○	
Rated load voltage/current		24VDC 2A (resistance load)/point 240VAC 2A (COSφ=1)/point 8A/common	30VDC 2A (resistance load)/point 220VAC 2A (COSφ=1)/point 1A (induced load)/point	△	The rated load voltage and current are different.
Minimum switching load		5VDC 1mA	0.1VDC 0.1mA (reference value)	△	Check the specifications of the load to be used.
Maximum switching voltage		250VAC 110VDC	250VAC 110VDC	○	
Response time	OFF → ON	10ms or less	10ms or less	○	
	ON → OFF	12ms or less	10ms or less	○	
Life	Mechanical	20 million times or more	20 million times or more	○	
	Electrical	Rated switching voltage/current load 100,000 times or more 200VAC 1.5A, 240VAC 1A (COSφ=0.7) 100,000 times or more 200VAC 1A, 240VAC 0.5A (COSφ=0.35) 100,000 times or more 24VDC 1A, 100VDC 0.1A (L/R=7ms) 100,000 times or more	100,000 times or more	○	
Maximum switching frequency		3,600 times/hour	20 times/minute	△	Maximum switching frequency is different.
Surge suppressor		None	None	–	
Common terminal arrangement		8 points per common (2-wire type terminal block)	All points independent (2-wire type terminal block)	△	Because 8 points per common is changed to all points independent, the wiring is different.
Operation indicator		ON indication (LED)	ON indication (LED)	○	
External wiring method		24-point terminal block (M3 screw) Transmission circuit included	30-point terminal block (M3 screw) Transmission circuit included	△	Wiring must be changed. Existing wires can be used but applicable crimping terminals are different. For details, refer to Section 6.3.
Applicable wire size		0.75 to 2mm <sup>2</sup>	0.3 to 1.25mm <sup>2</sup> (when the following applicable crimping terminals are used: 0.75 to 2mm <sup>2</sup> )	△	
Applicable crimping terminal		1.25-3, 1.25-YS3A, 2-S3, 2-YS3A V1.25-3, V1.25-YS3A, V2-S3, V2-YS3A	For wire sizes 0.75 to 2mm <sup>2</sup> R2-3SL, RAV2-3SL, RAP2-3SL, VD2-3S, VD2-3.5SS, VD2-3.5S, VDAV2-3.5SS, VDAV2-3.5S	△	
External power supply	Voltage	24VDC ± 10% Ripple voltage 4Vp-p or less	–	–	The A20PB-08RS external power supply and the I/O module power supply are shared.
	Current	45mA (24VDC TYP. all points ON)	–	–	
I/O module power supply	Voltage	15.6 to 27.6VDC	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
	Current	65mA	104mA	○	Because the external power supply and the I/O module power supply are shared, the consumed current is decreased.
External dimensions		50(H) × 114(W) × 66(D) mm	40(H) × 140(W) × 60(D) mm	△	The shape is different.
Installation method		Screw mounted	Screw mounted	×	Because mounting hole size is different, reworking is required.
		Mounted to DIN rail	Mounted to DIN rail	○	The A20PB-08RS can be mounted to the existing DIN rail.
Weight		0.3kg	0.2kg	○	

### (3) Comparisons between AJ55TB2-16R and A20PB-16RS

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications		AJ55TB2-16R	A20PB-16RS	Compat- ibility	Precautions for replacement
Number of output points		16 points	16 points	○	
Insulation method		External output ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External output ↔ Internal circuit: Relay Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulation method is different.
Output type		Contact output type	Contact output type	○	
Rated load voltage/current		24VDC 2A (resistance load)/point 240VAC 2A (COSφ=1)/point 8A/common	30VDC 2A (resistance load)/point 220VAC 2A (COSφ=1)/point 1A (induced load)/point	△	The rated load voltage and current are different.
Minimum switching load		5VDC 1mA	0.1VDC 0.1mA (reference value)	△	Check the specifications of the load to be used.
Maximum switching voltage		250VAC 110VDC	250VAC 110VDC	○	
Response time	OFF → ON	10ms or less	10ms or less	○	
	ON → OFF	12ms or less	10ms or less	○	
Life	Mechanical	20 million times or more	20 million times or more	○	
	Electrical	Rated switching voltage/current load 100,000 times or more 200VAC 1.5A, 240VAC 1A (COSφ=0.7) 100,000 times or more 200VAC 1A, 240VAC 0.5A (COSφ=0.35) 100,000 times or more 24VDC 1A, 100VDC 0.1A (L/R=7ms) 100,000 times or more	100,000 times or more	○	
Maximum switching frequency		3,600 times/hour	20 times/minute	△	Maximum switching frequency is different.
Surge suppressor		None	None	–	
Common terminal arrangement		8 points per common (2-wire type terminal block)	All points independent (2-wire type terminal block)	△	Because 8 points per common is changed to all points independent, the wiring is different.
Operation indicator		ON indication (LED)	ON indication (LED)	○	
External wiring method		40-point terminal block (M3 screw) Transmission circuit included	40-point terminal block (M3 screw) Transmission circuit included	△	Existing wires can be used but applicable crimping terminals are different. For details, refer to Section 6.3.
Applicable wire size		0.75 to 2mm <sup>2</sup>	0.3 to 1.25mm <sup>2</sup> (when the following applicable crimping terminals are used: 0.75 to 2mm <sup>2</sup> )	△	
Applicable crimping terminal		1.25-3, 1.25-YS3A, 2-S3, 2-YS3A V1.25-3, V1.25-YS3A, V2-S3, V2-YS3A	For wire sizes 0.75 to 2mm <sup>2</sup> R2-3SL, RAV2-3SL, RAP2-3SL, VD2-3S, VD2-3.5SS, VD2-3.5S, VDAV2-3.5SS, VDAV2-3.5S	△	
External power supply	Voltage	24VDC ± 10% Ripple voltage 4Vp-p or less	–	–	The A20PB-16RS external power supply and the I/O module power supply are shared.
	Current	90mA (24VDC TYP. all points ON)	–	–	
I/O module power supply	Voltage	15.6 to 27.6VDC	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
	Current	85mA	165mA	○	Because the external power supply and the I/O module power supply are shared, the consumed current is decreased.
External dimensions		50(H) × 177(W) × 66(D) mm	40(H) × 190(W) × 60(D) mm	△	The shape is different.
Installation method		Screw mounted	Screw mounted	×	Because mounting hole size is different, reworking is required.
		Mounted to DIN rail	Mounted to DIN rail	○	The A20PB-16RS can be mounted to the existing DIN rail.
Weight		0.4kg	0.28kg	○	

## (4) Comparisons between AJ55TB2-4T and A20PB-04U

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications		AJ55TB2-4T	A20PB-04U	Compat- ibility	Precautions for replacement
Number of output points		4 points	4 points	○	
Insulation method		External output ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External output ↔ Internal circuit: Not insulated Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulated locations are different.
Output type		Sink type	Sink type	○	
Rated load voltage		12/24VDC	24VDC	△	12VDC cannot be used.*1
Operating load voltage range		10.2 to 30VDC (peak voltage 30VDC)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
Maximum load voltage		0.5A/point 2A/common	0.2A/point 0.8A/common	△	The maximum load current per point has decreased. Check the specifications of the load to be used.
Maximum inrush current		4A, 10ms or less	500mA or lower	△	Inrush current has decreased. Check the specifications of the load to be used.
Leakage current at OFF		0.1mA or lower	0.1mA or lower	○	
Maximum voltage drop at ON		0.9VDC or lower (TYP.) 0.5A 1.5VDC or lower (MAX.) 0.5A	1V or lower	△	Check the specifications of the load to be used.
Response time	OFF → ON	2ms or less	1ms or less	○	
	ON → OFF	2ms or less (resistance load)	1ms or less	○	
Surge suppressor		Zener diode	None	×	The surge suppressor is not built-in.
Common terminal arrangement		4 points per common (2-wire type terminal block)	4 points per common (2-wire type terminal block)	○	
Operation indicator		ON indication (LED)	ON indication (LED)	○	
External wiring method		16-point terminal block (M3 screw) Transmission circuit included	10-point terminal block (M3 screw) Transmission circuit included	△	Wiring must be changed.
Applicable wire size		0.75 to 2mm <sup>2</sup>	0.3 to 1.25mm <sup>2</sup> (when the following applicable crimping terminals are used: 0.75 to 2mm <sup>2</sup> )	△	Existing wires can be used but applicable crimping terminals are different.
Applicable crimping terminal		1.25-3, 1.25-YS3A, 2-S3, 2-YS3A, V1.25-3, V1.25-YS3A, V2-S3, V2-YS3A	For wire sizes 0.75 to 2mm <sup>2</sup> R2-3SL, RAV2-3SL, RAP2-3SL, VD2-3S, VD2-3.5SS, VD2-3.5S, VDAV2-3.5SS, VDAV2-3.5S	△	For details, refer to Section 6.3.
External power supply	Voltage	10.2 to 30VDC	–	–	The A20PB-04U external power supply and the I/O module power supply are shared.
	Current	30mA (24VDC TYP. per 1 common)	–	–	
I/O module power supply	Voltage	15.6 to 27.6VDC	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
	Current	45mA	13mA	○	Because the external power supply and the I/O module power supply are shared, the consumed current is decreased.
External dimensions		50(H) × 82(W) × 66(D) mm	40(H) × 65(W) × 60(D) mm	△	The shape is different.
Installation method	Screw mounted	Screw mounted	Screw mounted	×	Because mounting hole size is different, reworking is required.
	Mounted to DIN rail	Mounted to DIN rail	Mounted to DIN rail	○	The A20PB-04U can be mounted to the existing DIN rail.
Weight		0.2kg	0.09g	○	

\*1 When used on 12VDC, consider the use of an external relay.



## (5) Comparisons between AJ55TB2-8T and A20PB-08U

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications		AJ55TB2-8T	A20PB-08U	Compat- ibility	Precautions for replacement
Number of output points		8 points	8 points	○	
Insulation method		External output ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External output ↔ Internal circuit: Not insulated Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulated locations are different.
Output type		Sink type	Sink type	○	
Rated load voltage		12/24VDC	24VDC	△	12VDC cannot be used.*1
Operating load voltage range		10.2 to 30VDC (peak voltage 30VDC)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
Maximum load voltage		0.5A/point 4A/common	0.2A/point 1.6A/common	△	The maximum load current per point has decreased. Check the specifications of the load to be used.
Maximum inrush current		4A, 10ms or less	500mA or lower	△	Inrush current has decreased. Check the specifications of the load to be used.
Leakage current at OFF		0.1mA or lower	0.1mA or lower	○	
Maximum voltage drop at ON		0.9VDC or lower (TYP.) 0.5A 1.5VDC or lower (MAX.) 0.5A	1V or lower	△	Check the specifications of the load to be used.
Response time	OFF → ON	2ms or less	1ms or less	○	
	ON → OFF	2ms or less (resistance load)	1ms or less	○	
Surge suppressor		Zener diode	None	×	The surge suppressor is not built-in.
Common terminal arrangement		8 points per common (2-wire type terminal block)	8 points per common (2-wire type terminal block)	○	
Operation indicator		ON indication (LED)	ON indication (LED)	○	
External wiring method		24-point terminal block (M3 screw) Transmission circuit included	20-point terminal block (M3 screw) Transmission circuit included	△	
Applicable wire size		0.75 to 2mm <sup>2</sup>	0.3 to 1.25mm <sup>2</sup> (when the following applicable crimping terminals are used: 0.75 to 2mm <sup>2</sup> )	△	Wiring must be changed. Existing wires can be used but applicable crimping terminals are different.
Applicable crimping terminal		1.25-3, 1.25-YS3A, 2-S3, 2-YS3A V1.25-3, V1.25-YS3A, V2-S3, V2-YS3A	For wire sizes 0.75 to 2mm <sup>2</sup> R2-3SL, RAV2-3SL, RAP2-3SL, VD2-3S, VD2-3.5SS, VD2-3.5S, VDAV2-3.5SS, VDAV2-3.5S	△	For details, refer to Section 6.3.
External power supply	Voltage	10.2 to 30VDC	—	—	External power supply for the A20PB-08U is unnecessary.
	Current	30mA (24VDC TYP. per 1 common)	—	—	
I/O module power supply	Voltage	15.6 to 27.6VDC (peak voltage 27.6VDC)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
	Current	55mA	21mA	○	Because the external power supply and the I/O module power supply are shared, the consumed current is decreased.
External dimensions		50(H) × 114(W) × 66(D) mm	40(H) × 100(W) × 60(D) mm	△	The shape is different.
Installation method		Screw mounted	Screw mounted	×	Because mounting hole size is different, reworking is required.
		Mounted to DIN rail	Mounted to DIN rail	○	The A20PB-08U can be mounted to the existing DIN rail.
Weight		0.3kg	0.13g	○	

\*1 When used on 12VDC, consider the use of an external relay.

## (6) Comparisons between AJ55TB2-16T and A20PB-16U

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications		AJ55TB2-16T	A20PB-16U	Compat- ibility	Precautions for replacement
Number of output points		16 points	16 points	○	
Insulation method		External output ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External output ↔ Internal circuit: Not insulated Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulated locations are different.
Output type		Sink type	Sink type	○	
Rated load voltage		12/24VDC	24VDC	△	12VDC cannot be used.*1
Operating load voltage range		10.2 to 30VDC (peak voltage 30VDC)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
Maximum load voltage		0.5A/point 5A/common	0.2A/point 3.2A/common	△	The maximum load current per point has decreased. Check the specifications of the load to be used.
Maximum inrush current		4.0A, 10ms or less	500mA or lower	△	Inrush current has decreased. Check the specifications of the load to be used.
Leakage current at OFF		0.1mA or lower	0.1mA or lower	○	
Maximum voltage drop at ON		0.9VDC or lower (TYP.) 0.5A 1.5VDC or lower (MAX.) 0.5A	1V or lower	△	Check the specifications of the load to be used.
Response time	OFF → ON	2ms or less	1ms or less	○	
	ON → OFF	2ms or less (resistance load)	1ms or less	○	
Surge suppressor		Zener diode	None	×	The surge suppressor is not built-in.
Common terminal arrangement		16 points per common (2-wire type terminal block)	16 points per common (2-wire type terminal block)	○	
Operation indicator		ON indication (LED)	ON indication (LED)	○	
External wiring method		40-point terminal block (M3 screw) Transmission circuit included	30-point terminal block (M3 screw) Transmission circuit included	△	
Applicable wire size		0.75 to 2mm <sup>2</sup>	0.3 to 1.25mm <sup>2</sup> (when the following applicable crimping terminals are used: 0.75 to 2mm <sup>2</sup> )	△	Wiring must be changed. Existing wires can be used but applicable crimping terminals are different.
Applicable crimping terminal		1.25-3, 1.25-YS3A, 2-S3, 2-YS3A, V1.25-3, V1.25-YS3A, V2-S3, V2-YS3A	For wire sizes 0.75 to 2mm <sup>2</sup> R2-3SL, RAV2-3SL, RAP2-3SL, VD2-3S, VD2-3.5SS, VD2-3.5S, VDAV2-3.5SS, VDAV2-3.5S	△	For details, refer to Section 6.3.
External power supply	Voltage	10.2 to 30VDC	–	–	The A20PB-16U external power supply and the I/O module power supply are shared.
	Current	120mA (24VDC TYP. per 1 common)	–	–	
I/O module power supply	Voltage	15.6 to 27.6VDC (peak voltage 27.6VDC)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
	Current	70mA	33mA	○	Because the external power supply and the I/O module power supply are shared, the consumed current is decreased.
External dimensions		50(H) × 177(W) × 66(D) mm	40(H) × 140(W) × 60(D) mm	△	The shape is different.
Installation method		Screw mounted	Screw mounted	×	Because mounting hole size is different, reworking is required.
		Mounted to DIN rail	Mounted to DIN rail	○	The A20PB-16U can be mounted to the existing DIN rail.
Weight		0.4kg	0.18g	○	

\*1 When used on 12VDC, consider the use of an external relay.

## 6.2.3 I/O module specifications comparisons

### (1) Comparisons between AJ55TB32-4DR and A20SB-04U + A20PB-04RS

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications	AJ55TB32-4DR input specifications	A20SB-04U input specifications	Compat- ibility	Precautions for replacement
Number of input points	2 points	4 points	○	
Insulation method	External input ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External input ↔ Internal circuit: Not insulated Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulated locations are different.
Input type	Positive/negative common shared type	Positive common type	△	A negative common type cannot be used.*1
Rated input voltage	24VDC	24VDC	○	
Rated input current	Approx. 7mA	Approx. 7mA	○	
Operating voltage range	21.6 to 26.4VDC (ripple voltage 4Vp-p or less)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
Maximum simultaneous on input point	100%	100%	○	
ON voltage/ON current	14VDC or higher/3.5mA or higher	16VDC or higher/5.5mA or higher	△	ON voltage and ON current are increased.*2
OFF voltage/OFF current	6VDC or lower/1.7mA or lower	8VDC or lower/2mA or lower	△	OFF voltage and OFF current are increased.*2
Input resistance	Approx. 3.3kΩ	Approx. 3.3kΩ	○	
Response time	OFF → ON	10ms or less	○	
	ON → OFF	10ms or less	○	
Common terminal arrangement	2 points per common (3-wire type terminal block)	4 points per common (2-wire type terminal block)	△	To connect an item such as a 3-wire type sensor, an external common terminal block is required.

Specifications		AJ55TB32-4DR output specifications	A20PB-04RS output specifications	Compat- ibility	Precautions for replacement
Number of output points		2 points	4 points	○	
Insulation method		External output ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External output ↔ Internal circuit: Relay Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulation method is different.
Output type		Contact output type	Contact output type	○	
Rated load voltage/current		24VDC 2A (resistance load)/point 240VAC 2A (COSφ=1)/point 4A/common	30VDC 2A (resistance load)/point 220VAC 2A (COSφ=1)/point 1A (induced load)/point	△	The rated load voltage and current are different.
Minimum switching load		5VDC 1mA	0.1VDC 0.1mA (reference value)	△	Check the specifications of the load to be used.
Maximum switching voltage		250VAC 110VDC	250VAC 110VDC	○	
Response time	OFF → ON	10ms or less	10ms or less	○	
	ON → OFF	12ms or less	10ms or less	○	
Life	Mechanical	20 million times or more	20 million times or more	○	
	Electrical	Rated switching voltage/current load 100,000 times or more 200VAC 1.5A, 240VAC 1A (COSφ=0.7) 100,000 times or more 200VAC 1A, 240VAC 0.5A (COSφ=0.35) 100,000 times or more 24VDC 1A, 100VDC 0.1A (L/R=7ms) 100,000 times or more	100,000 times or more	○	
Maximum switching frequency		3,600 times/hour	20 times/minute	△	Maximum switching frequency is different.
Surge suppressor		None	None	-	
Common terminal arrangement		2 points per common (2-wire type terminal block)	All points independent (2-wire type terminal block)	△	Because 2 points per common is changed to all points independent, the wiring is different.

\*1 For the negative common type, use the A20SB-04US.

\*2 Check the specifications of the sensors or switches to be connected to the A20SB-04U.

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications		AJ55TB32-4DR	A20SB-04U	A20PB-04RS	Compat- ibility	Precautions for replacement
Operation indicator		ON indication (LED)	ON indication (LED)		○	
External wiring method		16-point terminal block (M3 screw) Transmission circuit included	10-point terminal block (M3 screw) Transmission circuit included	20-point terminal block (M3 screw) Transmission circuit included	△	Wiring must be changed. Existing wires can be used but applicable crimping terminals are different. For details, refer to Section 6.3.
Applicable wire size		0.75 to 2mm <sup>2</sup>	0.3 to 1.25mm <sup>2</sup> (when the following applicable crimping terminals are used: 0.75 to 2mm <sup>2</sup> )		△	
Applicable crimping terminal		1.25-3, 1.25-YS3A, 2-S3, 2-YS3A V1.25-3, V1.25-YS3A, V2-S3, V2-YS3A	For wire sizes 0.75 to 2mm <sup>2</sup> R2-3SL, RAV2-3SL, RAP2-3SL, VD2-3S, VD2-3.5SS, VD2-3.5S, VDAV2-3.5SS, VDAV2-3.5S		△	
External power supply	Voltage	24VDC ± 10% Ripple voltage 4Vp-p or less	–	–	–	External power supply for the A20SB-04U is unnecessary. The A20PB-04RS external power supply and the I/O module power supply are shared.
	Current	12mA (24VDC TYP. all points ON)	–	–	–	
I/O module power supply	Voltage	15.6 to 27.6VDC	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)		△	Operating voltage range is different.
	Current	40mA	50mA	90mA	△	Because the current consumption has increased, the current capacity must be reviewed.
External dimensions		50(H) × 82(W) × 66(D) mm	40(H) × 65(W) × 60(D) mm	40(H) × 100(W) × 60(D) mm	×	The shape is different. A mounting space for two modules is required.
Installation method		Screw mounted	Screw mounted		×	Because mounting hole size is different, reworking is required.
		Mounted to DIN rail	Mounted to DIN rail		△	The A20SB-04U and A20PB- 04RS can be mounted to the existing DIN rail. Be careful about the mounting dimensions as two modules are required.
Weight		0.2kg	0.09kg	0.14kg	△	The weight is increased.

## (2) Comparisons between AJ55TB32-4DR and A20SB-04US + A20PB-04RS

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications	AJ55TB32-4DR input specifications	A20SB-04US input specifications	Compat-ibility	Precautions for replacement
Number of input points	2 points	4 points	○	
Insulation method	External input ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External input ↔ Internal circuit: Not insulated Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulated locations are different.
Input type	Positive/negative common shared type	Negative common type	△	A positive common type cannot be used.*1
Rated input voltage	24VDC	24VDC	○	
Rated input current	Approx. 7mA	Approx. 7mA	○	
Operating voltage range	21.6 to 26.4VDC (ripple voltage 4Vp-p or less)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
Maximum simultaneous on input point	100%	100%	○	
ON voltage/ON current	14VDC or higher/3.5mA or higher	16VDC or higher/4.5mA or higher	△	ON voltage and ON current are increased.*2
OFF voltage/OFF current	6VDC or lower/1.7mA or lower	6VDC or lower/1mA or lower	△	OFF current is decreased.*2
Input resistance	Approx. 3.3kΩ	Approx. 3.3kΩ	○	
Response time	OFF → ON	10ms or less	○	
	ON → OFF	10ms or less	○	
Common terminal arrangement	2 points per common (3-wire type terminal block)	4 points per common (2-wire type terminal block)	△	To connect an item such as a 3-wire type sensor, an external common terminal block is required.

Specifications		AJ55TB32-4DR output specifications	A20PB-04RS output specifications	Compat- ibility	Precautions for replacement
Number of output points		2 points	4 points	○	
Insulation method		External output ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External output ↔ Internal circuit: Relay Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulation method is different.
Output type		Contact output type	Contact output type	○	
Rated load voltage/current		24VDC 2A (resistance load)/point 240VAC 2A (COSφ=1)/point 4A/common	30VDC 2A (resistance load)/point 220VAC 2A (COSφ=1)/point 1A (induced load)/point	△	The rated load voltage and current are different.
Minimum switching load		5VDC 1mA	0.1VDC 0.1mA (reference value)	△	Check the specifications of the load to be used.
Maximum switching voltage		250VAC 110VDC	250VAC 110VDC	○	
Response time	OFF → ON	10ms or less	10ms or less	○	
	ON → OFF	12ms or less	10ms or less	○	
Life	Mechanical	20 million times or more	20 million times or more	○	
	Electrical	Rated switching voltage/current load 100,000 times or more 200VAC 1.5A, 240VAC 1A (COSφ=0.7) 100,000 times or more 200VAC 1A, 240VAC 0.5A (COSφ=0.35) 100,000 times or more 24VDC 1A, 100VDC 0.1A (L/R=7ms) 100,000 times or more	100,000 times or more	○	
Maximum switching frequency		3,600 times/hour	20 times/minute	△	Maximum switching frequency is different.
Surge suppressor		None	None	-	
Common terminal arrangement		2 points per common (2-wire type terminal block)	All points independent (2-wire type terminal block)	△	Because 2 points per common is changed to all points independent, the wiring is different.

\*1 For the positive common type, use the A20SB-04U.

\*2 Check the specifications of the sensors or switches to be connected to the A20SB-04US.

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications		AJ55TB32-4DR	A20SB-04US	A20PB-04RS	Compat- ibility	Precautions for replacement
Operation indicator		ON indication (LED)	ON indication (LED)		○	
External wiring method		16-point terminal block (M3 screw) Transmission circuit included	10-point terminal block (M3 screw) Transmission circuit included	20-point terminal block (M3 screw) Transmission circuit included	△	Wiring must be changed. Existing wires can be used but applicable crimping terminals are different. For details, refer to Section 6.3.
Applicable wire size		0.75 to 2mm <sup>2</sup>	0.3 to 1.25mm <sup>2</sup> (when the following applicable crimping terminals are used: 0.75 to 2mm <sup>2</sup> )		△	
Applicable crimping terminal		1.25-3, 1.25-YS3A, 2-S3, 2-YS3A V1.25-3, V1.25-YS3A, V2-S3, V2-YS3A	For wire sizes 0.75 to 2mm <sup>2</sup> R2-3SL, RAV2-3SL, RAP2-3SL, VD2-3S, VD2-3.5SS, VD2-3.5S, VDAV2-3.5SS, VDAV2-3.5S		△	
External power supply	Voltage	24VDC ± 10% Ripple voltage 4Vp-p or less	-	-	-	External power supply for the A20SB-04US is unnecessary. The A20PB-04RS external power supply and the I/O module power supply are shared.
	Current	12mA (24VDC TYP. all points ON)	-	-	-	
I/O module power supply	Voltage	15.6 to 27.6VDC (peak voltage 27.6VDC)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)		△	Operating voltage range is different.
	Current	40mA	43mA	90mA	△	Because the current consumption has increased, the current capacity must be reviewed.
External dimensions		50(H) × 82(W) × 66(D) mm	40(H) × 65(W) × 60(D) mm	40(H) × 100(W) × 60(D) mm	×	The shape is different. A mounting space for two modules is required.
Installation method		Screw mounted	Screw mounted		×	Because mounting hole size is different, reworking is required.
		Mounted to DIN rail	Mounted to DIN rail		△	The A20SB-04US and A20PB-04RS can be mounted to the existing DIN rail. Be careful about the mounting dimensions as two modules are required.
Weight		0.2kg	0.09kg	0.14kg	△	The weight is increased.



## (3) Comparisons between AJ55TB32-8DR and A20SB-04U + A20PB-04RS

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications		AJ55TB32-8DR input specifications	A20SB-04U input specifications	Compat- ibility	Precautions for replacement
Number of input points		4 points	4 points	○	
Insulation method		External input ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External input ↔ Internal circuit: Not insulated Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulated locations are different.
Input type		Positive/negative common shared type	Positive common type	△	A negative common type cannot be used.*1
Rated input voltage		24VDC	24VDC	○	
Rated input current		Approx. 7mA	Approx. 7mA	○	
Operating voltage range		21.6 to 26.4VDC (ripple voltage 4Vp-p or less)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
Maximum simultaneous on input point		100%	100%	○	
ON voltage/ON current		14VDC or higher/3.5mA or higher	16VDC or higher/5.5mA or higher	△	ON voltage and ON current are increased.*2
OFF voltage/OFF current		6VDC or lower/1.7mA or lower	8VDC or lower/2mA or lower	△	OFF voltage and OFF current are increased.*2
Input resistance		Approx. 3.3kΩ	Approx. 3.3kΩ	○	
Response time	OFF → ON	10ms or less	1ms or less	○	
	ON → OFF	10ms or less	1ms or less	○	
Common terminal arrangement		4 points per common (3-wire type terminal block)	4 points per common (2-wire type terminal block)	△	To connect an item such as a 3-wire type sensor, an external common terminal block is required.

Specifications		AJ55TB32-8DR output specifications	A20PB-04RS output specifications	Compat- ibility	Precautions for replacement
Number of output points		4 points	4 points	○	
Insulation method		External output ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External output ↔ Internal circuit: Relay Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulation method is different.
Output type		Contact output type	Contact output type	○	
Rated load voltage/current		24VDC 2A (resistance load)/point 240VAC 2A (COSφ=1)/point 8A/common	30VDC 2A (resistance load)/point 220VAC 2A (COSφ=1)/point 1A (induced load)/point	△	The rated load voltage and current are different.
Minimum switching load		5VDC 1mA	0.1VDC 0.1mA (reference value)	△	Check the specifications of the load to be used.
Maximum switching voltage		250VAC 110VDC	250VAC 110VDC	○	
Response time	OFF → ON	10ms or less	10ms or less	○	
	ON → OFF	12ms or less	10ms or less	○	
Life	Mechanical	20 million times or more	20 million times or more	○	
	Electrical	Rated switching voltage/current load 100,000 times or more 200VAC 1.5A, 240VAC 1A (COSφ=0.7) 100,000 times or more 200VAC 1A, 240VAC 0.5A (COSφ=0.35) 100,000 times or more 24VDC 1A, 100VDC 0.1A (L/R=7ms) 100,000 times or more	100,000 times or more	○	
Maximum switching frequency		3,600 times/hour	20 times/minute	△	Maximum switching frequency is different.
Surge suppressor		None	None	-	
Common terminal arrangement		4 points per common (2-wire type terminal block)	All points independent (2-wire type terminal block)	△	Because 4 points per common is changed to all points independent, the wiring is different.

\*1 For the negative common type, use the A20SB-04US.

\*2 Check the specifications of the sensors or switches to be connected to the A20SB-04U.

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications		AJ55TB32-8DR	A20SB-04U	A20PB-04RS	Compat- ibility	Precautions for replace- ment
Operation indicator		ON indication (LED)	ON indication (LED)		○	
External wiring method		24-point terminal block (M3 screw) Transmission circuit included	10-point terminal block (M3 screw) Transmission circuit included	20-point terminal block (M3 screw) Transmission circuit included	△	Wiring must be changed. Existing wires can be used but applicable crimping terminals are different. For details, refer to Section 6.3.
Applicable wire size		0.75 to 2mm <sup>2</sup>	0.3 to 1.25mm <sup>2</sup> (when the following applicable crimping terminals are used: 0.75 to 2mm <sup>2</sup> )		△	
Applicable crimping terminal		1.25-3, 1.25-YS3A, 2-S3, 2-YS3A V1.25-3, V1.25-YS3A, V2-S3, V2-YS3A	For wire sizes 0.75 to 2mm <sup>2</sup> R2-3SL, RAV2-3SL, RAP2-3SL, VD2-3S, VD2-3.5SS, VD2-3.5S, VDAV2-3.5SS, VDAV2-3.5S		△	
External power supply	Voltage	24VDC ± 10% Ripple voltage 4Vp-p or less	–	–	–	External power supply for the A20SB-04U is unnecessary. The A20PB-04RS external power supply and the I/O module power supply are shared.
	Current	23mA (24VDC TYP. all points ON)	–	–	–	
I/O module power supply	Voltage	15.6 to 27.6VDC	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)		△	Operating voltage range is different.
	Current	50mA	50mA	90mA	△	Because the current consumption has increased, the current capacity must be reviewed.
External dimensions		50(H) × 114(W) × 66(D) mm	40(H) × 65(W) × 60(D) mm	40(H) × 100(W) × 60(D) mm	×	The shape is different. A mounting space for two modules is required.
Installation method		Screw mounted	Screw mounted		×	Because mounting hole size is different, reworking is required.
		Mounted to DIN rail	Mounted to DIN rail		△	The A20SB-04U and A20PB- 04RS can be mounted to the existing DIN rail. Be careful about the mounting dimensions as two modules are required.
Weight		0.3kg	0.09kg	0.14kg	○	

## (4) Comparisons between AJ55TB32-8DR and A20SB-04US + A20PB-04RS

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications	AJ55TB32-8DR input specifications	A20SB-04US input specifications	Compat- ibility	Precautions for replacement
Number of input points	4 points	4 points	○	
Insulation method	External input ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External input ↔ Internal circuit: Not insulated Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulated locations are different.
Input type	Positive/negative common shared type	Negative common type	△	A positive common type cannot be used.*1
Rated input voltage	24VDC	24VDC	○	
Rated input current	Approx. 7mA	Approx. 7mA	○	
Operating voltage range	21.6 to 26.4VDC (ripple voltage 4Vp-p or less)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
Maximum simultaneous on input point	100%	100%	○	
ON voltage/ON current	14VDC or higher/3.5mA or higher	16VDC or higher/4.5mA or higher	△	ON voltage and ON current are increased.*2
OFF voltage/OFF current	6VDC or lower/1.7mA or lower	6VDC or lower/1mA or lower	△	OFF current is decreased.*2
Input resistance	Approx. 3.3kΩ	Approx. 3.3kΩ	○	
Response time	OFF → ON	10ms or less	○	
	ON → OFF	10ms or less	○	
Common terminal arrangement	4 points per common (3-wire type terminal block)	4 points per common (2-wire type terminal block)	△	To connect an item such as a 3-wire type sensor, an external common terminal block is required.

Specifications		AJ55TB32-8DR output specifications	A20PB-04RS output specifications	Compat- ibility	Precautions for replacement
Number of output points		4 points	4 points	○	
Insulation method		External output ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External output ↔ Internal circuit: Relay Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulation method is different.
Output type		Contact output type	Contact output type	○	
Rated load voltage/current		24VDC 2A (resistance load)/point 240VAC 2A (COSφ=1)/point 8A/common	30VDC 2A (resistance load)/point 220VAC 2A (COSφ=1)/point 1A (induced load)/point	△	The rated load voltage and current are different.
Minimum switching load		5VDC 1mA	0.1VDC 0.1mA (reference value)	△	Check the specifications of the load to be used.
Maximum switching voltage		250VAC 110VDC	250VAC 110VDC	○	
Response time	OFF → ON	10ms or less	10ms or less	○	
	ON → OFF	12ms or less	10ms or less	○	
Life	Mechanical	20 million times or more	20 million times or more	○	
	Electrical	Rated switching voltage/current load 100,000 times or more 200VAC 1.5A, 240VAC 1A (COSφ=0.7) 100,000 times or more 200VAC 1A, 240VAC 0.5A (COSφ=0.35) 100,000 times or more 24VDC 1A, 100VDC 0.1A (L/R=7ms) 100,000 times or more	100,000 times or more	○	
Maximum switching frequency		3,600 times/hour	20 times/minute	△	Maximum switching frequency is different.
Surge suppressor		None	None	-	
Common terminal arrangement		4 points per common (2-wire type terminal block)	All points independent (2-wire type terminal block)	△	Because 4 points per common is changed to all points independent, the wiring is different.

\*1 For the positive common type, use the A20SB-04U.

\*2 Check the specifications of the sensors or switches to be connected to the A20SB-04US.

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications		AJ55TB32-8DR	A20SB-04US	A20PB-04RS	Compat- ibility	Precautions for replacement
Operation indicator		ON indication (LED)	ON indication (LED)		○	
External wiring method		24-point terminal block (M3 screw) Transmission circuit included	24-point terminal block (M3 screw) Transmission circuit included	20-point terminal block (M3 screw) Transmission circuit included	△	Wiring must be changed. Existing wires can be used but applicable crimping terminals are different. For details, refer to Section 6.3.
Applicable wire size		0.75 to 2mm <sup>2</sup>	0.3 to 1.25mm <sup>2</sup> (when the following applicable crimping terminals are used: 0.75 to 2mm <sup>2</sup> )		△	
Applicable crimping terminal		1.25-3, 1.25-YS3A, 2-S3, 2-YS3A V1.25-3, V1.25-YS3A, V2-S3, V2-YS3A	For wire sizes 0.75 to 2mm <sup>2</sup> R2-3SL, RAV2-3SL, RAP2-3SL, VD2-3S, VD2-3.5SS, VD2-3.5S, VDAV2-3.5SS, VDAV2-3.5S		△	
External power supply	Voltage	24VDC ± 10% Ripple voltage 4Vp-p or less	-	-	-	External power supply for the A20SB-04U is unnecessary. The A20PB-04RS external power supply and the I/O module power supply are shared.
	Current	23mA (24VDC TYP. all points ON)	-	-	-	
I/O module power supply	Voltage	15.6 to 27.6VDC	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)		△	Operating voltage range is different.
	Current	50mA	43mA	90mA	△	Because the current consumption has increased, the current capacity must be reviewed.
External dimensions		50(H) × 114(W) × 66(D) mm	40(H) × 65(W) × 60(D) mm	40(H) × 100(W) × 60(D) mm	×	The shape is different. A mounting space for two modules is required.
Installation method		Screw mounted	Screw mounted		×	Because mounting hole size is different, reworking is required.
		Mounted to DIN rail	Mounted to DIN rail		△	The A20SB-04US and A20PB-04RS can be mounted to the existing DIN rail. Be careful about the mounting dimensions as two modules are required.
Weight		0.3kg	0.09kg	0.14kg	○	

## (5) Comparisons between AJ55TB32-16DR and A20SB-08UD + A20PB-08RS

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications	AJ55TB32-16DR input specifications	A20SB-08UD input specifications	Compat-ibility	Precautions for replacement
Number of input points	8 points	8 points	○	
Insulation method	External input ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External input ↔ Internal circuit: Not insulated Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulated locations are different.
Input type	Positive/negative common shared type	Positive common type	△	A negative common type cannot be used.*1
Rated input voltage	24VDC	24VDC	○	
Rated input current	Approx. 7mA	Approx. 7mA	○	
Operating voltage range	21.6 to 26.4VDC (ripple voltage 4Vp-p or less)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
Maximum simultaneous on input point	100%	100%	○	
ON voltage/ON current	14VDC or higher/3.5mA or higher	16VDC or higher/5.5mA or higher	△	ON voltage and ON current are increased.*2
OFF voltage/OFF current	6VDC or lower/1.7mA or lower	8VDC or lower/2mA or lower	△	OFF voltage and OFF current are increased.*2
Input resistance	Approx. 3.3kΩ	Approx. 3.3kΩ	○	
Response time	OFF → ON	10ms or less	○	
	ON → OFF	10ms or less	○	
Common terminal arrangement	8 points per common (3-wire type terminal block)	8 points per common (3-wire type terminal block)	○	

Specifications	AJ55TB32-16DR output specifications	A20PB-08RS output specifications	Compat-ibility	Precautions for replacement
Number of output points	8 points	8 points	○	
Insulation method	External output ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External output ↔ Internal circuit: Relay Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulation method is different.
Output type	Contact output type	Contact output type	○	
Rated load voltage/current	24VDC 2A (resistance load)/point 240VAC 2A (COSφ=1)/point 8A/common	30VDC 2A (resistance load)/point 220VAC 2A (COSφ=1)/point 1A (induced load)/point	△	The rated load current is different.
Minimum switching load	5VDC 1mA	0.1VDC 0.1mA (reference value)	△	Check the specifications of the load to be used.
Maximum switching voltage	250VAC 110VDC	250VAC 110VDC	○	
Response time	OFF → ON	10ms or less	○	
	ON → OFF	12ms or less	○	
Life	Mechanical	20 million times or more	○	
	Electrical	Rated switching voltage/current load 100,000 times or more 200VAC 1.5A, 240VAC 1A (COSφ=0.7) 100,000 times or more 200VAC 1A, 240VAC 0.5A (COSφ=0.35) 100,000 times or more 24VDC 1A, 100VDC 0.1A (L/R=7ms) 100,000 times or more	100,000 times or more	○
Maximum switching frequency	3,600 times/hour	20 times/minute	△	Maximum switching frequency is different.
Surge suppressor	None	None	—	
Common terminal arrangement	8 points per common (2-wire type terminal block)	All points independent (2-wire type terminal block)	△	Because 8 points per common is changed to all points independent, the wiring is different.

\*1 For the negative common type, use the A20SB-08USD-1.

\*2 Check the specifications of the sensors or switches to be connected to the A20SB-08UD.

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications		AJ55TB32-16DR	A20SB-08UD	A20PB-08RS	Compat- ibility	Precautions for replacement
Operation indicator		ON indication (LED)	ON indication (LED)		○	
External wiring method		40-point terminal block (M3 screw) Transmission circuit included	30-point terminal block (M3 screw) Transmission circuit included	30-point terminal block (M3 screw) Transmission circuit included	△	Wiring must be changed. Existing wires can be used but applicable crimping terminals are different. For details, refer to Section 6.3.
Applicable wire size		0.75 to 2mm <sup>2</sup>	0.3 to 1.25mm <sup>2</sup> (when the following applicable crimping terminals are used: 0.75 to 2mm <sup>2</sup> )		△	
Applicable crimping terminal		1.25-3, 1.25-YS3A, 2-S3, 2-YS3A V1.25-3, V1.25-YS3A, V2-S3, V2-YS3A	For wire sizes 0.75 to 2mm <sup>2</sup> R2-3SL, RAV2-3SL, RAP2-3SL, VD2-3S, VD2-3.5SS, VD2-3.5S, VDAV2-3.5SS, VDAV2-3.5S		△	
External power supply	Voltage	24VDC ± 10% Ripple voltage 4Vp-p or less	-	-	-	External power supply for the A20SB-08UD is unnecessary. The A20PB-08RS external power supply and the I/O module power supply are shared.
	Current	45mA (24VDC TYP. all points ON)	-	-	-	
I/O module power supply	Voltage	15.6 to 27.6VDC	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)		△	Operating voltage range is different.
	Current	70mA	117mA	104mA	△	Because the current consumption has increased, the current capacity must be reviewed.
External dimensions		50(H) × 177(W) × 66(D) mm	40(H) × 140(W) × 60(D) mm	40(H) × 140(W) × 60(D) mm	×	The shape is different. A mounting space for two modules is required.
Installation method		Screw mounted	Screw mounted		×	Because mounting hole size is different, reworking is required.
		Mounted to DIN rail	Mounted to DIN rail		△	The A20SB-08UD and A20PB-08RS can be mounted to the existing DIN rail. Be careful about the mounting dimensions as two modules are required.
Weight		0.4kg	0.18kg	0.2kg	○	



## (6) Comparisons between AJ55TB32-16DR and A20SB-08USD-1 + A20PB-08RS

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications	AJ55TB32-16DR input specifications	A20SB-08USD-1 input specifications	Compat-ibility	Precautions for replacement
Number of input points	8 points	8 points	○	
Insulation method	External input ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External input ↔ Internal circuit: Not insulated Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulated locations are different.
Input type	Positive/negative common shared type	Negative common type	△	A positive common type cannot be used.*1
Rated input voltage	24VDC	24VDC	○	
Rated input current	Approx. 7mA	Approx. 7mA	○	
Operating voltage range	21.6 to 26.4VDC (ripple voltage 4Vp-p or less)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
Maximum simultaneous on input point	100%	100%	○	
ON voltage/ON current	14VDC or higher/3.5mA or higher	16VDC or higher/5.5mA or higher	△	ON voltage and ON current are increased.*2
OFF voltage/OFF current	6VDC or lower/1.7mA or lower	8VDC or lower/2mA or lower	△	OFF voltage and OFF current are increased.*2
Input resistance	Approx. 3.3kΩ	Approx. 3.3kΩ	○	
Response time	OFF → ON	10ms or less	○	
	ON → OFF	10ms or less	○	
Common terminal arrangement	8 points per common (3-wire type terminal block)	8 points per common (3-wire type terminal block)	○	

Specifications	AJ55TB32-16DR output specifications	A20PB-08RS output specifications	Compat-ibility	Precautions for replacement
Number of output points	8 points	8 points	○	
Insulation method	External output ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External output ↔ Internal circuit: Relay Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulation method is different.
Output type	Contact output type	Contact output type	○	
Rated load voltage/current	24VDC 2A (resistance load)/point 240VAC 2A (COSφ=1)/point 8A/common	30VDC 2A (resistance load)/point 220VAC 2A (COSφ=1)/point 1A (induced load)/point	△	The rated load current is different.
Minimum switching load	5VDC 1mA	0.1VDC 0.1mA (reference value)	△	Check the specifications of the load to be used.
Maximum switching voltage	250VAC 110VDC	250VAC 110VDC	○	
Response time	OFF → ON	10ms or less	○	
	ON → OFF	12ms or less	○	
Life	Mechanical	20 million times or more	○	
	Electrical	Rated switching voltage/current load 100,000 times or more 200VAC 1.5A, 240VAC 1A (COSφ=0.7) 100,000 times or more 200VAC 1A, 240VAC 0.5A (COSφ=0.35) 100,000 times or more 24VDC 1A, 100VDC 0.1A (L/R=7ms) 100,000 times or more	100,000 times or more	○
Maximum switching frequency	3,600 times/hour	20 times/minute	△	Maximum switching frequency is different.
Surge suppressor	None	None	-	
Common terminal arrangement	8 points per common (2-wire type terminal block)	All points independent (2-wire type terminal block)	△	Because 8 points per common is changed to all points independent, the wiring is different.

\*1 For the negative common type, use the A20SB-08UD.

\*2 Check the specifications of the sensors or switches to be connected to the A20SB-08USD-1.

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications		AJ55TB32-16DR	A20SB-08USD-1	A20PB-08RS	Compat- ibility	Precautions for replacement
Operation indicator		ON indication (LED)		ON indication (LED)		○
External wiring method		40-point terminal block (M3 screw) Transmission circuit included	30-point terminal block (M3 screw) Transmission circuit included	30-point terminal block (M3 screw) Transmission circuit included	△	Wiring must be changed. Existing wires can be used but applicable crimping terminals are different. For details, refer to Section 6.3.
Applicable wire size		0.75 to 2mm <sup>2</sup>	0.3 to 1.25mm <sup>2</sup> (when the following applicable crimping terminals are used: 0.75 to 2mm <sup>2</sup> )		△	
Applicable crimping terminal		1.25-3, 1.25-YS3A, 2-S3, 2-YS3A V1.25-3, V1.25-YS3A, V2-S3, V2-YS3A	For wire sizes 0.75 to 2mm <sup>2</sup> R2-3SL, RAV2-3SL, RAP2-3SL, VD2-3S, VD2-3.5SS, VD2-3.5S, VDAV2-3.5SS, VDAV2-3.5S		△	
External power supply	Voltage	24VDC ± 10% Ripple voltage 4Vp-p or less	–	–	–	External power supply for the A20SB-08UDS-1 is unnecessary. The A20PB-08RS external power supply and the I/O module power supply are shared.
	Current	45mA (24VDC TYP. all points ON)	–	–	–	
I/O module power supply	Voltage	15.6 to 27.6VDC	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)		△	Operating voltage range is different.
	Current	70mA	117mA	104mA	△	Because the current consumption has increased, the current capacity must be reviewed.
External dimensions		50(H) × 177(W) × 66(D) mm	40(H) × 140(W) × 60(D) mm	40(H) × 140(W) × 60(D) mm	×	The shape is different. A mounting space for two modules is required.
Installation method		Screw mounted	Screw mounted		×	Because mounting hole size is different, reworking is required.
		Mounted to DIN rail	Mounted to DIN rail		△	The A20SB-08USD-1 and A20PB-08RS can be mounted to the existing DIN rail. Be careful about the mounting dimensions as two modules are required.
Weight		0.4kg	0.25kg	0.2kg	△	The weight is increased.

## (7) Comparisons between AJ55TB32-4DT and A20XB-16UD

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications	AJ55TB32-4DT input specifications	A20XB-16UD input specifications	Compat-ibility	Precautions for replacement
Number of input points	2 points	8 points	○	
Insulation method	External input ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External input ↔ Internal circuit: Not insulated Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulated locations are different.
Input type	Positive common type	Positive common type	○	
Rated input voltage	24VDC	24VDC	○	
Rated input current	Approx. 7mA	Approx. 7mA	○	
Operating voltage range	19.2 to 26.4VDC (ripple ratio within 5%)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
Maximum simultaneous on input point	100%	100%	○	
ON voltage/ON current	14VDC or higher/3.5mA or higher	16VDC or higher/5mA or higher	△	ON voltage and ON current are increased.*1
OFF voltage/OFF current	6VDC or lower/1.7mA or lower	8VDC or lower/1.5mA or lower	△	OFF voltage is increased and OFF current is decreased.*1
Input resistance	Approx. 3.3kΩ	Approx. 3.3kΩ	○	
Response time	OFF → ON	10ms or less	○	
	ON → OFF	10ms or less	○	
Common terminal arrangement	2 points per common (3-wire type terminal block)	8 points per common (3-wire type terminal block)	○	

Specifications	AJ55TB32-4DT output specifications	A20XB-16UD output specifications	Compati-bility	Precautions for replacement
Number of output points	2 points	8 points	○	
Insulation method	External output ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External output ↔ Internal circuit: Not insulated Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulated locations are different.
Output type	Sink type	Sink type	○	
Rated load voltage	24VDC	24VDC	○	
Operating load voltage range	19.2 to 26.4VDC (peak voltage 26.4VDC)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
Maximum load current	0.5A/point 1A/common	0.2A/point 1.6A/common	△	The maximum load current per point has decreased. Check the specifications of the load to be used.
Maximum inrush current	4A, 10ms or less	500mA or lower	△	Inrush current is decreased. Check the specifications of the load to be used.
Leakage current at OFF	0.1mA or lower	0.1mA or lower	○	
Maximum voltage drop at ON	0.9VDC or lower (TYP.) 0.5A 1.5VDC or lower (MAX.) 0.5A	1V or lower	△	Check the specifications of the load to be used.
Response time	OFF → ON	2.0ms or less	○	
	ON → OFF	2.0ms or less (resistance load)	○	
External power supply	Voltage	19.2 to 26.4VDC	–	The A20XB-16UD external power supply and the I/O module power supply are shared.
	Current	15mA (24VDC TYP. per common)	–	
Surge suppressor	Zener diode	None	×	The surge suppressor is not built-in.
Common terminal arrangement	2 points per common (2-wire type terminal block)	8 points per common (2-wire type terminal block)	○	

\*1 Check the specifications of the sensors or switches to be connected to the A20XB-16UD.

Specifications		AJ55TB32-4DT	A20XB-16UD	Compat- ibility	Precautions for replacement
Operation indicator		ON indication (LED)	ON indication (LED)	○	
External wiring method		16-point terminal block (M3 screw) Transmission circuit included	40-point terminal block (M3 screw) Transmission circuit included	△	Wiring must be changed.
Applicable wire size		0.75 to 2mm <sup>2</sup>	0.3 to 1.25mm <sup>2</sup>	△	Existing wires can be used but applicable crimping terminals are different.
Applicable crimping terminal		1.25-3, 1.25-YS3A, 2-S3, 2-YS3A V1.25-3, V1.25-YS3A, V2-S3, V2-YS3A	For wire sizes 0.75 to 2mm <sup>2</sup> R2-3SL, RAV2-3SL, RAP2-3SL, VD2-3S, VD2-3.5SS, VD2-3.5S, VDAV2-3.5SS, VDAV2-3.5S	△	For details, refer to Section 6.3.
I/O module power supply	Voltage	15.6 to 27.6VDC	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
	Current	40mA	106mA	△	Because the current consumption has increased, the current capacity must be reviewed.
External dimensions		50(H) × 82(W) × 66(D) mm	40(H) × 190(W) × 60(D) mm	△	The shape is different.
Installation method		Screw mounted	Screw mounted	×	Because mounting hole size is different, reworking is required.
		Mounted to DIN rail	Mounted to DIN rail	○	The A20XB-16UD can be mounted to the existing DIN rail.
Weight		0.2kg	0.3kg	△	The weight is increased.

## (8) Comparisons between AJ55TB32-8DT and A20XB-16UD

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications		AJ55TB32-8DT input specifications	A20XB-16UD input specifications	Compat-ibility	Precautions for replacement
Number of input points		4 points	8 points	○	
Insulation method		External input ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External input ↔ Internal circuit: Not insulated Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulated locations are different.
Input type		Positive common type	Positive common type	○	
Rated input voltage		24VDC	24VDC	○	
Rated input current		Approx. 7mA	Approx. 7mA	○	
Operating voltage range		19.2 to 26.4VDC (ripple ratio within 5%)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
Maximum simultaneous on input point		100%	100%	○	
ON voltage/ON current		14VDC or higher/3.5mA or higher	16VDC or higher/5mA or higher	△	ON voltage and ON current are increased.*1
OFF voltage/OFF current		6VDC or lower/1.7mA or lower	8VDC or lower/1.5mA or lower	△	OFF voltage is increased and OFF current is decreased.*1
Input resistance		Approx. 3.3kΩ	Approx. 3.3kΩ	○	
Response time	OFF → ON	10ms or less	1ms or less	○	
	ON → OFF	10ms or less	1ms or less	○	
Common terminal arrangement		4 points per common (3-wire type terminal block)	8 points per common (3-wire type terminal block)	○	

Specifications		AJ55TB32-8DT output specifications	A20XB-16UD output specifications	Compati-bility	Precautions for replacement
Number of output points		4 points	8 points	○	
Insulation method		External output ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External output ↔ Internal circuit: Not insulated Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulated locations are different.
Output type		Sink type	Sink type	○	
Rated load voltage		24VDC	24VDC	○	
Operating load voltage range		19.2 to 26.4VDC (peak voltage 26.4VDC)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
Maximum load current		0.5A/point 2A/common	0.2A/point 1.6A/common	△	The maximum load current per point has decreased. Check the specifications of the load to be used.
Maximum inrush current		4A, 10ms or less	500mA or lower	△	Inrush current is decreased. Check the specifications of the load to be used.
Leakage current at OFF		0.1mA or lower	0.1mA or lower	○	
Maximum voltage drop at ON		0.9VDC or lower (TYP.) 0.5A 1.5VDC or lower (MAX.) 0.5A	1V or lower	△	Check the specifications of the load to be used.
Response time	OFF → ON	2ms or less	1ms or less	○	
	ON → OFF	2ms or less (resistance load)	1ms or less	○	
External power supply	Voltage	19.2 to 26.4VDC	–	–	The A20XB-16UD external power supply and the I/O module power supply are shared.
	Current	30mA (24VDC TYP. per common)	–	–	
Surge suppressor		Zener diode	None	×	The surge suppressor is not built-in.
Common terminal arrangement		4 points per common (2-wire type terminal block)	8 points per common (2-wire type terminal block)	○	

\*1 Check the specifications of the sensors or switches to be connected to the A20XB-16UD.

Specifications		AJ55TB32-8DT	A20XB-16UD	Compat- ibility	Precautions for replacement
Operation indicator		ON indication (LED)	ON indication (LED)	○	
External wiring method		24-point terminal block (M3 screw) Transmission circuit included	40-point terminal block (M3 screw) Transmission circuit included	△	
Applicable wire size		0.75 to 2mm <sup>2</sup>	0.3 to 1.25mm <sup>2</sup> (when the following applicable crimping terminals are used: 0.75 to 2mm <sup>2</sup> )	△	Wiring must be changed. Existing wires can be used but applicable crimping terminals are different.
Applicable crimping terminal		1.25-3, 1.25-YS3A, 2-S3, 2-YS3A V1.25-3, V1.25-YS3A, V2-S3, V2-YS3A	For wire sizes 0.75 to 2mm <sup>2</sup> R2-3SL, RAV2-3SL, RAP2-3SL, VD2-3S, VD2-3.5SS, VD2-3.5S, VDAV2-3.5SS, VDAV2-3.5S	△	For details, refer to Section 6.3.
I/O module power supply	Voltage	15.6 to 27.6VDC	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
	Current	50mA	106mA	△	Because the current consumption has increased, the current capacity must be reviewed.
External dimensions		50(H) × 114(W) × 66(D) mm	40(H) × 190(W) × 60(D) mm	△	The shape is different.
Installation method		Screw mounted	Screw mounted	×	Because mounting hole size is different, reworking is required.
		Mounted to DIN rail	Mounted to DIN rail	○	The A20XB-16UD can be mounted to the existing DIN rail.
Weight		0.3kg	0.3kg	○	

## (9) Comparisons between AJ55TB32-16DT and A20XB-16UD

○ : Compatible, △ : Partially changed, × : Not compatible

Specifications		AJ55TB32-16DT input specifications	A20XB-16UD input specifications	Compat-ibility	Precautions for replacement
Number of input points		8 points	8 points	○	
Insulation method		External input ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External input ↔ Internal circuit: Not insulated Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulated locations are different.
Input type		Positive common type	Positive common type	○	
Rated input voltage		24VDC	24VDC	○	
Rated input current		Approx. 7mA	Approx. 7mA	○	
Operating voltage range		19.2 to 26.4VDC (ripple ratio within 5%)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
Maximum simultaneous on input point		100%	100%	○	
ON voltage/ON current		14VDC or higher/3.5mA or higher	16VDC or higher/5mA or higher	△	ON voltage and ON current are increased.*1
OFF voltage/OFF current		6VDC or lower/1.7mA or lower	8VDC or lower/1.5mA or lower	△	OFF voltage is increased and OFF current is decreased.*1
Input resistance		Approx. 3.3kΩ	Approx. 3.3kΩ	○	
Response time	OFF → ON	10ms or less	1ms or less	○	
	ON → OFF	10ms or less	1ms or less	○	
Common terminal arrangement		8 points per common (3-wire type terminal block)	8 points per common (3-wire type terminal block)	○	

Specifications		AJ55TB32-16DT output specifications	A20XB-16UD output specifications	Compati-bility	Precautions for replacement
Number of output points		8 points	8 points	○	
Insulation method		External output ↔ Internal circuit: Photocoupler Internal circuit ↔ Transmission circuit: Not insulated	External output ↔ Internal circuit: Not insulated Internal circuit ↔ Transmission circuit: Photocoupler	△	The insulated locations are different.
Output type		Sink type	Sink type	○	
Rated load voltage		24VDC	24VDC	○	
Operating load voltage range		19.2 to 26.4VDC (peak voltage 26.4VDC)	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
Maximum load current		0.5A/point 4A/common	0.2A/point 1.6A/common	△	The maximum load current per point has decreased. Check the specifications of the load to be used.
Maximum inrush current		4A, 10ms or less	500mA or lower	△	Inrush current is decreased. Check the specifications of the load to be used.
Leakage current at OFF		0.1mA or lower	0.1mA or lower	○	
Maximum voltage drop at ON		0.9VDC or lower (TYP.) 0.5A 1.5VDC or lower (MAX.) 0.5A	1V or lower	△	Check the specifications of the load to be used.
Response time	OFF → ON	2ms or less	1ms or less	○	
	ON → OFF	2ms or less (resistance load)	1ms or less	○	
External power supply	Voltage	19.2 to 26.4VDC	–	–	The A20XB-16UD external power supply and the I/O module power supply are shared.
	Current	60mA (24VDC TYP. per common)	–	–	
Surge suppressor		Zener diode	None	×	The surge suppressor is not built-in.
Common terminal arrangement		8 points per common (2-wire type terminal block)	8 points per common (2-wire type terminal block)	○	

\*1 Check the specifications of the sensors or switches to be connected to the A20XB-16UD.


Specifications		AJ55TB32-8DT	A20XB-16UD	Compat- ibility	Precautions for replacement
Operation indicator		ON indication (LED)	ON indication (LED)	○	
External wiring method		40-point terminal block (M3 screw) Transmission circuit included	40-point terminal block (M3 screw) Transmission circuit included	△	
Applicable wire size		0.75 to 2mm <sup>2</sup>	0.3 to 1.25mm <sup>2</sup> (when the following applicable crimping terminals are used: 0.75 to 2mm <sup>2</sup> )	△	Wiring must be changed. Existing wires can be used but applicable crimping terminals are different.
Applicable crimping terminal		1.25-3, 1.25-YS3A, 2-S3, 2-YS3A V1.25-3, V1.25-YS3A, V2-S3, V2-YS3A	For wire sizes 0.75 to 2mm <sup>2</sup> R2-3SL, RAV2-3SL, RAP2-3SL, VD2-3S, VD2-3.5SS, VD2-3.5S, VDAV2-3.5SS, VDAV2-3.5S	△	For details, refer to Section 6.3.
I/O module power supply	Voltage	15.6 to 27.6VDC	21.6 to 27.6VDC (ripple voltage 0.5Vp-p or less)	△	Operating voltage range is different.
	Current	70mA	106mA	△	Because the current consumption has increased, the current capacity must be reviewed.
External dimensions		50(H) × 177(W) × 66(D) mm	40(H) × 190(W) × 60(D) mm	△	The shape is different.
Installation method		Screw mounted	Screw mounted	×	Because mounting hole size is different, reworking is required.
		Mounted to DIN rail	Mounted to DIN rail	○	The A20XB-16UD can be mounted to the existing DIN rail.
Weight		0.4kg	0.3kg	○	




## 6.3 Applicable Crimping Terminal

Applicable crimping terminals are different between MELSEC-I/OLINK and AnyWire.  
 This section describes whether it is necessary or not to change the crimping terminals when the existing external wiring for the MELSEC-I/OLINK is used.

### (1) AnyWire terminal block

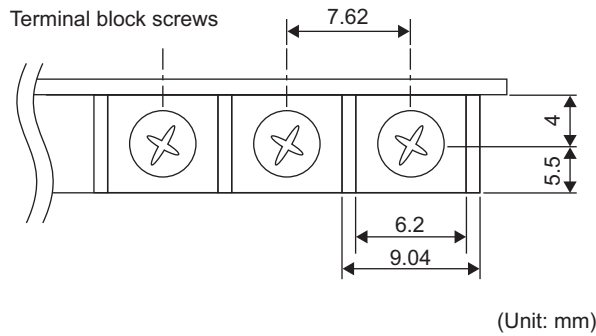

### (2) Crimping terminal sizes

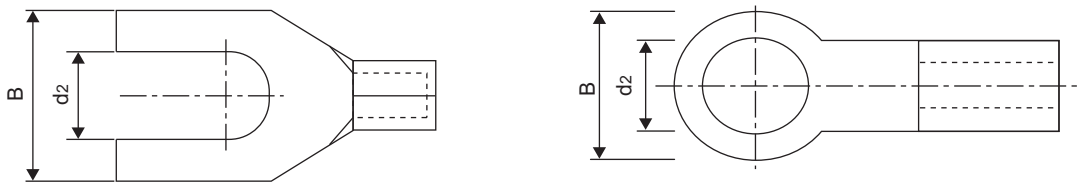

Crimping terminal model	Dimension (mm)		Remarks (restrictions)	
	B	d2		
I/OLINK Applicable crimping terminal	1.25-3	5.5	3.2	• If existing wires are used, the crimping terminals can also be used without changing them.
	V1.25-3			
	1.25-YS3A	6.4	3.7	• If existing wires are used, the crimping terminals must be changed.
	2-S3			
	2-YS3A			
	V1.25-YS3A			
	V2-S3			
V2-YS3A				
AnyWire Applicable crimping terminal	R2-3SL	5.5	3.7	
	RAV2-3SL			
	RAP2-3SL			
	VD2-3S	5.7	3.3	
	VD2-3.5SL			
	VD2-3.5S	3.7		
	VDAV2-3.5SS			
	VDAV2-3.5S			

## APPENDICES

### Appendix 1 External Dimensions

For external dimensions of modules shown in this handbook, refer to the user's manual for each module.

### Appendix 2 Relevant Manuals

#### Appendix 2.1 Replacement handbooks

##### (1) Transition guides

No.	Manual name	Manual number	Target	
			A (large)	AnS (small)
1	MELSEC-A/QnA Series Transition Guide	L08077E	○	×
2	MELSEC-AnS/QnAS (Small Type) Series Transition Guide	L08236E	×	○

##### (2) Transition handbooks

No.	Manual name	Manual number	Target	
			A (large)	AnS (small)
1	Transition from MELSEC-A/QnA (Large Type) Series to Q Series Handbook (Fundamentals)	L08043ENG	○	×
	Transition from MELSEC-AnS/QnAS (Small Type) Series to Q Series Handbook (Fundamentals)	L08219ENG	×	○
	Transition from MELSEC-AnS/QnAS (Small Type) Series to L Series Handbook (Fundamentals)	L08258ENG	×	○
2	Transition from MELSEC-A/QnA (Large Type) Series to Q Series Handbook (Intelligent Function Modules)	L08046ENG	○	×
	Transition from MELSEC-AnS/QnAS (Small Type) Series to Q Series Handbook (Intelligent Function Modules)	L08220ENG	×	○
	Transition from MELSEC-AnS/QnAS (Small Type) Series to L Series Handbook (Intelligent Function Modules)	L08259ENG	×	○
3	Transition from MELSEC-A/QnA (Large Type), AnS/QnAS (Small Type) Series to Q Series Handbook (Network Modules)	L08048ENG	○	○
	Transition from MELSEC-AnS/QnAS (Small Type) Series to L Series Handbook (Network Modules)	L08260ENG	×	○
4	Transition from MELSEC-A/QnA (Large Type), AnS/QnAS (Small Type) Series to Q Series Handbook (Communications)	L08050ENG	○	○
	Transition from MELSEC-AnS/QnAS (Small Type) Series to L Series Handbook (Communications)	L08261ENG	×	○
5	Transition from MELSEC-A0J2H Series to Q Series Handbook	L08060ENG	○	○
6	Transition from MELSECNET/MINI-S3, A2C(I/O) to CC-Link Handbook	L08061ENG	○	○
7	Transition from MELSEC-I/OLINK to CC-Link/LT Handbook	L08062ENG	○	○
8	Transition of CPUs in MELSEC Redundant System Handbook (Transition from Q4ARCPU to QnPRHCPU)	L08117ENG	○	×

**(3) Transition examples manual**

No.	Manual name	Manual number	Target	
			A (large)	AnS (small)
1	MELSEC-A/QnA (Large), AnS/QnAS (Small) Transition Examples	L08121E	○	○

**Appendix 2.2 MELSEC-I/OLINK**

No.	Manual name	Manual number	Model code
1	MELSEC-I/O Link Remote I/O System Master Module type AJ51T64/ A1SJ51T64 User's Manual	IB-66574	13J748

**Appendix 2.3 AnyWire DB A20**

No.	Manual name	Manual number	Model code
1	MELSEC-Q/L AnyWire DB A20 Master Module User's Manual	SH-080968ENG	--



# **WARRANTY**

Please confirm the following product warranty details before using this product.

## **1. Gratis Warranty Term and Gratis Warranty Range**

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi occurs during use of the product within the gratis warranty term, the product shall be repaired at no cost via the sales representative or Mitsubishi Service Company.

However, if repairs are required onsite at domestic or overseas location, expenses to send an engineer will be solely at the customer's discretion. Mitsubishi shall not be held responsible for any re-commissioning, maintenance, or testing on-site that involves replacement of the failed module.

[Gratis Warranty Term]

The gratis warranty term of the product shall be for one year after the date of purchase or delivery to a designated place. Note that after manufacture and shipment from Mitsubishi, the maximum distribution period shall be six (6) months, and the longest gratis warranty term after manufacturing shall be eighteen (18) months. The gratis warranty term of repair parts shall not exceed the gratis warranty term before repairs.

[Gratis Warranty Range]

- (1) The range shall be limited to normal use within the usage state, usage methods and usage environment, etc., which follow the conditions and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.
- (2) Even within the gratis warranty term, repairs shall be charged for in the following cases.
  1. Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by the user's hardware or software design.
  2. Failure caused by unapproved modifications, etc., to the product by the user.
  3. When the Mitsubishi product is assembled into a user's device, Failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
  4. Failure that could have been avoided if consumable parts (battery, backlight, fuse, etc.) designated in the instruction manual had been correctly serviced or replaced.
  5. Failure caused by external irresistible forces such as fires or abnormal voltages, and Failure caused by force majeure such as earthquakes, lightning, wind and water damage.
  6. Failure caused by reasons unpredictable by scientific technology standards at time of shipment from Mitsubishi.
  7. Any other failure found not to be the responsibility of Mitsubishi or that admitted not to be so by the user.

## **2. Onerous repair term after discontinuation of production**

- (1) Mitsubishi shall accept onerous product repairs for seven (7) years after production of the product is discontinued. Discontinuation of production shall be notified with Mitsubishi Technical Bulletins, etc.
- (2) Product supply (including repair parts) is not available after production is discontinued.

## **3. Overseas service**

Overseas, repairs shall be accepted by Mitsubishi's local overseas FA Center. Note that the repair conditions at each FA Center may differ.

## **4. Exclusion of loss in opportunity and secondary loss from warranty liability**

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation to:

- (1) Damages caused by any cause found not to be the responsibility of Mitsubishi.
- (2) Loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products.
- (3) Special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products.
- (4) Replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

## **5. Changes in product specifications**

The specifications given in the catalogs, manuals or technical documents are subject to change without prior notice.

Ethernet is a registered trademark of Fuji Xerox Co., Ltd. in Japan.

Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Unicode is either a registered trademark or a trademark of Unicode, Inc. in the United States and other countries.

The company names, system names and product names mentioned in this manual are either registered trademarks or trademarks of their respective companies.

In some cases, trademark symbols such as "™" or "®" are not specified in this manual.



# Programmable Controller

Country/Region	Sales office	Tel/Fax
USA	MITSUBISHI ELECTRIC AUTOMATION, INC. 500 Corporate Woods Parkway, Vernon Hills, IL 60061, U.S.A.	Tel : +1-847-478-2100 Fax : +1-847-478-2253
Mexico	MITSUBISHI ELECTRIC AUTOMATION, INC. Mexico Branch Mariano Escobedo #69, Col. Zona Industrial, Tlalnepantla Edo. Mexico, C.P.54030	Tel : +52-55-3067-7500
Brazil	MITSUBISHI ELECTRIC DO BRASIL COMÉRCIO E SERVIÇOS LTDA. Avenida Adelino Cardana, 293, 21 andar, Bethaville, Barueri SP, Brazil	Tel : +55-11-4689-3000 Fax : +55-11-4689-3016
Germany	MITSUBISHI ELECTRIC EUROPE B.V. German Branch Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany	Tel : +49-2102-486-0 Fax : +49-2102-486-1120
UK	MITSUBISHI ELECTRIC EUROPE B.V. UK Branch Travellers Lane, Hatfield, Hertfordshire, AL10 8XB, U.K.	Tel : +44-1707-28-8780 Fax : +44-1707-27-8695
Ireland	MITSUBISHI ELECTRIC EUROPE B.V. Irish Branch Westgate Business Park, Ballymount, Dublin 24, Ireland	Tel : +353-1-4198800 Fax : +353-1-4198890
Italy	MITSUBISHI ELECTRIC EUROPE B.V. Italian Branch Centro Direzionale Colleoni-Palazzo Sirio Viale Colleoni 7, 20864 Agrate Brianza(Milano) Italy	Tel : +39-039-60531 Fax : +39-039-6053-312
Spain	MITSUBISHI ELECTRIC EUROPE, B.V. Spanish Branch Carretera de Rubí, 76-80-Apdo. 420, 08190 Sant Cugat del Vallés (Barcelona), Spain	Tel : +34-935-65-3131 Fax : +34-935-89-1579
France	MITSUBISHI ELECTRIC EUROPE B.V. French Branch 25, Boulevard des Bouvets, 92741 Nanterre Cedex, France	Tel : +33-1-55-68-55-68 Fax : +33-1-55-68-57-57
Czech Republic	MITSUBISHI ELECTRIC EUROPE B.V. Czech Branch Avenir Business Park, Radlicka 751/113e, 158 00 Praha5, Czech Republic	Tel : +420-251-551-470 Fax : +420-251-551-471
Poland	MITSUBISHI ELECTRIC EUROPE B.V. Polish Branch ul. Krakowska 50, 32-083 Balice, Poland	Tel : +48-12-347-65-00 Fax : +48-12-630-47-01
Sweden	MITSUBISHI ELECTRIC EUROPE B.V. (Scandinavia) Fjellievägen 8, SE-22736 Lund, Sweden	Tel : +46-8-625-10-00 Fax : +46-46-39-70-18
Russia	MITSUBISHI ELECTRIC (RUSSIA) LLC St. Petersburg Branch Piskarevsky pr. 2, bld 2, lit "Sch", BC "Benuea", office 720; 195027 St. Petersburg, Russia	Tel : +7-812-633-3497 Fax : +7-812-633-3499
Turkey	MITSUBISHI ELECTRIC TURKEY A.Ş Ümraniye Branch Serifali Mah. Kale Sok. No:41 34775 Umraniye - Istanbul, Turkey	Tel : +90-216-969-2500 Fax : +90-216-526-3995
UAE	MITSUBISHI ELECTRIC EUROPE B.V. Dubai Branch Dubai Silicon Oasis, P.O.BOX 341241, Dubai, U.A.E.	Tel : +971-4-3724716 Fax : +971-4-3724721
South Africa	ADROIT TECHNOLOGIES 20 Waterford Office Park, 189 Witkoppen Road, Fourways, South Africa	Tel : +27-11-658-8100 Fax : +27-11-658-8101
China	MITSUBISHI ELECTRIC AUTOMATION (CHINA) LTD. No.1386 Hongqiao Road, Mitsubishi Electric Automation Center, Shanghai, China	Tel : +86-21-2322-3030 Fax : +86-21-2322-3000
Taiwan	SETSUYO ENTERPRISE CO., LTD. 6F, No.105, Wugong 3rd Road, Wugu District, New Taipei City 24889, Taiwan	Tel : +886-2-2299-2499 Fax : +886-2-2299-2509
Korea	MITSUBISHI ELECTRIC AUTOMATION KOREA CO., LTD. 7F-9F, Gangseo Hangang Xi-tower A, 401, Yangcheon-ro, Gangseo-Gu, Seoul 07528, Korea	Tel : +82-2-3660-9530 Fax : +82-2-3664-8372
Singapore	MITSUBISHI ELECTRIC ASIA PTE. LTD. 307, Alexandra Road, Mitsubishi Electric Building, Singapore 159943	Tel : +65-6473-2308 Fax : +65-6476-7439
Thailand	MITSUBISHI ELECTRIC FACTORY AUTOMATION (THAILAND) CO., LTD. 12th Floor, SV.City Building, Office Tower 1, No. 896/19 and 20 Rama 3 Road, Kwaeng Bangpongpan, Khet Yannawa, Bangkok 10120, Thailand	Tel : +66-2682-6522 Fax : +66-2682-6020
Vietnam	MITSUBISHI ELECTRIC VIETNAM COMPANY LIMITED Hanoi Branch 6th Floor, Detech Tower, 8 Ton That Thuyet Street, My Dinh 2 Ward, Nam Tu Liem District, Hanoi, Vietnam	Tel : +84-4-3937-8075 Fax : +84-4-3937-8076
Malaysia	MITSUBISHI ELECTRIC SALES MALAYSIA SDN. BHD. Lot 11, Jalan 219, 46100 Petaling Jaya, Selangor Darul Ehsan, Malaysia	Tel : +60-3-7626-5000 Fax : +60-3-7658-3544
Indonesia	PT. MITSUBISHI ELECTRIC INDONESIA Gedung Jaya 11th Floor, JL. MH. Thamrin No.12, Jakarta Pusat 10340, Indonesia	Tel : +62-21-3192-6461 Fax : +62-21-3192-3942
India	MITSUBISHI ELECTRIC INDIA PVT. LTD. Pune Branch Emerald House, EL-3, J Block, M.I.D.C., Bhosari, Pune-411026, Maharashtra, India	Tel : +91-20-2710-2000 Fax : +91-20-2710-2100
Australia	MITSUBISHI ELECTRIC AUSTRALIA PTY. LTD. 348 Victoria Road, P.O. Box 11, Rydalmere, N.S.W 2116, Australia	Tel : +61-2-9684-7777 Fax : +61-2-9684-7245

## MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BUILDING, 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN  
NAGOYA WORKS: 1-14, YADA-MINAMI 5, HIGASHI-KU, NAGOYA, JAPAN