

Mitsubishi Electric Safety Programmable Controller MELSEC iQ-R Series

Machinery Directive (2006/42/EC) and UKCA Marking Compliance

Thank you for purchasing the Mitsubishi Electric safety programmable controller MELSEC iQ-R series. The MELSEC iQ-R series programmable controller is suitable for establishing safety functions for general industrial machinery, and complies with the Machinery Directive (2006/42/EC) and the UKCA marking.

Before using this product, please read this manual (translation of the original instructions), the relevant manuals, and the safety standards carefully and pay full attention to safety to handle the product correctly.

1. Safety Programmable Controller Product List

Table with 3 columns: Product name, Model, Description. Lists Safety CPU (RnSFCPU) and Safety function module (R6SFM).

2. Relevant Manuals

The following lists the safety programmable controller relevant manuals. The following are translated from the original Japanese version. For the Japanese version, please consult your local Mitsubishi representative.

Table with 2 columns: Manual name, Manual number. Lists MELSEC iQ-R Module Configuration Manual, MELSEC iQ-R CPU Module User's Manual (Startup), MELSEC iQ-R CPU Module User's Manual (Application), MELSEC iQ-R Programming Manual (Program Design), MELSEC iQ-R Programming Manual (CPU Module Instructions, Standard Functions/Function Blocks), GX Works3 Operating Manual, MELSEC iQ-R Safety Application Guide.

3. Safety Standards

Use the product according to the following safety standards.


Table with 2 columns: Region, Safety standards. Lists International and Europe standards including IEC61508, IEC62061, ISO13849, IEC61131-2, IEC61010-2-201, EN61000-6-2, EN61000-6-4, EN61326-3-1, EN62061, EN ISO13849, EN61131-2, EN61010-2-201, EN61000-6-2, EN61000-6-4.

4. Installation

When installing a programmable controller to a control panel or similar, fully consider its operability, maintainability, and environmental resistance. For details, refer to the following:
- MELSEC iQ-R Module Configuration Manual.

Installation position


Keep the clearances shown below between the top/bottom faces of the modules and the control panel or other parts so that good ventilation is ensured and the modules can be easily replaced.

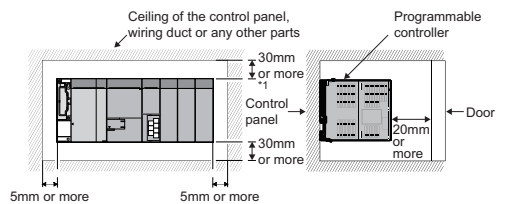


*1 A clearance required when the wiring duct is 50mm or less in height. A 40mm or more clearance is required when the wiring duct is longer.

Installation orientations

Install a programmable controller in the following orientation to ensure good ventilation for heat release.

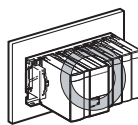

Do not install a programmable controller in the following orientations.

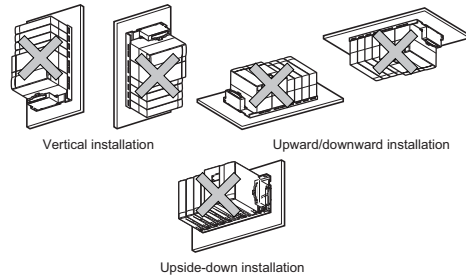


Installation precautions

Install a base unit on a flat surface. If the surface is not flat, the printed circuit board is distorted, resulting in malfunction of the modules mounted.

If there is a vibration source, such as an electromagnetic contactor or no fuse breaker, separate the control panel or keep enough clearance from the vibration source to install the programmable controller. In addition, keep the clearances shown below between the programmable controller and devices (such as contactors and relays) to avoid being affected by radiated electromagnetic interference or heat.

- In front of the programmable controller: 100mm or more
On the right or left of the programmable controller: 50mm or more

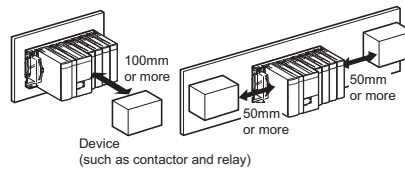

When installing a programmable controller to a control panel, do not mount any module in the rightmost slot of the base unit. Before uninstalling, remove the module mounted in the rightmost slot of the base unit.

5. Module Status after Power-on and LED Indication

A Safety CPU and safety function module performs initial processing (such as self-diagnostics) after the system is powered on or the Safety CPU is reset. The LEDs of each module indicate the module operating status after initial processing.

Table with 3 columns: No., Name, Application. Lists LEDs including READY LED, ERROR LED, PROGRAM RUN LED, USER LED, BATTERY LED, and CARD READY LED with their respective status indicators.

Table with 3 columns: No., Name, Application. Lists CARD ACCESS LED and FUNCTION LED.

Safety function module

Table with 3 columns: No., Name, Application. Lists LEDs for READY LED, ERROR LED, PROGRAM RUN LED, SAFETY COM RUN LED, SAFETY COM ERR LED, and TEST LED.

6. Precautions for Use

Users must prove that their entire safety system complies with the safety standards and the Machinery Directive. The third-party certification organization will validate the safety of product for the entire safety system, including a safety programmable controller and safety components.

For details on the safety system, refer to the following:
- "System using the Safety CPU" in the MELSEC iQ-R Module Configuration Manual

Calculation of the target failure measure (PFDavg/PFH)

To establish a safety system, calculate the target failure measure (PFDavg/PFH) for each safety application (safety function) based on the PFDavg/PFH values of the safety programmable controller and connected safety components. The target failure measure (PFDavg/PFH) is the reliability target value for each Safety Integrity Level (SIL) defined in IEC61508 and can be calculated by the following formula. If the safety loop goes through the same safety device multiple times, add PFDavg/PFH for each safety device one time only.

PFDavg/PFH = (PFDavg/PFH of A) + (PFDavg/PFH of B) + (PFDavg/PFH of C) + (PFDavg/PFH of D) + (PFDavg/PFH of E)

Table with 2 columns: Variable, Definition. Lists variables A through E representing different safety components.

*1 When performing safety communications between Safety CPUs on the safety loop, add PFDavg/PFH for the Safety CPU (paired with the safety function module).

*2 When using an extension module (NZZEXSS2-8TE) connected to the main module (NZZGFSS2-32D) as a safety remote I/O module, perform the calculation using the PFDavg/PFH of "Main module connected to Extension module (NZZGFSS2-32D + NZZEXSS2-8TE)". For the PFDavg/PFH, refer to the manual for the safety remote I/O module (IB-0800542).

*3 For PFDavg/PFH, refer to the manuals for the safety components used.

*4 When the safety application includes multiple safety switches or safety actuators, perform the calculation by adding all PFDavg/PFH for the safety remote I/O module, safety input device, and safety output device connected to the device. PFDavg and PFH of the Safety CPU (paired with the safety function module) are as follows.

Table with 3 columns: Module, Proof test interval, 2 years, 5 years, 10 years, 20 years. Lists PFDavg and PFH values for Safety CPU and Safety function module.

Table with 3 columns: Module, Proof test interval, 2 years, 5 years, 10 years, 20 years. Lists PFH values for Safety CPU and Safety function module.

*5 Each proof test interval is the duration of product use.
*6 When the third and fourth digits of the 16-digit production information of the Safety CPU and the safety function module are "03" or earlier and "04" or earlier respectively, each PFDavg is as follows:
- 2 years: 1.16 x 10^-6, 5 years: 3.70 x 10^-6, 10 years: 1.02 x 10^-5, 20 years: 3.14 x 10^-5

When the third and fourth digits of the 16-digit production information of the Safety CPU and the safety function module are "04" and "05" respectively, each PFDavg is as follows:
- 2 years: 6.05 x 10^-6, 5 years: 2.15 x 10^-5, 10 years: 6.43 x 10^-5, 20 years: 2.14 x 10^-4

*7 When the third and fourth digits of the 16-digit production information of the Safety CPU and the safety function module are "03" or earlier and "04" or earlier respectively, each PFH is as follows:
- 2 years: 5.35 x 10^-6, 5 years: 5.41 x 10^-6, 10 years: 5.50 x 10^-6, 20 years: 5.69 x 10^-6

When the third and fourth digits of the 16-digit production information of the Safety CPU and the safety function module are "04" and "05" respectively, each PFH is as follows:
- 2 years: 7.88 x 10^-10, 5 years: 1.23 x 10^-9, 10 years: 1.96 x 10^-9, 20 years: 3.42 x 10^-9

*8 The PFDavg and PFH values are for when the module is used at the ambient temperature of 40°C.

PL evaluation described in ISO 13849-1

For the PL evaluation described in ISO 13849-1, use the MTTFD (mean time to dangerous failure) and the DCavg (average diagnostic coverage) listed in the following table.

Table with 3 columns: Module, MTTFD, DCavg. Lists Safety CPU (paired with safety function module) with MTTFD of 110 years and DCavg of 95.2%.

*1 When the third and fourth digits of the 16-digit production information of the Safety CPU and the safety function module are "03" or earlier and "04" or earlier respectively, each value is as follows:
- MTTFD: 109 years, DCavg: 95.4%
When the third and fourth digits of the 16-digit production information of the Safety CPU and the safety function module are "04" and "05" respectively, each value is as follows:
- MTTFD: 110 years, DCavg: 95.3%

*2 The values are for when the module is used at the ambient temperature of 40°C.

7. Safety Response Time

The safety response time is the maximum value of the time from when a safety input of the remote station (safety station) or remote device station (safety station) turns off to when a safety output of the remote station (safety station) or remote device station (safety station) turns off (including an error detection time).

The safety response time is calculated by the following formula. Remote station (safety station) or remote device station (safety station) on the input side -> Master station (safety station) -> Remote station (safety station) or remote device station (safety station) on the output side (SCmst x 3) + (SRref x 4.5) + (RM x 2) + SRin + SRout + (n x 4)

SCmst: Safety cycle time*1 of the master station (safety station)

SRref: Safety remote station refresh response processing time*2

RM: Safety refresh monitoring time*3

SRin: Safety remote station input response time*2

SRout: Safety remote station output response time*2

n: Lower value of either 1) or 2) below

1) RM - TMmst - (TMmst + 2) + a

2) RM - (TMmst + 2) - TMmst + c

a: TMmst - b (This formula is valid when the station that is set to "Active" is a MELSEC product supporting CC-Link IE TSN or CC-Link IE Field Network. In other cases, a is 0.)

b: A value that is rounded up the calculation result of "TMmst + 2" to the nearest multiple of the safety cycle time*4

c: TMmst - d (This formula is valid when the station that is set to "Passive" is a MELSEC product supporting CC-Link IE TSN or CC-Link IE Field Network. In other cases, c is 0.)

d: A value that is rounded up the calculation result of "TMmst + 2" to the nearest multiple of the safety remote station refresh response processing time*5

TMmst: Transmission interval monitoring time*3 of the master station (safety station)

TMrm: Transmission interval monitoring time*3 of the remote station (safety station) or remote device station (safety station)

*1 For the safety cycle time, refer to the following:
- MELSEC iQ-R CPU Module User's Manual (Application)

*2 For details, refer to the following:
- Manual for the remote station (safety station) or remote device station (safety station) used

*3 For details, refer to the following:
- MELSEC iQ-R CC-Link IE TSN User's Manual (Application)

*4 A sample calculation of b:
When the transmission interval monitoring time is 24ms and the safety cycle time is 10ms, the result is 20. (The value is rounded up the calculation result (24 + 2 = 26) to the nearest multiple of 10.)

*5 A sample calculation of d:
When the transmission interval monitoring time is 24ms and the safety remote station refresh response processing time is 2ms, the result is 12. (The calculation result (24 - 2 = 22) is the multiple of 2.)

For details on the Safety CPU and safety function module, refer to the following after reading this manual:
- "PART 5 WHEN USING THE SAFETY CPU" in the MELSEC iQ-R CPU Module User's Manual (Application)

8. EU Declaration of Conformity

EU Declaration of Conformity form for Mitsubishi Electric. Includes manufacturer information, product details, and a table of applicable standards (EMC Directive, Machinery Directive, RoHS Directive).

9. UK Declaration of Conformity

UK Declaration of Conformity form for Mitsubishi Electric. Includes manufacturer information, product details, and a table of applicable standards (Electromagnetic Compatibility Regulations 2016, Supply of Machinery (Safety) Regulations 2008).

Appendix List of type name to declare

Table listing type names and serial numbers for various Mitsubishi Electric safety controller models (R0SFCPU, R120SFCPU, etc.).

Appendix List of type name to declare

Table listing type names and serial numbers for various Mitsubishi Electric safety controller models (R0SFCPU, R120SFCPU, etc.).