



DLP™ Projector

MODEL

UD740U


Controlling the projector using a personal computer

This projector can be controlled by connecting a personal computer with RS-232C terminal.

PC-controllable functions:

- Turning the power ON or OFF
- Changing input signals
- Inputting commands by pressing the buttons on the control panel and remote control
- Menu setting

Connection

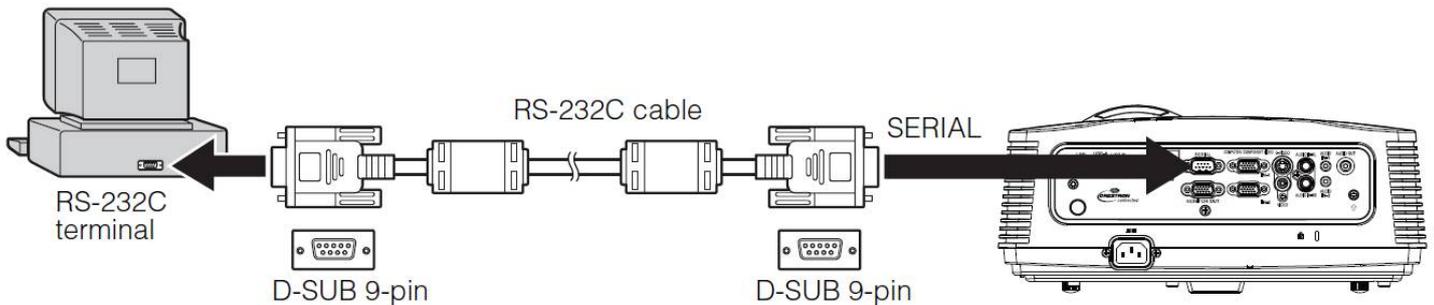


Important:

- Connect the computer with the projector on a one-to-one basis.
- Make sure that your computer and projector are turned off before connection.
- Boot up the computer first, and then plug the power cord of the projector.
(If you do not follow this instruction, the Com port may not function.)
- Adapters may be necessary depending on the PC connected to this projector. Contact your dealer for details.

1. Interface

1.1 Pin assignment of SERIAL terminal (D-SUB 9-pin)

Pin	Description	Pin	Description
1	NC	2	RXD
3	TXD	4	NC
5	GND	6	NC
7	RTS	8	CTS
9	NC		

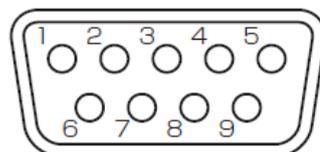

1.2 Communications format

PROTOCOL	RS-232C
BAUD RATE	9600 [bps]
DATA LENGTH	8 [bits]
PARITY BIT	NONE
STOP BIT	1 [bit]
FLOW CONTROL	NONE

This projector uses RXD, TXD and GND lines for RS-232C control.

2. Control command configuration


The command consists of the address code, function code, data code, ACK/NAK, and end code. The length of the command varies among the functions.

	Address code	Function code	Data code	ACK/NAK	End code
ASCII	'30h' '30h'	Function	Data	'3Ah' '4Eh'	'0Dh'
Character	00	Function	Data	:N	↵

- [Address code] Fixed to 00. ('30h' '30h' in the ASCII code)
- [Function code] Code unique to each control operation.
- [Data code] Data (value) unique to each control operation (Not always indicated.)
- [ACK/NAK] Code indicating the NAK return as described below
Fixed to :N ('3Ah' '4Eh' in the ASCII code. Not added to ACK.)
- [End code] Fixed to ↵. ('0Dh' in the ASCII code)

3. Control sequence

Computer Projector

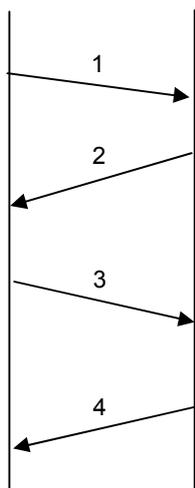

	Sequence	Note
1	Send the command from the personal computer to the projector.	
2	The projector will send a return command after it receives an end code.	If the projector does not receive commands normally, that is, if the projector is not connected physically or unable to receive commands, it does not send out a return command. The projector sends out a return command within one second at the latest. When the received command cannot be executed, NAK is returned (as described below).
3	The personal computer checks the command and confirms if the sent command has been received or not.	
4	Use the check command to see if the projector has executed the command.	This projector sends various codes other than the return code. When having a control sequence by RS-232C, reject other codes from the personal computer.

- NAK return
In the following cases, the projector returns the command with “:N” added.
 - (1) Though the command sent from the computer is received by the projector successfully, it cannot be executed because the projector is in the operation prohibition state.
 - (2) The data length of the sent command is incorrect or the command is invalid.
- When a command is sent out during the following operations, it may not be executed.
 - (1) During signal switching
 - (2) In the process of the auto position
 - (3) After the power is turned on.
The projector receives no commands for about 20 seconds (or for 2 minutes at the longest if the lamp does not light up promptly as the life is expiring). In this case, the projector returns the received command with NAK added.
- The return command is sent out within 1 second at the latest.
- When sending commands successively, wait to receive the return command of the current command before sending a next command.
- The projector may not receive a command when the splash screen is being displayed immediately after turning on the power. Use command “00r10” to cancel the splash screen.
- While using the LAN terminals, the LAN functions take precedence.
- For the LAN terminals, the same commands as those for connecting with the TCP/IP (port number 63007) are available. Note, however, that the response becomes slightly slower than when using the RS-232C terminals. For the use of LAN terminals, see page 10.

[Example 1] Turning ON the power. (Values enclosed in quotation marks are ASCII codes.):


Command sent from the PC	Status code returned from the projector	Description
'30' '30' '21' '0D' 00! ↵		Command for POWER ON
	'30' '30' '21' '0D' 00! ↵	Command receipt confirmation (Command echo back)

[Example 2] Selecting VIDEO as the input signal during auto positioning (Values enclosed in quotation marks are ASCII codes.):


Command sent from the PC	Status code returned from the projector	Description
'30' '30' '5F' '76' '31' 00_v1 ↵		(During auto positioning) Command for selecting VIDEO as the input signal is sent out.
	'30' '30' '5F' '76' '31' '3A' '4E' 00_v1:N ↵	The command is received by the projector but cannot be executed. (NAK return)

- The flowchart on the next page shows the recommended operating sequence for your reference to create a program.

[RS-232C control flowchart]

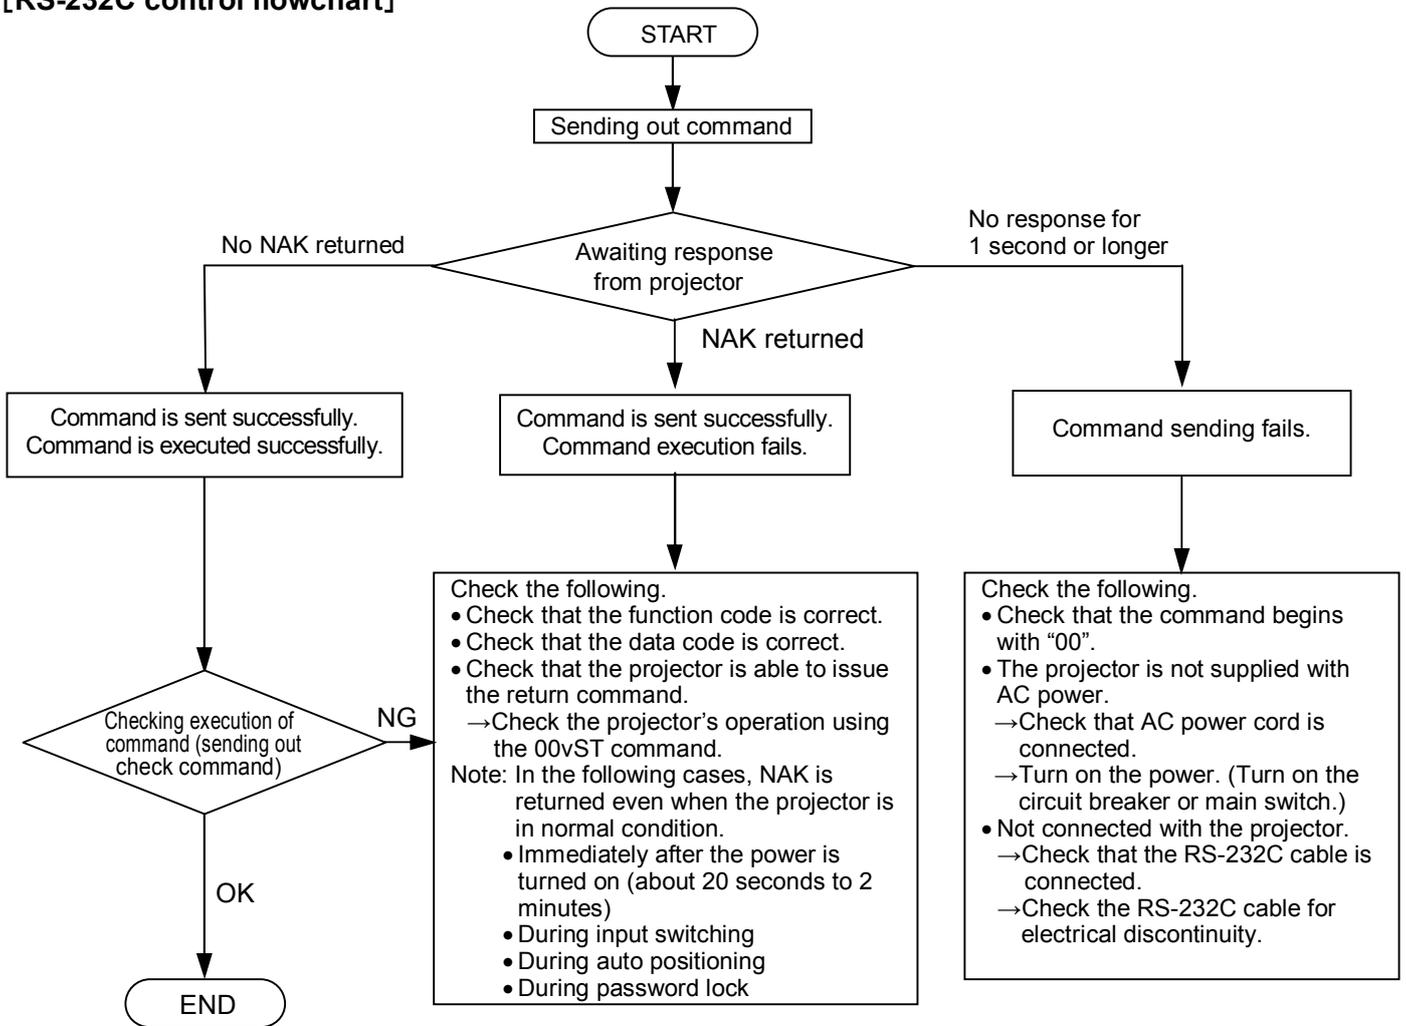

[Method of checking state of projector]

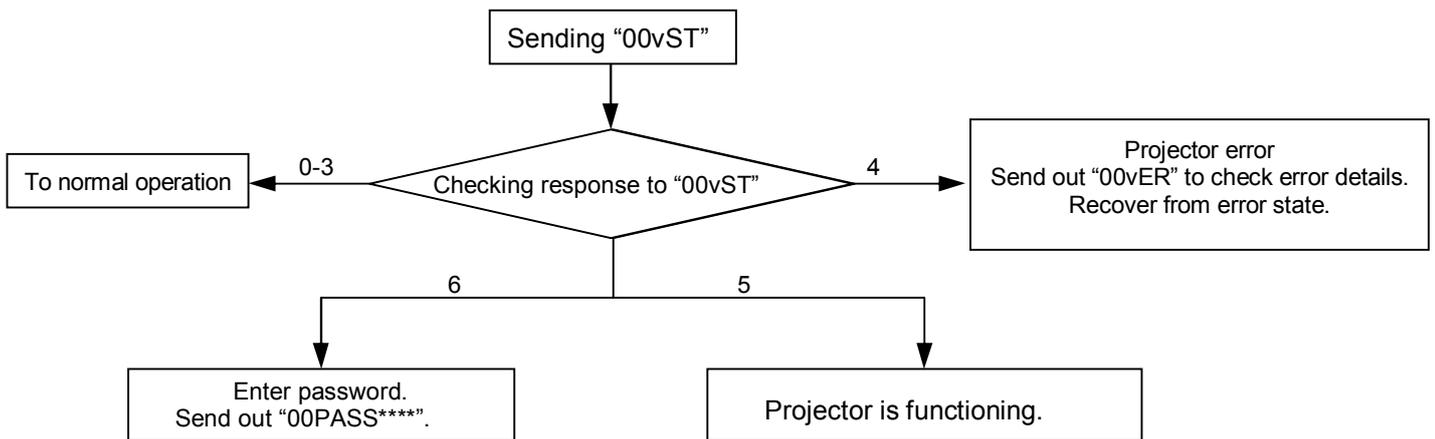

[Compatibility with the former models]

To use the RS-232C commands designed for the former models of Mitsubishi projector, by inputting "00COMMAND0", the projector responds in the same way as the former models. (No NAK is returned.) (For the recommended procedure to use the former command systems, see "Controlling the projector using a personal computer" for FL7000U.)

ITEM	Function		Data
	Character	ASCII	
Changing the RS-232C command system	COMMAND	43h 4Fh 4Dh 4Dh 41h 4Eh 44h	0 (Former command system), 1 (New command system)

4. Command list

4.1 Operation commands

The operation commands are used for the basic operation setting of this projector. They may not be executed while the signals are changed. The operation commands have no data codes. (When the commands for input select are sent while the splash screen is being displayed, the splash screen is only canceled.)

ITEM	Function		Note
	Character	ASCII	
POWER ON	!	21h	This command is invalid for 1 minute after the power is turned off.
POWER OFF	"	22h	This command is invalid for 1 minute after the power is turned on.
INPUT COMPUTER 1	_r1	5Fh 72h 31h	This command will not be executed in Stand-by mode or when the MUTE is executed.
INPUT COMPUTER 2	_r2	5Fh 72h 32h	This command will not be executed in Stand-by mode or when the MUTE is executed.
INPUT VIDEO	_v1	5Fh 76h 31h	This command will not be executed in Stand-by mode or when the MUTE is executed.
INPUT S-VIDEO	_v2	5Fh 76h 32h	This command will not be executed in Stand-by mode or when the MUTE is executed.
INPUT HDMI	_d1	5Fh 64h 31h	This command will not be executed in Stand-by mode or when the MUTE is executed.
INPUT PC LESS PRESENTATION	_s1	5Fh 73h 31h	This command will not be executed in Stand-by mode or when the MUTE is executed.
INPUT USB DISPLAY	_s2	5Fh 73h 32h	This command will not be executed in Stand-by mode or when the MUTE is executed.
INPUT LAN DISPLAY	_n1	5Fh 6Eh 31h	This command will not be executed in Stand-by mode or when the MUTE is executed.

[Example] When setting the input signal to COMPUTER 1. (Values enclosed in quotation marks are ASCII codes.):

Command sent from the PC, etc.	Status code returned from the projector	Description
'30' '30' '5F' '72' '31' '0D' 00_r1 ↵		Command for setting the input signal to COMPUTER 1
	'30' '30' '5F' '72' '31' '0D' 00_r1 ↵	Command receipt confirmation (Command echo back)

4.2 Reading command diagram

The projectors operating status, such as POWER-ON/OFF and the currently selected input terminal, etc. can be monitored.

ITEM	Character		ASCII	
	Function	Data (Receive)	Function	Data (Receive)
POWER ON	vP	1	76h 50h	31h
POWER OFF	vP	0	76h 50h	30h
INPUT COMPUTER 1	vl	r1	76h 49h	72h 31h
INPUT COMPUTER 2	vl	r2	76h 49h	72h 32h
INPUT VIDEO	vl	v1	76h 49h	76h 31h
INPUT S-VIDEO	vl	v2	76h 49h	76h 32h
INPUT HDMI	vl	d1	76h 49h	64h 31h
INPUT PC LESS PRESENTATION	vl	s1	76h 49h	73h 31h
INPUT USB DISPLAY	vl	s2	76h 49h	73h 32h
INPUT LAN DISPLAY	vl	n1	76h 49h	6Eh 31h
POWER ON/OFF IMPOSSIBLE	vPK	0	76h 50h 4Bh	30h
POWER ON/OFF POSSIBLE	vPK	1	76h 50h 4Bh	31h
NO SIGNAL SUPPLIED	vSM	0	76h 53h 4Dh	30h
SIGNAL SUPPLIED	vSM	1	76h 53h 4Dh	31h

Use the following commands to obtain the values of the items in the INFORMATION menu.

ITEM	Function		Data (Receive)
	Character	ASCII	
LAMP TIME (LOW)	vLE	76h 4Ch 45h	hhhhmm
RESOLUTION	vRESO	76h 52h 45h 53h 4Fh	HHHHxVVVV

“hhhh” and “mm” represent hours and minutes respectively.

“HHHH” and “VVVV” represent the horizontal and vertical resolutions respectively.

Use the following commands to obtain other information.

ITEM	Function		Data (Receive)
	Character	ASCII	
Model name	vMDL	76h 4Dh 44h 4Ch	***** (within 16 characters)
Projector status	vST	76h 53h 54h	0 (Stand-by mode), 1 (Within 1 minute after POWER-ON (warm-up mode)), 2 (POWER-ON mode (including state of warning)), 3 (Cooling mode), 4 (Abnormal state (including shutdown due to an error)), 5 (State of functioning (menu display, dialog display, AV MUTE, MAGNIFY, FREEZE, etc.)), 6 (Awaiting password entry)
Error status	vER	76h 45h 52h	Reading out error data (3 digits, hexadecimal numbers, total 9 bits) (MSB) xb1, xb2... xb8, xb9, 0, 0, 0 (LSB) xb1: Fan error xb2: Lamp error (The lamp goes out or does not light.) xb3: Lamp warning 1 (The lamp life has expired.) xb4: Lamp warning 2 (The lamp life is expiring.) xb5: Temperature error xb6: The temperature warning is being indicated. xb7: Lamp cover open error xb8: Fixed to 0. xb9: States of other component abnormality

The PC sends the command without attaching the data code to it. On the other hand, the projector attaches to the received command its current operating status as the data code and send it back to the PC.

[Example] When checking the currently selected input terminal (when the IMPUT VIDEO is being selected).
(Values enclosed in quotation marks are ASCII codes.):

Command sent from the PC, etc.	Status code returned from the projector	Description
'30' '30' '76' '49' '0D' 00vl 		Command for checking the input terminal
	'30' '30' '76' '49' '76' '31' '0D' 00vlv1 	Check result (VIDEO)

4.3 Remote commands (Not executable in stand-by mode. When the remote commands are sent while the splash screen is being displayed, the splash screen is only canceled.)

The remote commands allow the computer to control the projector in the same way as by the remote control. (Some operations cannot be controlled.) The remote commands have no data codes.

Button's name on remote	Function	
	Character	ASCII
+/VOLUME	r06	72h 30h 36h
-/VOLUME	r07	72h 30h 37h
KEystone	r43	72h 34h 33h
MAGNIFY	r02	72h 30h 32h
AV MUTE	ra6	72h 61h 36h
	r53	72h 35h 33h
	r2b	72h 32h 62h
	r4f	72h 34h 66h
	r59	72h 35h 39h
MENU	r54	72h 35h 34h
ENTER	r10	72h 31h 30h
AUTO POSITION	r09	72h 30h 39h
FREEZE	ra4	72h 61h 34h
ASPECT	re2	72h 65h 32h
USB DEVICE UNPLUG	rb5	72h 62h 35h
3D	r57	72h 35h 37h
EFFICIENT MODE	ra8	72h 61h 38h

[Example] When displaying the MENU selection bar. (Values enclosed in quotation marks are ASCII codes.):

Command sent from the PC, etc.	Status code returned from the projector	Description
'30' '30' '72' '35' '34' '0D' 00r54 ↵		Command operating the same as the MENU button
	'30' '30' '72' '35' '34' '0D' 00r54 ↵	Command receipt confirmation (Command echo back)

4.4 Direct commands (Not executable in stand-by mode. Possible only to read during muting.)

The direct commands are used to numerically adjust the volume and keystone.

When the computer sends the command without adding the setting value, the projector returns the received command with the current setting value added as a data code.

ITEM	Function		Data
	Character	ASCII	
VOLUME	VL	56h 4Ch	00-21
KEystone (vertical)	KS	4Bh 53h	±20

How to set the value

Use the character or ASCII code as shown below to set the value.

Character	+	-	0	1	2	3	4	5	6	7	8	9
ASCII	'2Bh'	'2Dh'	'30h'	'31h'	'32h'	'33h'	'34h'	'35h'	'36h'	'37h'	'38h'	'39h'

[Example 1] When setting the volume to 15. (Values enclosed in quotation marks are ASCII codes.):

Command sent from the PC, etc.	Status code returned from the projector	Description
'30' '30' '56' '4C' '31' '35' '0D' 00VL15 ↵		Command for setting the volume
	'30' '30' '56' '4C' '31' '35' '0D' 00VL15 ↵	Command receipt confirmation (Command echo back)

4.5 Function commands (Not executable in stand-by mode. When the mute commands are sent while the splash screen is being displayed, the splash screen is only canceled.)

The mute commands are used for the mute setting of this projector with the 0 (HEX: 30h) and 1 (HEX: 31h).

ITEM	Function		Data
	Character	ASCII	
AV MUTE	MUTE	4Dh 55h 54h 45h	0(OFF), 1(ON)
FREEZE	FRZ	46h 52h 5Ah	0(OFF), 1(ON)
MAGNIFY	MGNFY	4Dh 47h 4Eh 46h 59h	0(OFF), 1(ON)

4.6 Menu setting commands (Not executable in stand-by mode. Possible only to read during muting.)

The menu setting commands are used for the menu setting of this projector. If the personal computer sends the command without attaching the data code, the projector attaches to the received command its current setting value as the data code and send it back to the PC.

ITEM	Function		Data
	Character	ASCII	
Image	IMG	49h 4Dh 47h	0 (Auto), 1 (Theater), 2 (Presentation), 3 (Standard), 4 (Black Board), 5 (White Board), 6 (User)
Brightness	QQ	51h 51h	±30
Contrast	PP	50h 50h	±30
Color Temp.	A	41h	1 (Mid), 2 (High), 3 (Low), 4 (User)
Aspect Ratio	SC	53h 43h	0 (Normal), 1 (16:9), 2 (Native), 3 (Full)
3D	TDM	54h 44h 4Dh	0 (Off), 1 (Auto) ^{*1} , 2 (Side by Side), 3 (Top and Bottom), 4 (Frame Sequential)
3D Sync Invert	TDS	54h 44h 53h	0 (Off), 1 (On)
Color	T	54h	±10
Sharpness	R	52h	±05
Tint	S	53h	±10

*1 "Auto" can be enabled for 3D option when the signal is from the HDMI terminal.

ITEM	Function		Data
	Character	ASCII	
Audio Input	AUDIO	41h 55h 44h 49h 4Fh	0 (Auto), 1 (Audio1), 2 (Audio2), 3 (Audio3), 4 (Mix)
Lamp Mode	LM	4Ch 4Dh	0 (Standard), 1 (Low)
Standby Mode	STBY	53h 54h 42h 59h	0 (LAN), 1 (Low), 2 (Speaker Out), 3 (Monitor Out)
Menu Position	MP	4Dh 50h	0 (Upper Left), 1 (Upper Right), 2 (Center), 3 (Lower Left), 4 (Lower Right)
Image Reverse	IR	49h 52h	0 (Off), 1 (Mirror), 2 (Invert), 3 (Mirror Invert)
Auto Keystone	AKS	41h 4Bh 53h	0 (Off), 1 (On)
Test Pattern	TP	54h 50h	0 (Off), 1 (Cross Hatch), 2 (White), 3 (Black)
Language	LG	4Ch 47h	00:Japanese, 01:English, 02:Spanish, 03:Germany, 04:French, 05:Italian, 06:Chinese, 07:Korean, 08:Russian, 09:Portuguese, 11:Swedish, 12:Polish, 13:Hungarian, 18:Arabic, 19:Turkish, 20:Thai, 21:Indonesian, 22:Malay
Reset All	RSTALL	52h 53h 54h 41h 4Ch 4Ch	
Password Lock	PSLOCK****	50h 53h 4Ch 4Fh 43h 4Bh	**** is a 4-digit password comprised of any figures 1 to 4.
Video Signal (VIDEO only)	VS	56h 53h	0 (Auto), 1 (NTSC), 2 (PAL), 3 (SECAM), 4 (4.43NTSC), 5 (PAL-M), 6 (PAL-N), 7 (PAL-60)
Closed Caption	CC	43h 43h	0 (Off), 1 (CC1), 2 (CC2), 3 (CC3), 4 (CC4), 5 (T1), 6 (T2)

- Some commands are not executed depending on the input signal. The operational restrictions same as those on the menu setting are applied. Refer to “Menu operation” in the User Manual for more details. How to set the value.

How to set the value

Use the character or ASCII code as shown below to set the value.

Character	+	-	0	1	2	3	4	5	6	7	8	9
ASCII	'2Bh'	'2Dh'	'30h'	'31h'	'32h'	'33h'	'34h'	'35h'	'36h'	'37h'	'38h'	'39h'

[Example 1] When setting the Contrast to +10. (Values enclosed in quotation marks are ASCII codes.):

Command sent from the PC, etc.	Status code returned from the projector	Description
'30' '30' '50' '50' '2B' '31' '30' '0D' 00PP+10		Command for setting the picture control
	'30' '30' '50' '50h' '2B' '31' '30' '0D' 00PP+10	Command receipt confirmation (Command echo back)

[Example 2] When setting the 3D to Side by Side. (Values enclosed in quotation marks are ASCII codes.):

Command sent from the PC, etc.	Status code returned from the projector	Description
'30' '30' '54' '44' '4D' '32' '0D' 00TDM2		Command for setting the 3D to Side by Side
	'30' '30' '41' '50' '4F' '4E' '31' '0D' 00TDM2	Command receipt confirmation (Command echo back)

[Example 3] When checking the TINT setting (when the TINT is set to +10). (Values enclosed in quotation marks are ASCII codes.):

Command sent from the PC, etc.	Status code returned from the projector	Description
'30' '30' '53' '0D' 00S		Command for checking the TINT setting
	'30' '30' '53' '2B' '31' '30' '0D' 00S+10	Check result (+10)

4.7 Password lock commands

The password lock commands control the password lock. The password lock enabling or disabling command is sent with a 4-digit password comprised of any figures 1 to 4 added to the end of the data code. When the password lock is enabled successfully, the projector sends a return command comprising the data code, password. When enabling the password lock fails, it sends a return command with “:N” at the end. There is no reconfirmation of the password.

ITEM	Function		Data
	Character	ASCII	
Password Lock enabling	PSLOCK****	50h 53h 4Ch 4Fh 43h 4Bh	**** is a 4-digit password comprised of any figures 1 to 4.

[Example] When enabling the password lock. (In the case that the password is 1234):


Command sent from the PC, etc.	Status code returned from the projector	Description
'30' '30' '50' '53' '4C' '4F' '43' '4B' '31' '32' '33' '34' '0D' 00PSLOCK1234 		Command for enabling the password Lock
	'30' '30' '50' '53' '4C' '4F' '43' '4B' '31' '32' '33' '34' '0D' 00PSLOCK1234 	Response informing that the projector succeeded in enabling the password lock

5. Execution procedure of RS-232C commands via LAN

When the RS-232C command is executed via LAN, a 32-byte connection certification data must be added before the RS-232C command.

To create a 32-byte certification data, following information and procedure are required.

- Random character string for creating the certification data that is acquired from the projector (8 characters).
 - Network password of the projector (1 to 32 characters).
 - MD5 hash calculation.
- Based on the above, the execution procedures to connect to the projector and send the RS-232C commands are described below.
 1. Connect to Port 63007 of the projector from the PC as a TCP/IP client.
 2. After completing the connection, send the acquisition request for the certification data (“\$AK [↵]”) from the PC to the projector.
 3. Acquire “\$AK***** [↵]” on the PC as the response of the request sent in Step 2. (*****: Random character string for creating the certification data)
 4. Create the data for the certification on the PC.
 - Create the key of the certification data by linking the data acquired in Step 3 with the network character string.
For example, when the random character string is 12345678 and the password is ABCD, the key of the certification data is 12345678ABCD (character string in ASCII code).
 - Run MD5 hash on the key of the certification data.
 - Create the certification data by converting the hash-calculated 16-byte data into the ASCII code character string.
Example:
Calculation result: [4f][3c][5d][a1][7b][4f][b5][ed][2c][99][4e][bb][f6][57][67][54] (hexadecimal numeral)
Certification data: 4f 3c 5d a1 7b 4f b5 ed 2c 99 4e bb f6 57 67 54 (character string in ASCII code)
 5. Send the RS-232C command with the certification data from the PC to the projector.
Example:
To send the PON command (00! [↵]) using the certification data created in Step 4:
4f3c5da17b4fb5ed2c994ebbf657675400! [↵]
 6. Receive the response from the projector on the PC.
Response data has the following patterns.
Normal: 00! [↵] (Parameter is added depending on the command.)
Error in the certification data: PRV=ERRA [↵]
Command error: 00!:N [↵]

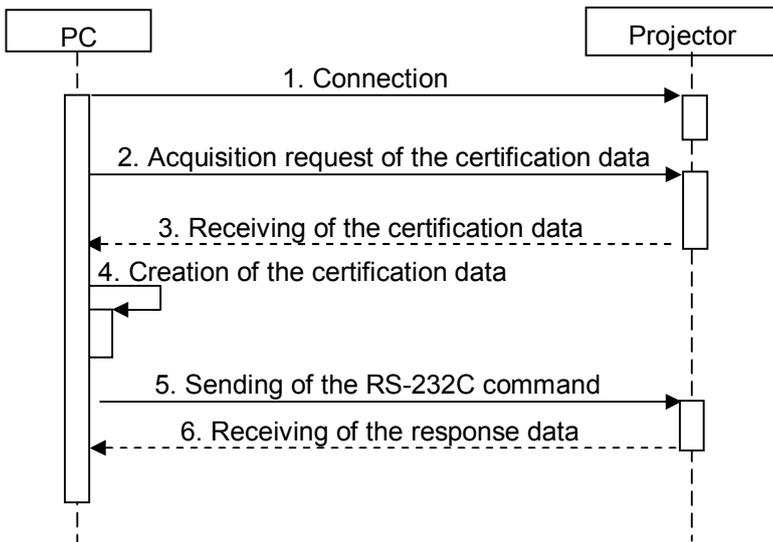

You can change the password using the NETWORK PASSWORD in the NETWORK menu.

The default password is “admin.”

When you use a LAN function, set the Standby Mode to “LAN”, “Speaker Out” or “Monitor Out”.

Refer to the operation manual of the projector for setting the Standby Mode.