

ATTACHMENT (for 5.7", 8.4", 10.4") (for GOT2000/GOT1000 Series)

User's Manual

GT15-70ATT-98 GT15-70ATT-87 GT15-60ATT-97 GT15-60ATT-96 GT15-60ATT-87 GT15-60ATT-77 GT15-50ATT-95W GT15-50ATT-85

Thank you for choosing Mitsubishi Electric Graphic Operation

Prior to use, please read both this manual and detailed manual thoroughly to fully understand the product.

MODEL	GT15-ATT-U	
MODEL CODE	1D7M02	
IB(NA)-0800296-J(2307)MEE		

© 2004 MITSUBISHI ELECTRIC CORPORATION

(Always read these precautions before using this equipment.) Before using this product, please read this manual and the relevant

manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly. The precautions given in this manual are concerned with this prod-

In this manual, the safety precautions are ranked as "DANGER" and

"CAUTION"



Indicates that incorrect handling may cause **WARNING** hazardous conditions, resulting in death or

always forward it to the end user

(2) GT15-70ATT-87

GT15-70ATT-87 311 (12.2)

(3) GT15-50ATT-95W, GT15-50ATT-85

Indicates that incorrect handling may cause Azardous conditions, resulting in medium or slight personal injury or physical damage.

Note that the A CAUTION level may lead to a serious accident

according to the circumstances.

Always follow the precautions of both levels because they are important to personal safety. Please save this manual to make it accessible when required and

ISAFETY PRECAUTIONSI

Product Components

The attachment consists of the following items.

Referenced Standard: GB/T15969.2 (Requirement of Chinese standardized law)

[INSTALLATION PRECAUTIONS]

[DISPOSAL PRECAUTIONS]

Dispose of this product as industrial waste.

Manual name

GT16 User's Manual (Hardware) GT15 User's Manual

⚠ CAUTION

When mounting the attachment to the control panel, tighten clamp screws in the specified torque range so that it will be securely fixed.

Failure to do so may cause the attachment to drop from the

Loose tightening may cause the GOT to drop from the Overtightening may damage and drop screws and/or GOT, causing the GOT to drop off, fail or malfunction.

When mounting the GOT to the attachment, tighten clamp screws in the range of 0.36 to 0.48N•m so that it will be securely

⚠ CAUTION

Manuals

(Sold separately

For the latest e-Manuals and PDF manuals, consult your local

Manual number

(Type code)

(1D7MJ5)

SH-080928ENG

SH-080528ENG

The following shows manuals relevant to this product.

Model	Product	Quantity
GT15-70ATT-98	Attachment	1
G115-70A11-96	Clamp screw (M4x8mm)	4
GT15-70ATT-87	Attachment	1
GT15-60ATT-97	Attachment	1
GT15-60ATT-96 GT15-60ATT-87 GT15-60ATT-77	Clamp screw (M4x8mm)	4
GT15-50ATT-95W GT15-50ATT-85	Attachment	1

1. Overview

This User's Manual describes the GOT2000/GOT1000 series panel fixing attachment (hereafter abbreviated as the attachment).

The attachment is used for replacing the products listed in the table below with the GOT2000 series or GOT1000 series. Use of the attachment eliminates the need for additional machining of the control panel or similar enclosure. There are the following attachment types.

Refer to the following manuals for the applicable GOT.
GOT2000 Series User's Manual (Hardware)

·GT16 User's Manual (Hardware) ·GT15 User's Manual

OTTO COOL S Mariada			
Product	Model	Description	
Attachment	GT15-70ATT-98	For replacing GT168□, GT158□, A985GOT *1	
	GT15-70ATT-87	For replacing A870GOT-SWS/ TWS or A8GT-70GOT-TB/TW/ SB/SW	
	GT15-60ATT-97	For replacing GT167□, GT157□, or A97□GOT	
	GT15-60ATT-96	For replacing A960GOT	
	GT15-60ATT-87	For replacing A870GOT-EWS, A8GT-70GOT-EB/EW, A77GOT- EL, or A77GOT-EL-S5/S3	
	GT15-60ATT-77	For replacing A77GOT-CL, A77GOT-CL-S5/S3, A77GOT-L, or A77GOT-L-S5/S3	
	GT15-50ATT-95W	For replacing A956WGOT, F940WGOT	
	GT15-50ATT-85	For replacing A85□GOT	

*1 The GP250□ and GP260□ manufactured by SCHNEIDER

2. Specifications

The following table indicates the performance specifications of the attachment.

The general specifications of the attachment are the same as those of the GOT.

For the general specifications of the GOT, refer to the user's manual of the GOT for which the attachment is to be used.

After replacement, GOT with the attachment is IP4X-rated but


not IP67F-rated (waterproof and dustproof).

			' '	
	Specifications			
Item	GT15-	GT15-	GT15-	GT15-
	70ATT-98	60ATT-97	60ATT-96	70ATT-87
Nounting panel nickness	2 to 3 mm (0.08 to 0.12 inch)			
Veight	0.29(0.64)	0.40(0.88)	0.24(0.53)	0.12(0.26)
				Unit: kg (lb)

		0		
	Specifications			
Item	GT15- 60ATT-87	GT15- 50ATT-85	GT15- 50ATT- 95W	GT15- 60ATT-77
Mounting panel thickness	2 to 3 mm (0.08 to 0.12 inch)			
Weight	0.25(0.55)	0.11(0.24)	0.17(0.37)	0.34(0.75)

3. Part Names and External Dimensions

(1) GT15-70ATT-98, GT15-60ATT-97, GT15-60ATT-96, GT15-60ATT-87, GT15-60ATT-77

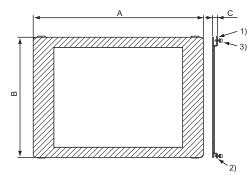

Model name	Α	В	С
GT15-70ATT-98	314 (12.4)	240 (9.4)	8.5 (0.3)
GT15-60ATT-97	300 (11.8)	212 (8.3)	8.5 (0.3)
GT15-60ATT-96	270 (10.6)	195 (7.7)	8.5 (0.3)
GT15-60ATT-87	278 (10.9)	195 (7.7)	8.5 (0.3)
GT15-60ATT-77	313 (12.3)	195 (7.7)	8.5 (0.3)

Unit: mm (inch)

No.	Name	Description
1	Upper hook	Hook for hanging the attachment on the control panel upper part.
2	Lower hook	Hook for hanging the attachment on the control panel lower part.
3	Clamp screw	Screw for fixing the attachment to the control panel (M4x8mm)

222 (8.7)

5.5 (0.2)

137 (5.4) GT15-50ATT-95W 216 (8.1) 2.6 (0.1) GT15-50ATT-85 194 (7.6) 137 (5.4) 2.6 (0.1)

Unit: mm (inch


4. Installation Procedure

(1) GT15-70ATT-98, GT15-60ATT-97, GT15-60ATT-96, GT15-60ATT-87, GT15-60ATT-77


The following figures show an example of the GT15-60ATT-97

Follow the same procedure for installing the other models.


1) The model is indicated on the attachment. The upper part of the attachment has the model indication. (Example of model indication)

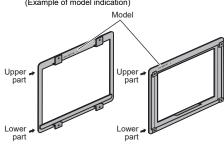

2) Hang the two upper hooks on the upper part over the mounting holes in the control panel Refer to the figure shown in 1).

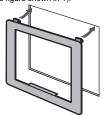


3) While lifting the attachment upward, hang the two lower hooks on the lower part of the control panel.

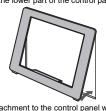

4) Fix the attachment to the control panel with four clamp screws in the torque range of 0.2 to 0.28N•m.



5) Place the GOT into the attachment from the front, and fix it by tightening the mounting screws included with the GOT in the torque range of 0.36 to 0.48N•m.

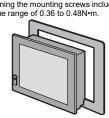


(2) GT15-70ATT-87, GT15-50ATT-95W, GT15-50ATT-85

The following figures show an example of the GT15-70ATT-87 Follow the same procedure for installing the other models

1) The model is indicated on the attachment

The position of the model indication does not affect the performance of the attachment. (Example of model indication)

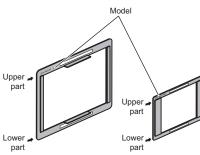


2) Remove two-sided tapes from the rear face of the




If the control panel is dirty, the attachment might fall,

causing an injury.

Wipe the control panel, and then install the attachment.

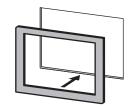

4) Place the GOT into the attachment from the front, and fix it by tightening the mounting screws included with the GOT in the torque range of 0.36 to 0.48N·m.

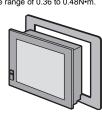

Mitsubishi Electric will not be held liable for damage caused by Mitsubishi Electric Will not be neld liable for damage caused by factors found not to be the cause of Mitsubishi Electric; machine damage or lost profits caused by faults in the Mitsubishi Electric products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi Electric; damages to products other than Mitsubishi Electric products; and to other duties.

↑ For safe use

This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to

numan life.

Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi Electric.

This product has been manufactured under strict quality control. However, when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.

Sales office/Tel

Americas

Mitsubish Electric Automation, Inc.
500 Corporate Woods Parkway, Vernon Hills, IL 60061, U.S.A.
Tei: +1.487478-2100

Mitsubishi Electric do Brasil Comercio e Servicos Ltda.
Avenda Adelino Cardana, 293, 21 andar, Bethaville, Barueri SP, Brazil
Tei: +55-11-4689-3000

:l: -44-1717/-25-orov itsubishi Electric Europe B.V. Italian Branch entro Direzionale Colleoni - Palazzo Sirio, Viale Colleoni 7, 20864 Agrate Brianza (MB), Italy

Mitsubishi Electric Europe B.V. Spanish Branch Carretera de Rubi, 76-80-Apdo. 420, E-08190 Sant Cugat del Valles (Barcelona), Spair Tel: +34-935-65-3131

Mitsubishi Electric Europe B.V. French Branch 25, Boulevard des Bouvets, 92741 Nanterre Cedex, France Tel: +33-1-55-68-55-68

Mitsubishi Electric Europe B.V. Czech Branch

Pekarska 621/7, 155 00 Tel: +420-255 719 200

Mitsubishi Electric Turkey A.S. Umraniye Branch Serifali Mahallesi Nutuk Sokak No:5, TR-34775 Umraniye / Istanbul, Turkey Tel: +90-216-526-3990

Mitsubishi Electric Europe B.V. Polish Branch ul. Krakowska 48, 32-083 Balice, Poland Tel: +48-12-347-65-00

Adroit Technologies 20 Waterford Office Park, 189 Witkoppen Road, Fourways, South Africa Tel: +27-11-658-8100 Asia-Pacific

Mitsubishi Electric Automation (China) Ltd.
Mitsubishi Electric Automation Center, No.1386 Hongqiao Road, Shanghai, China
Tel: +86-21-2322-3030

SETSUYO ENTERPRISE CO., LTD.
6F, No.105, Wugong 3rd Road, Wugu District, New Taipei City 24889, Taiwar Tel: +886-2-2299-2499

Milsubishi Electric Automation Korea Co., Ltd.
7F to 9F, Gangseo Hangang Xi-tower A, 401, Yangcheon-ro, Gangseo-Gu, Seoul 07528, Korea
Tel: +822-3660-0569

Mitsubishi Electric Asia Pte. Ltd. 307 Alexandra Road, Mitsubishi Electric Building, Singapore 159943 Tel: +65-6473-2308

Mitsubishi Electric Factory Automation (Thailand) Co., Ltd. 12th Floor, SV.City Building, Office Tower 1, No. 896/19 and 20 Rama 3 Road, Kwaeng Bangpongpang, Khet Yannawa, Bangkok 10120, Thailand Tel: +66-2682-6522 to 31

PT. Mistubis Electric Indonesia Gedung Jaya 8th Floor, J.L. MH. Thamrin No.12, Jakarta Pusat 10340, Indonesia Tel: +62-21 3192-6461

Missubshi Electric Vietnam Company Limited 11th & 12th Floor, Viettel Tower B, 285 Cach Mang Thang 8 Street, Ward 12, District 10, Ho Chi Minh City, Vietnam. Tel: +84-28-3910-5945

Mitsubishi Electric India Pvt. Ltd. Pune Branch Emerald House, EL-3, J Block, M.I.D.C., Bhosari, Pune - 411026, Maharashtra, India Tel: +91-20-2710-2000 MITSUBISHI ELECTRIC AUSTRALIA PTY, LTD.
348 Victoria Road, P.O. Box 11, Rydalmere, N.S.W 2116, Australia Tel: +61-2-9694-7777

MITSUBISHI ELECTRIC CORPORATION

When exported from Japan, this manual does not require application to the Ministry of Economy. Trade and Industry for service transaction permission.

Specifications subject to change without notice Printed in Japan, July 2023.